

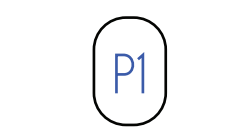
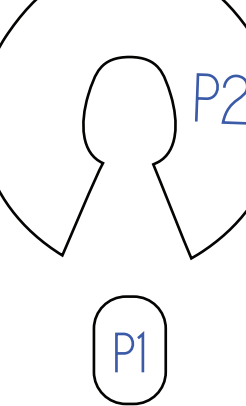
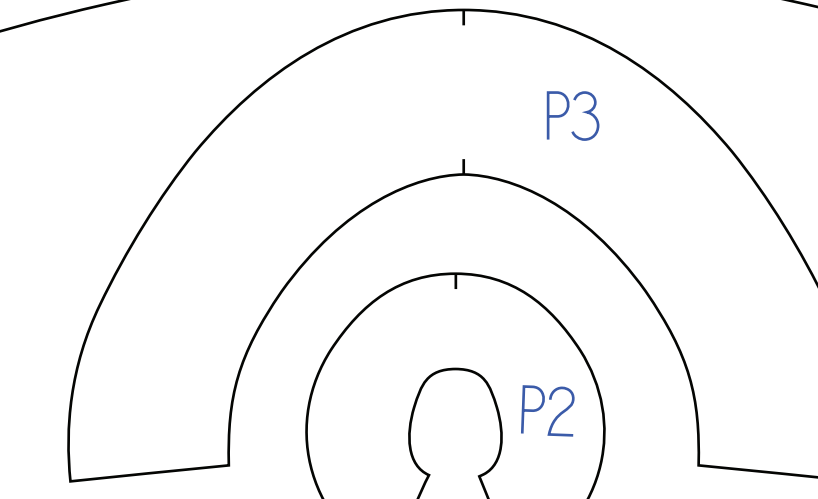
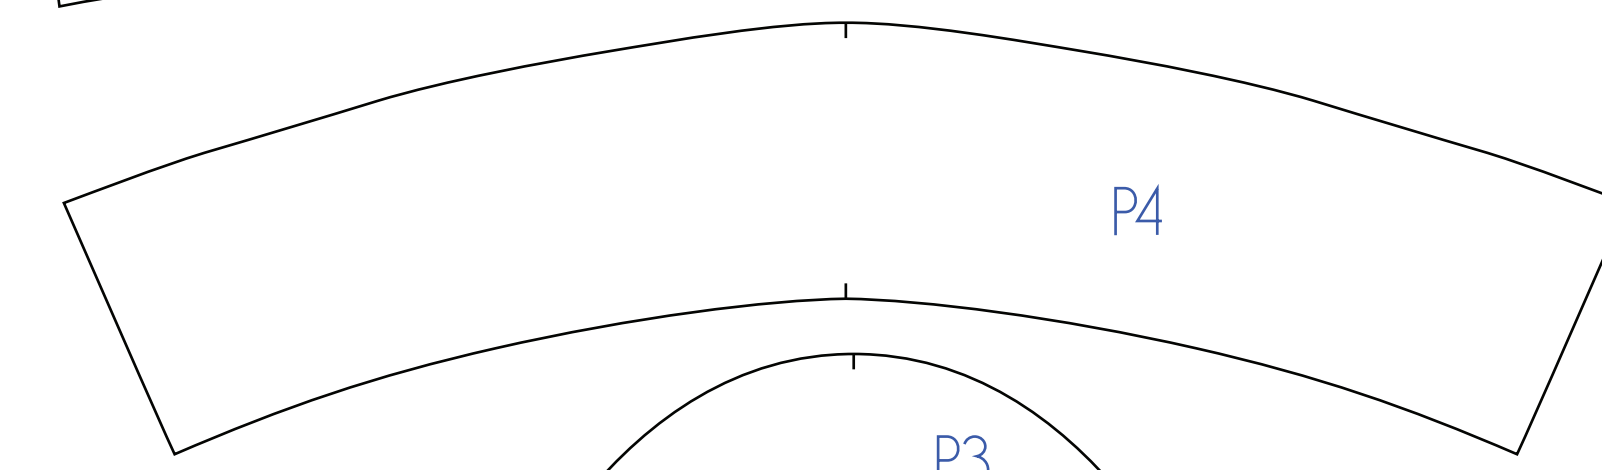
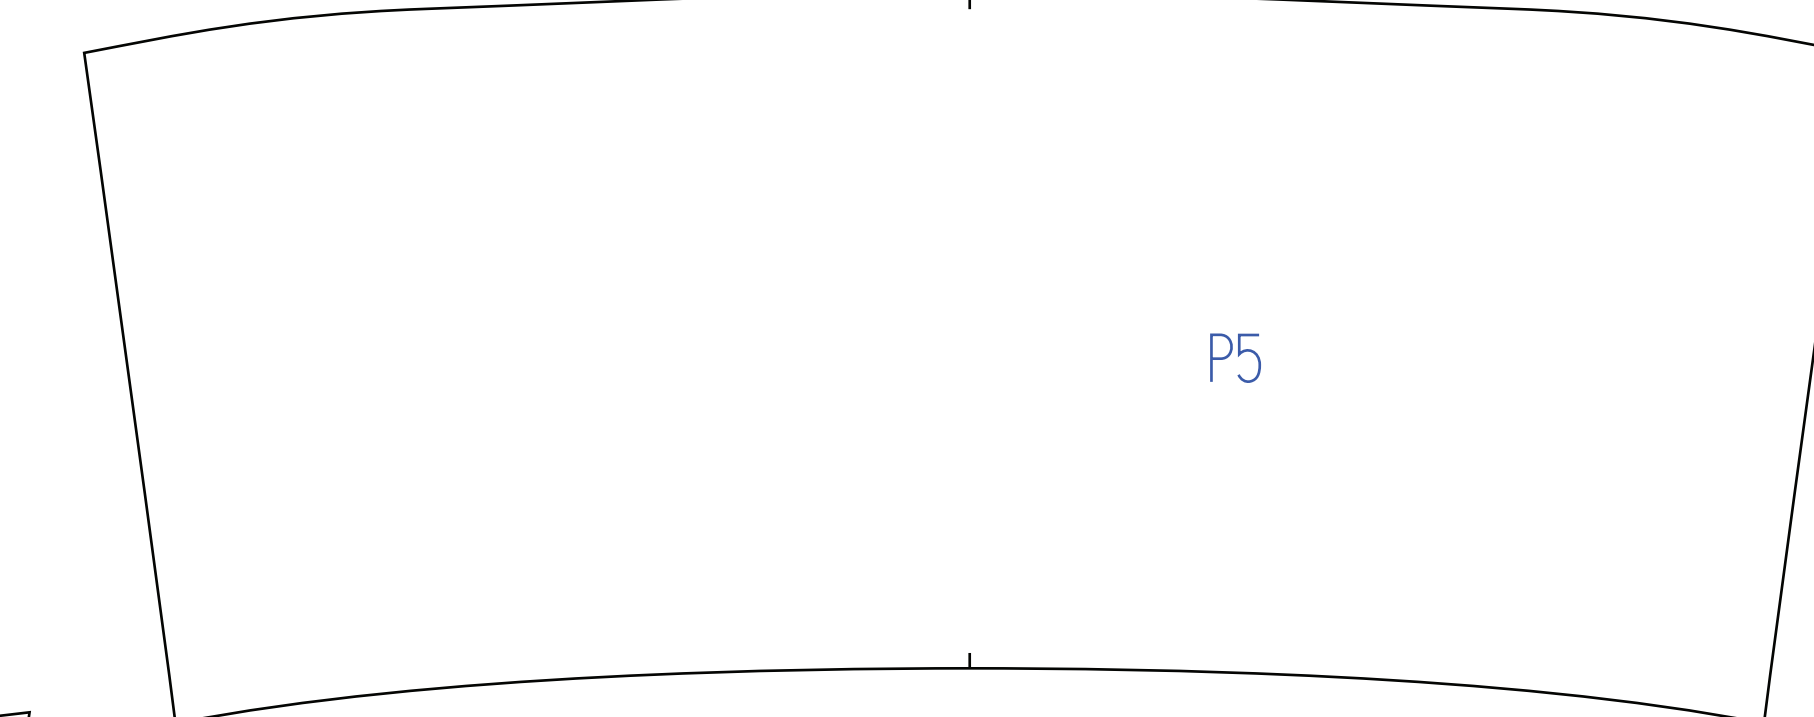
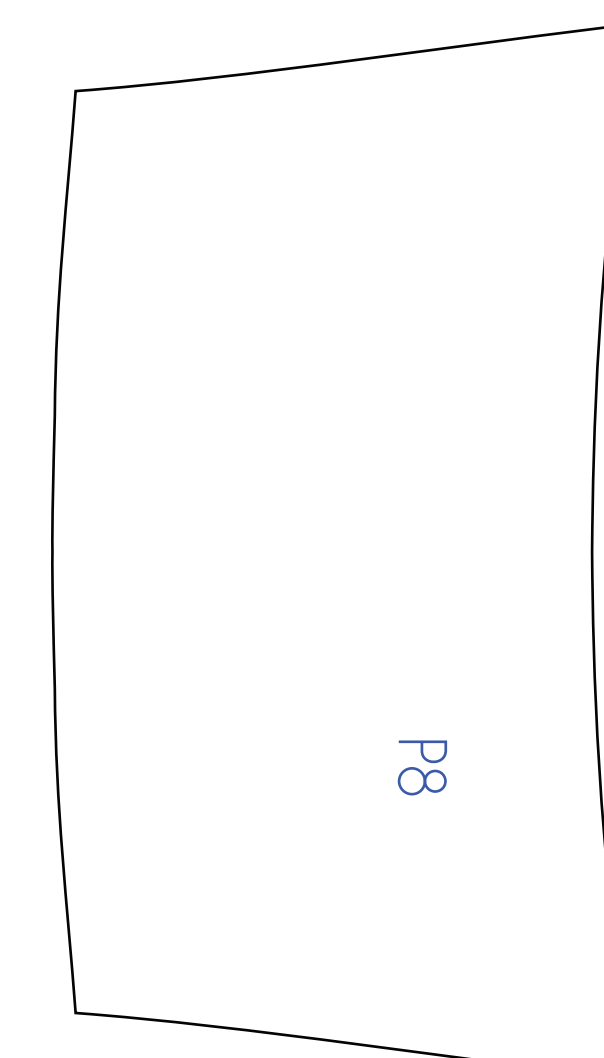
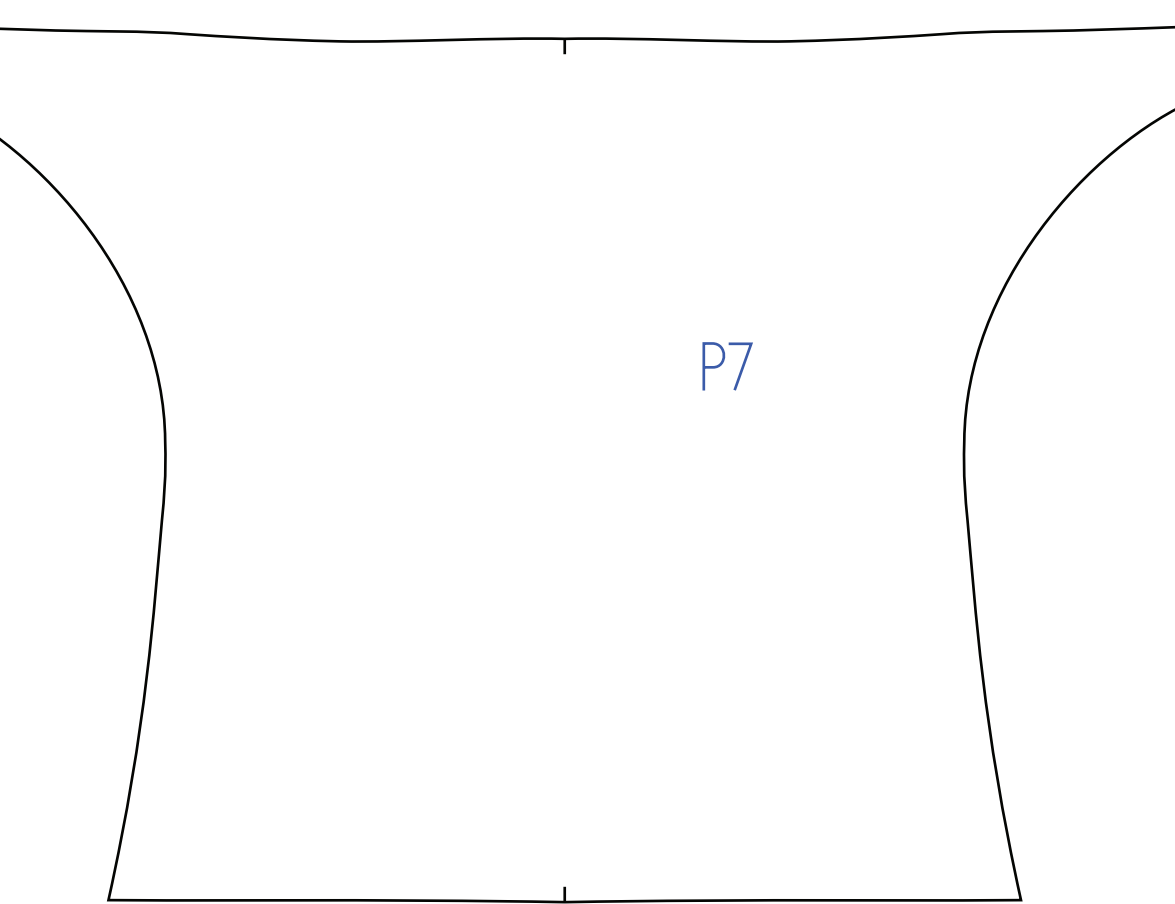
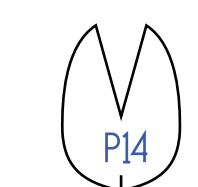
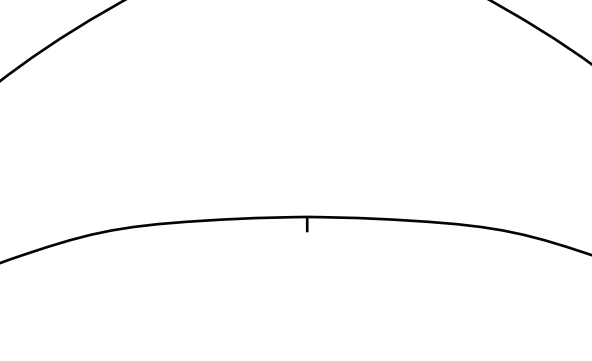
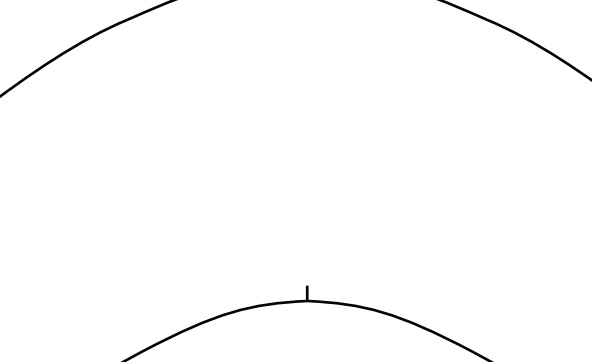
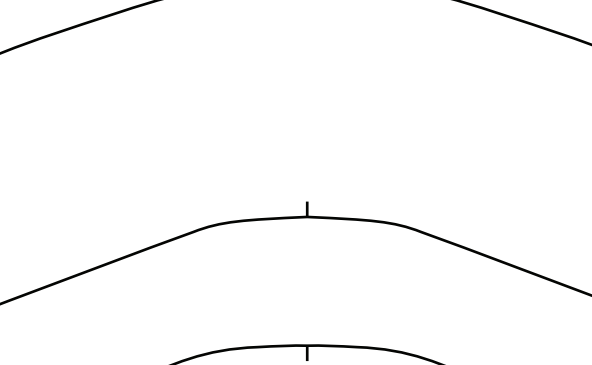
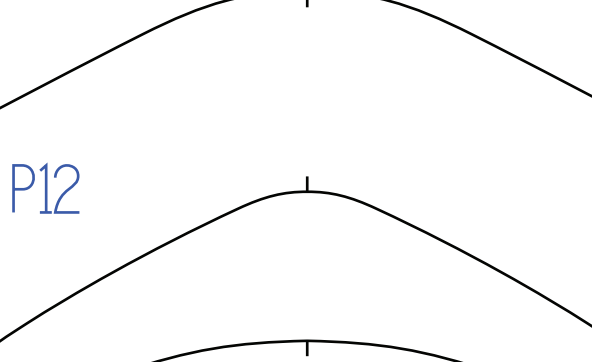
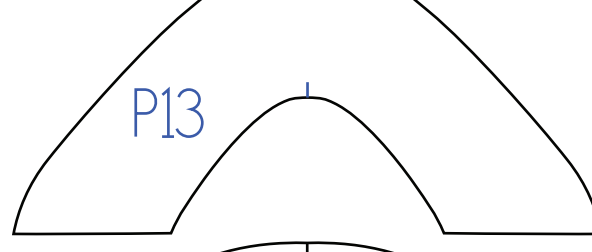
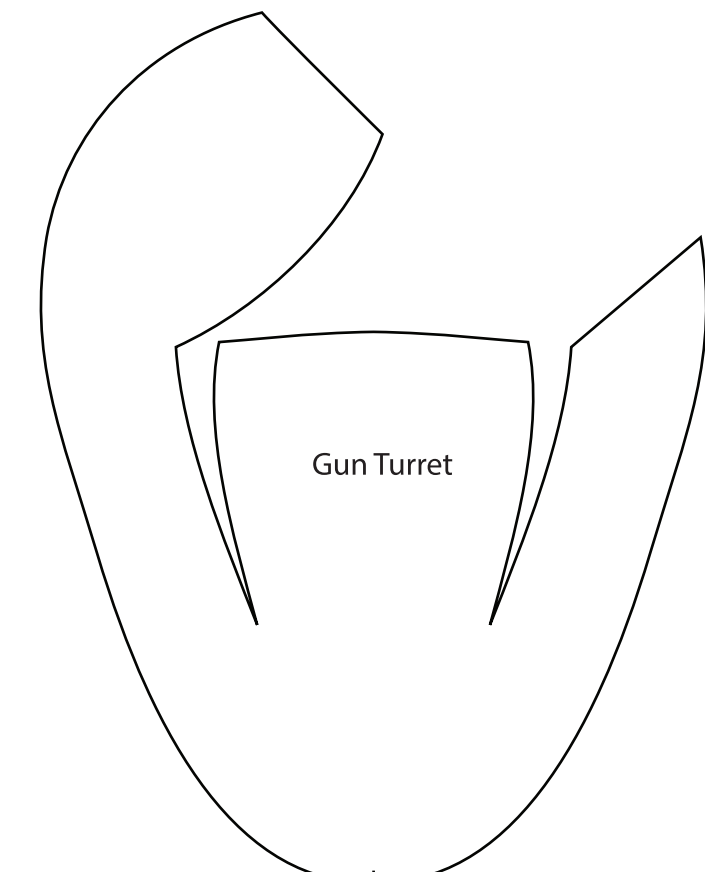
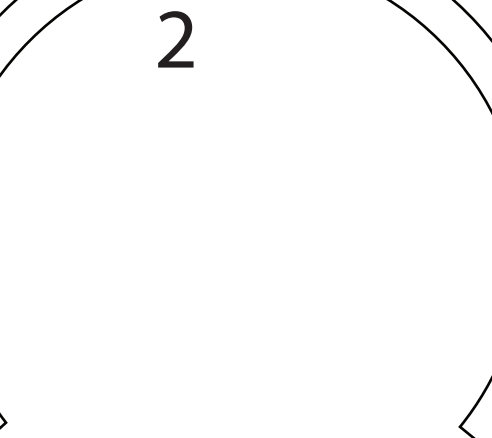
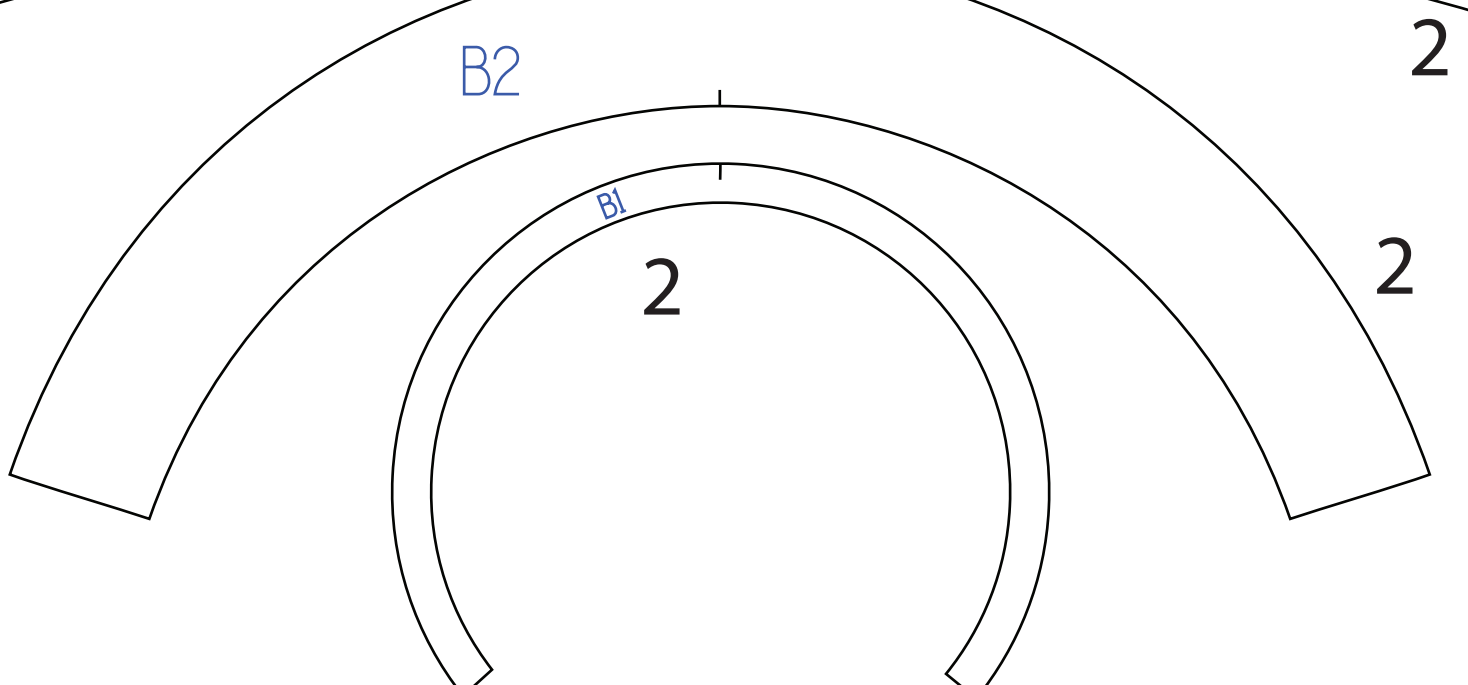


DO NOT GLUE DOWN THE "PC, PD & PE" FORMER!  
BECAUSE IT HAS A REMOVEABLE NOSE FOR THE HATCH.


"P" Stands for Pod

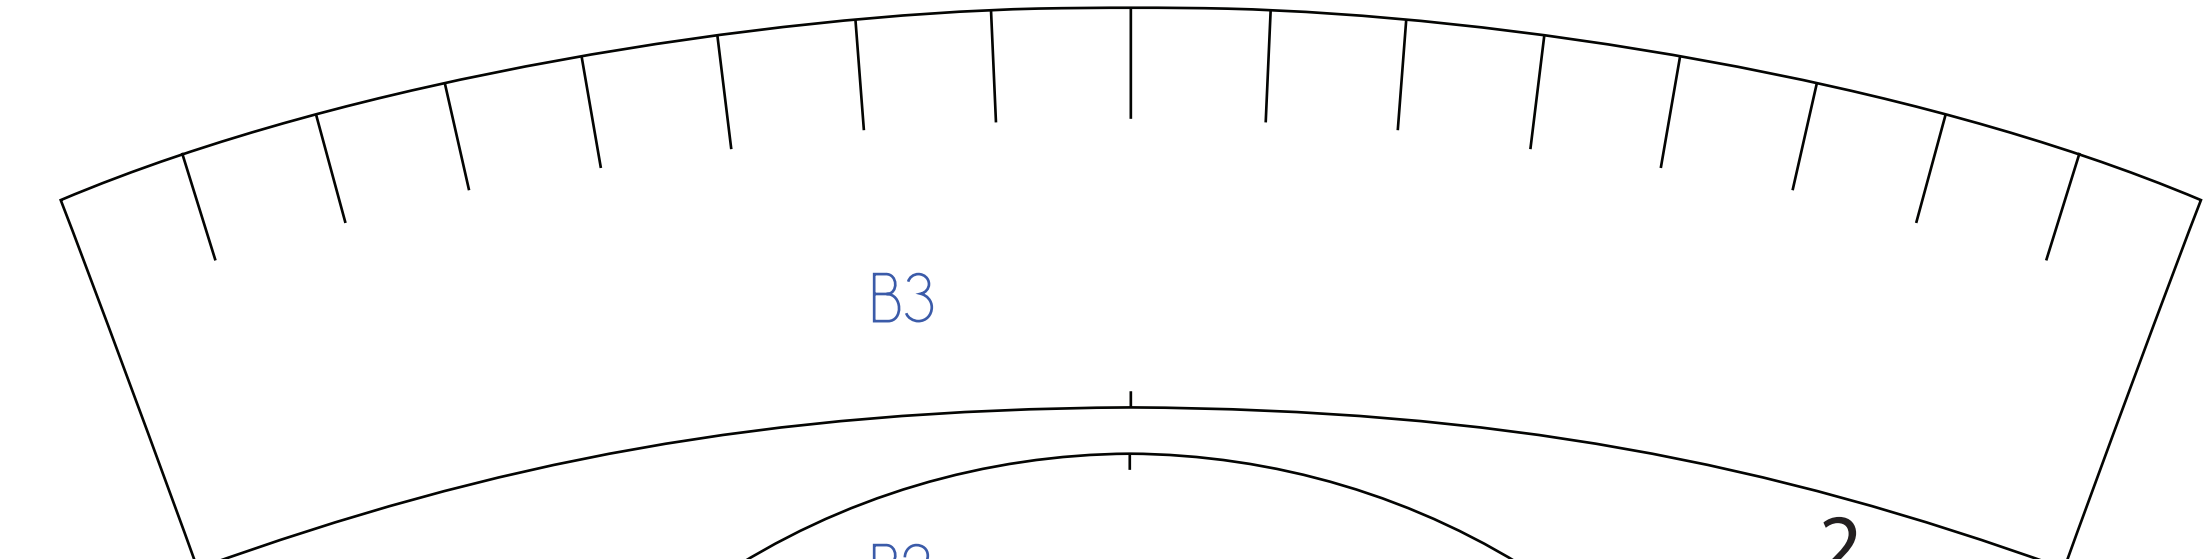

"P" Stands for Pod

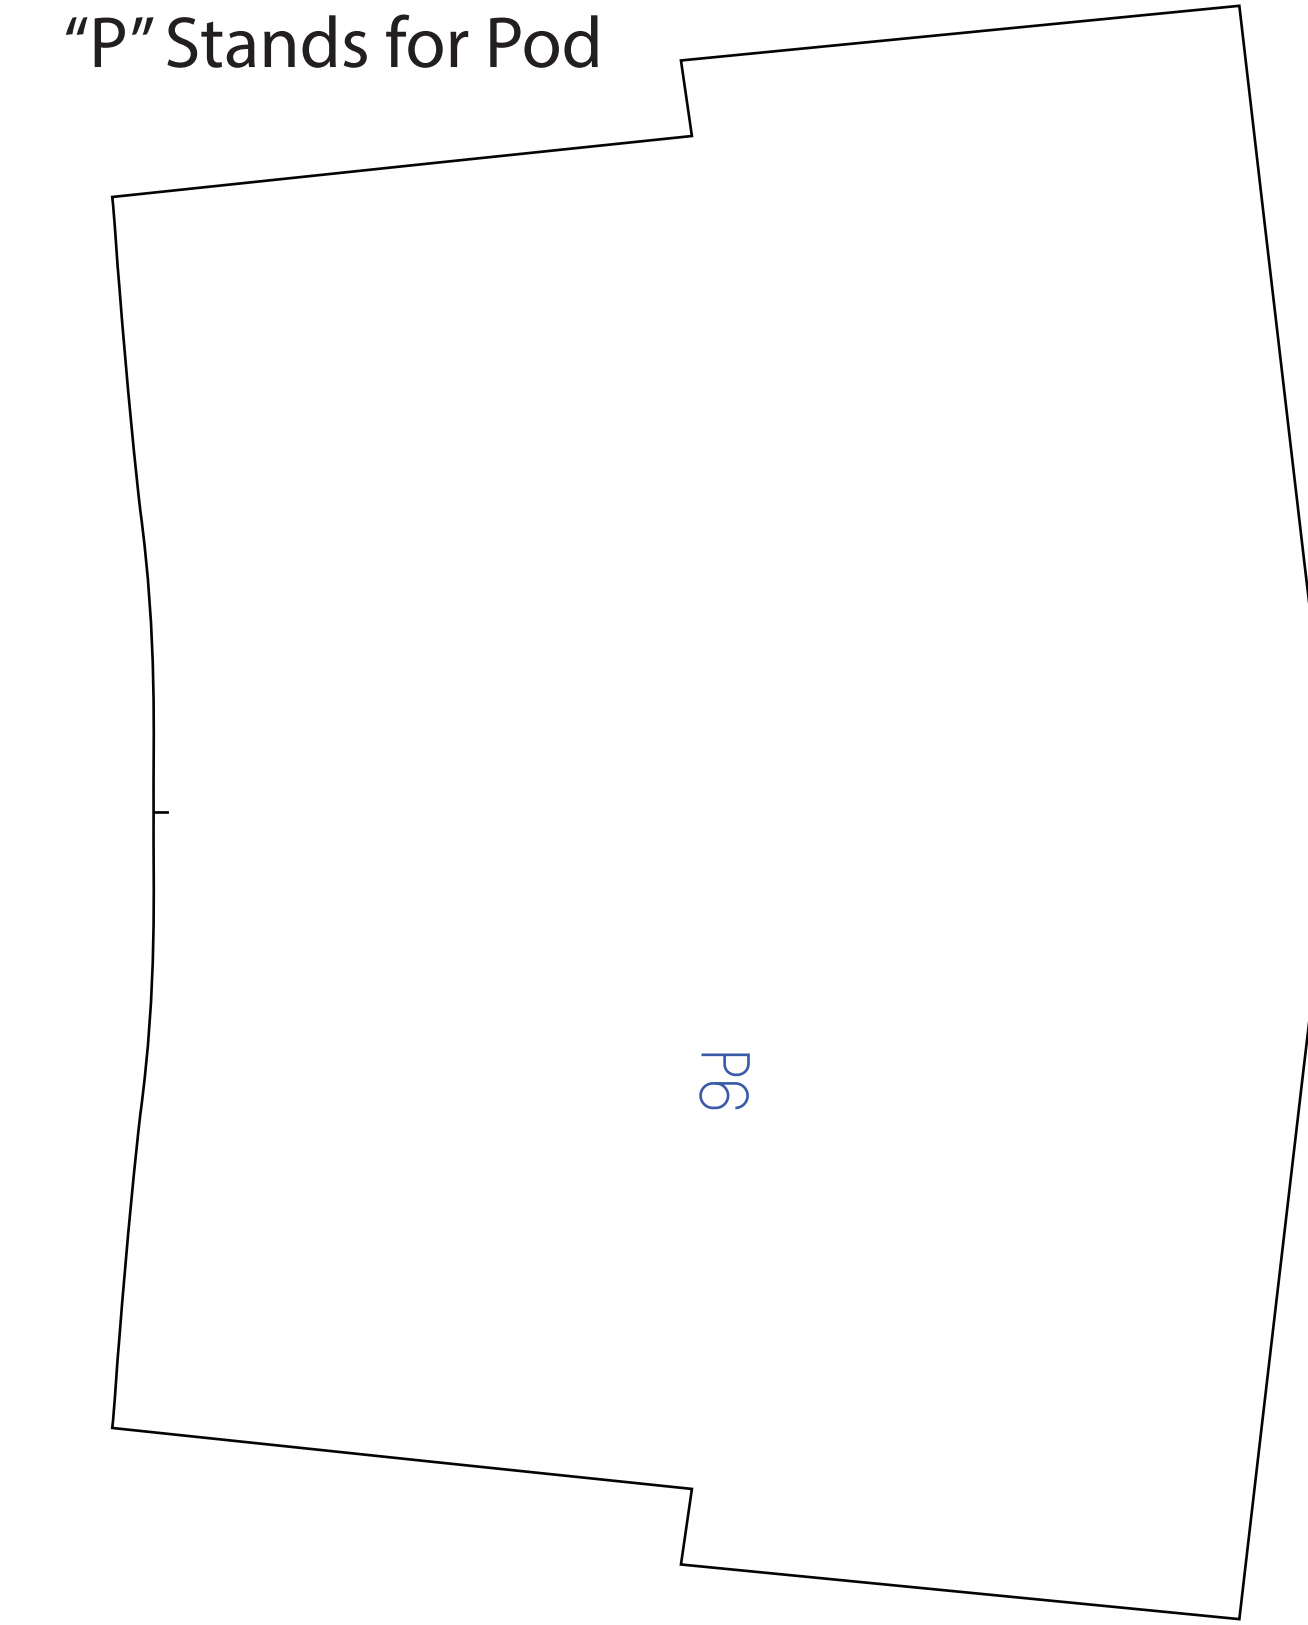






"B" Stands for Boom

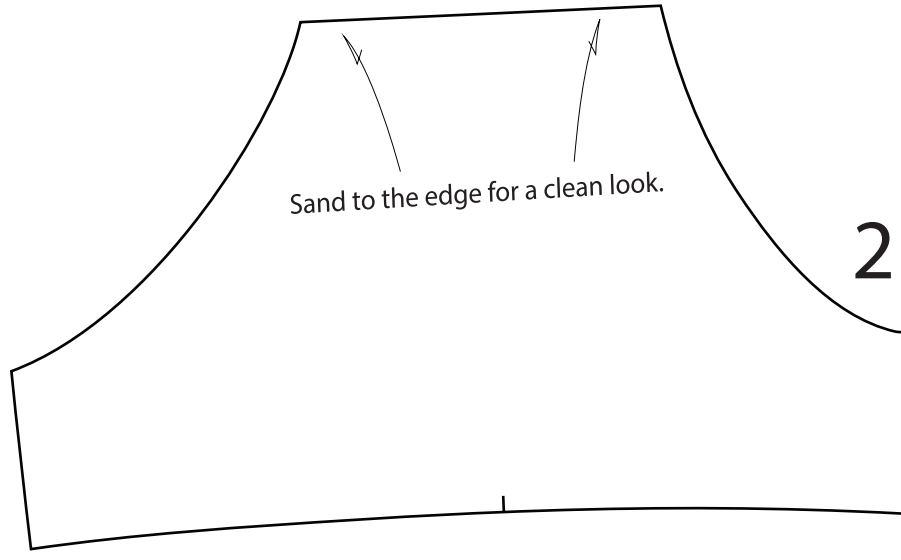

Flip for the other side.

Copyright ©2020 13thSquadron. All Rights Reserved.  
Commercial use of our plans are prohibited.

"PB" Stands for Pod Bottom

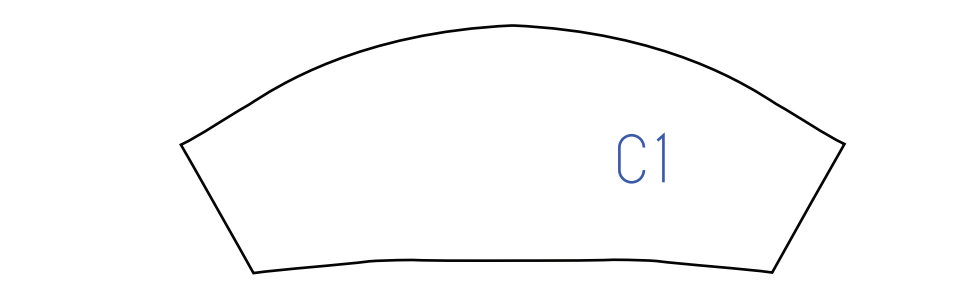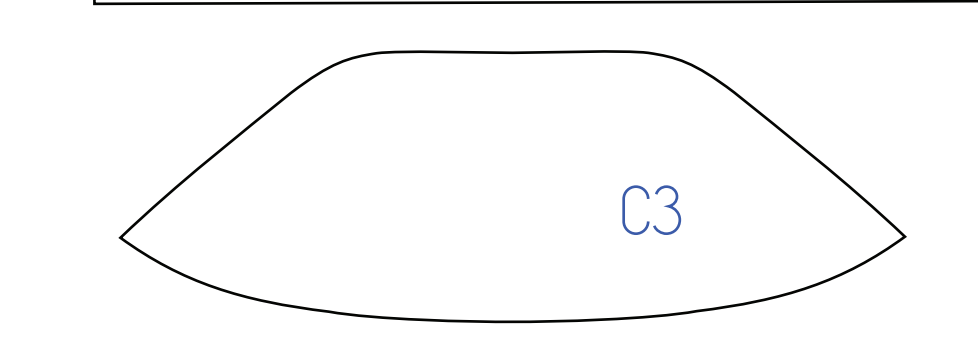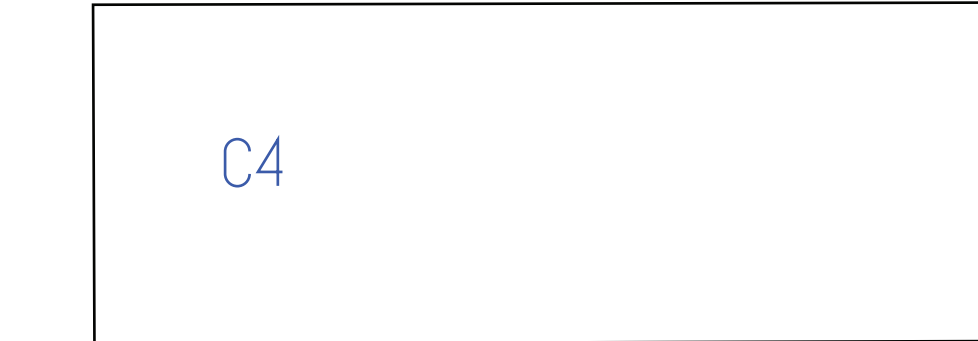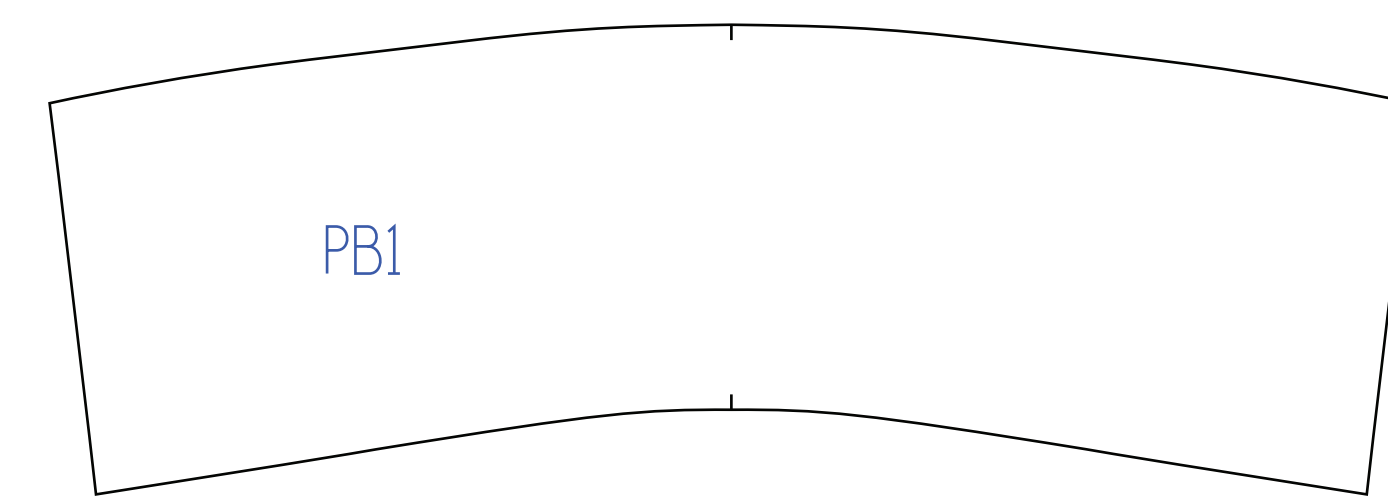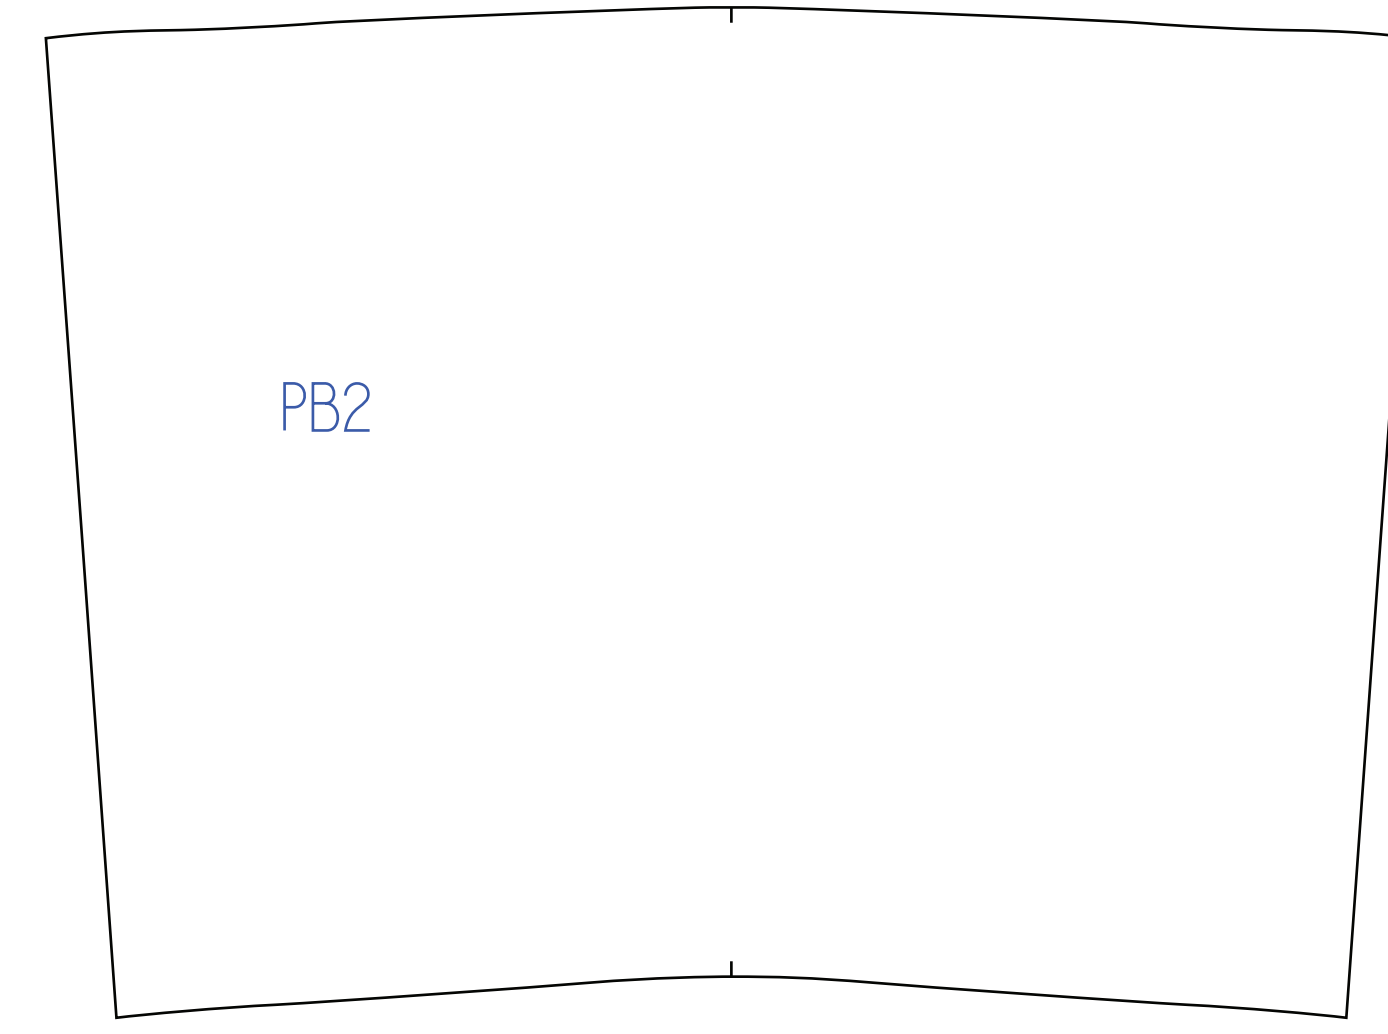

"C" Stands for Cockpit

