


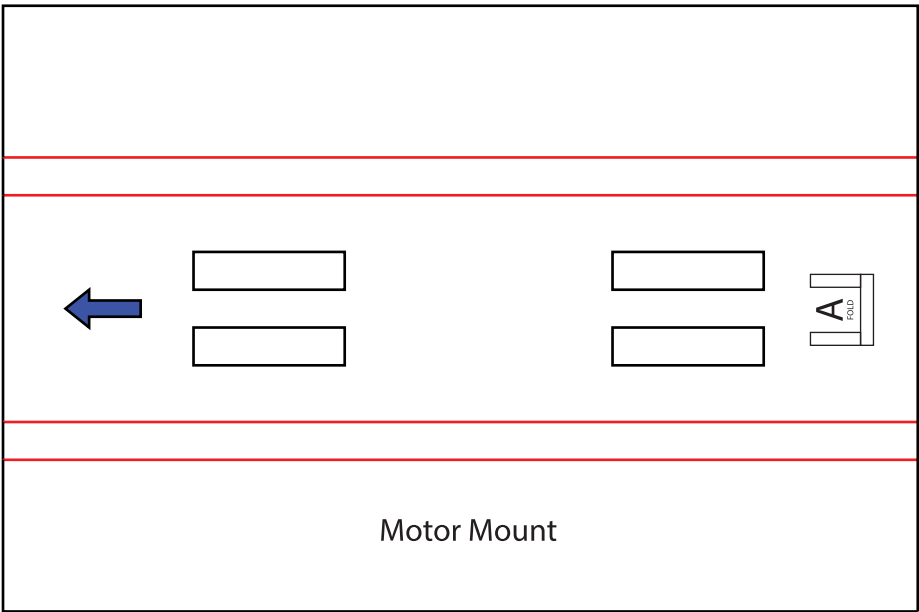


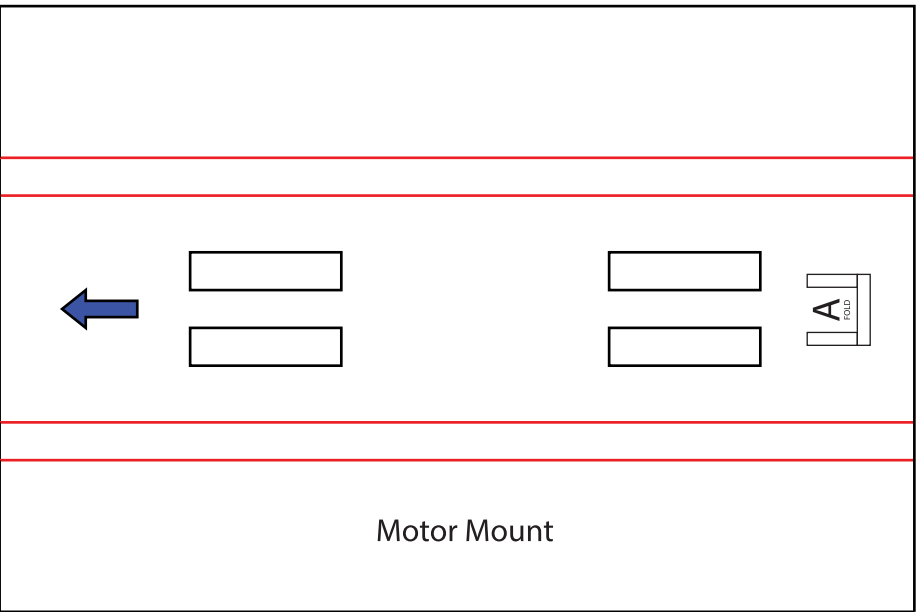

How to do the Leading Edges of the wings and elevator.

- ① If the leading edge is seperated, start here.
- ② If the leading edge is not seperated, start here.
- ③ Apply hot glue into the seam.
- ④ Add finished wing to round the airfoil and create a nice rounded front edge.

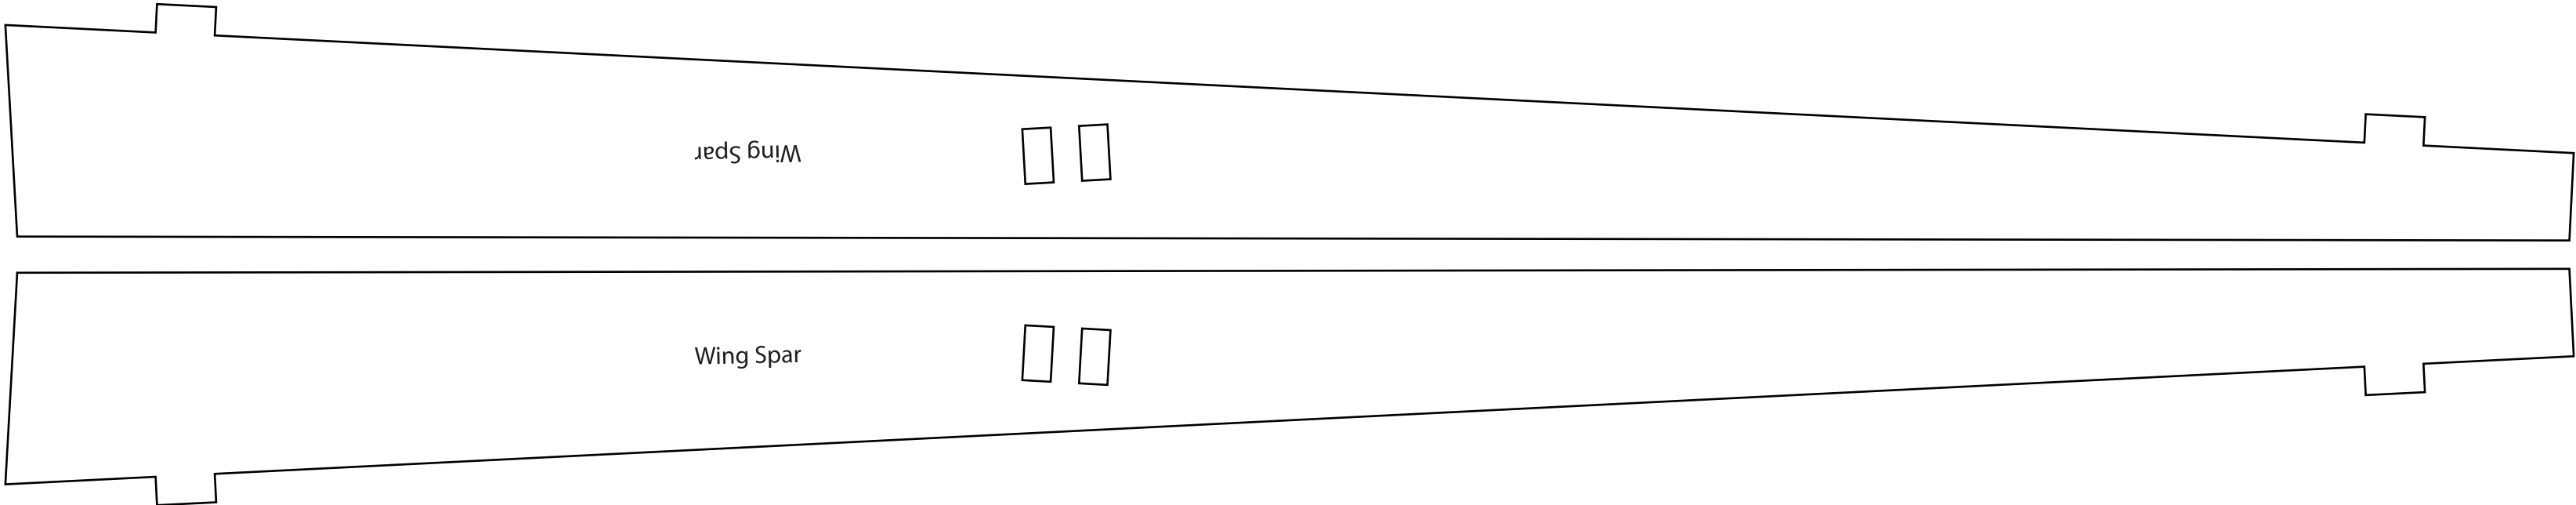

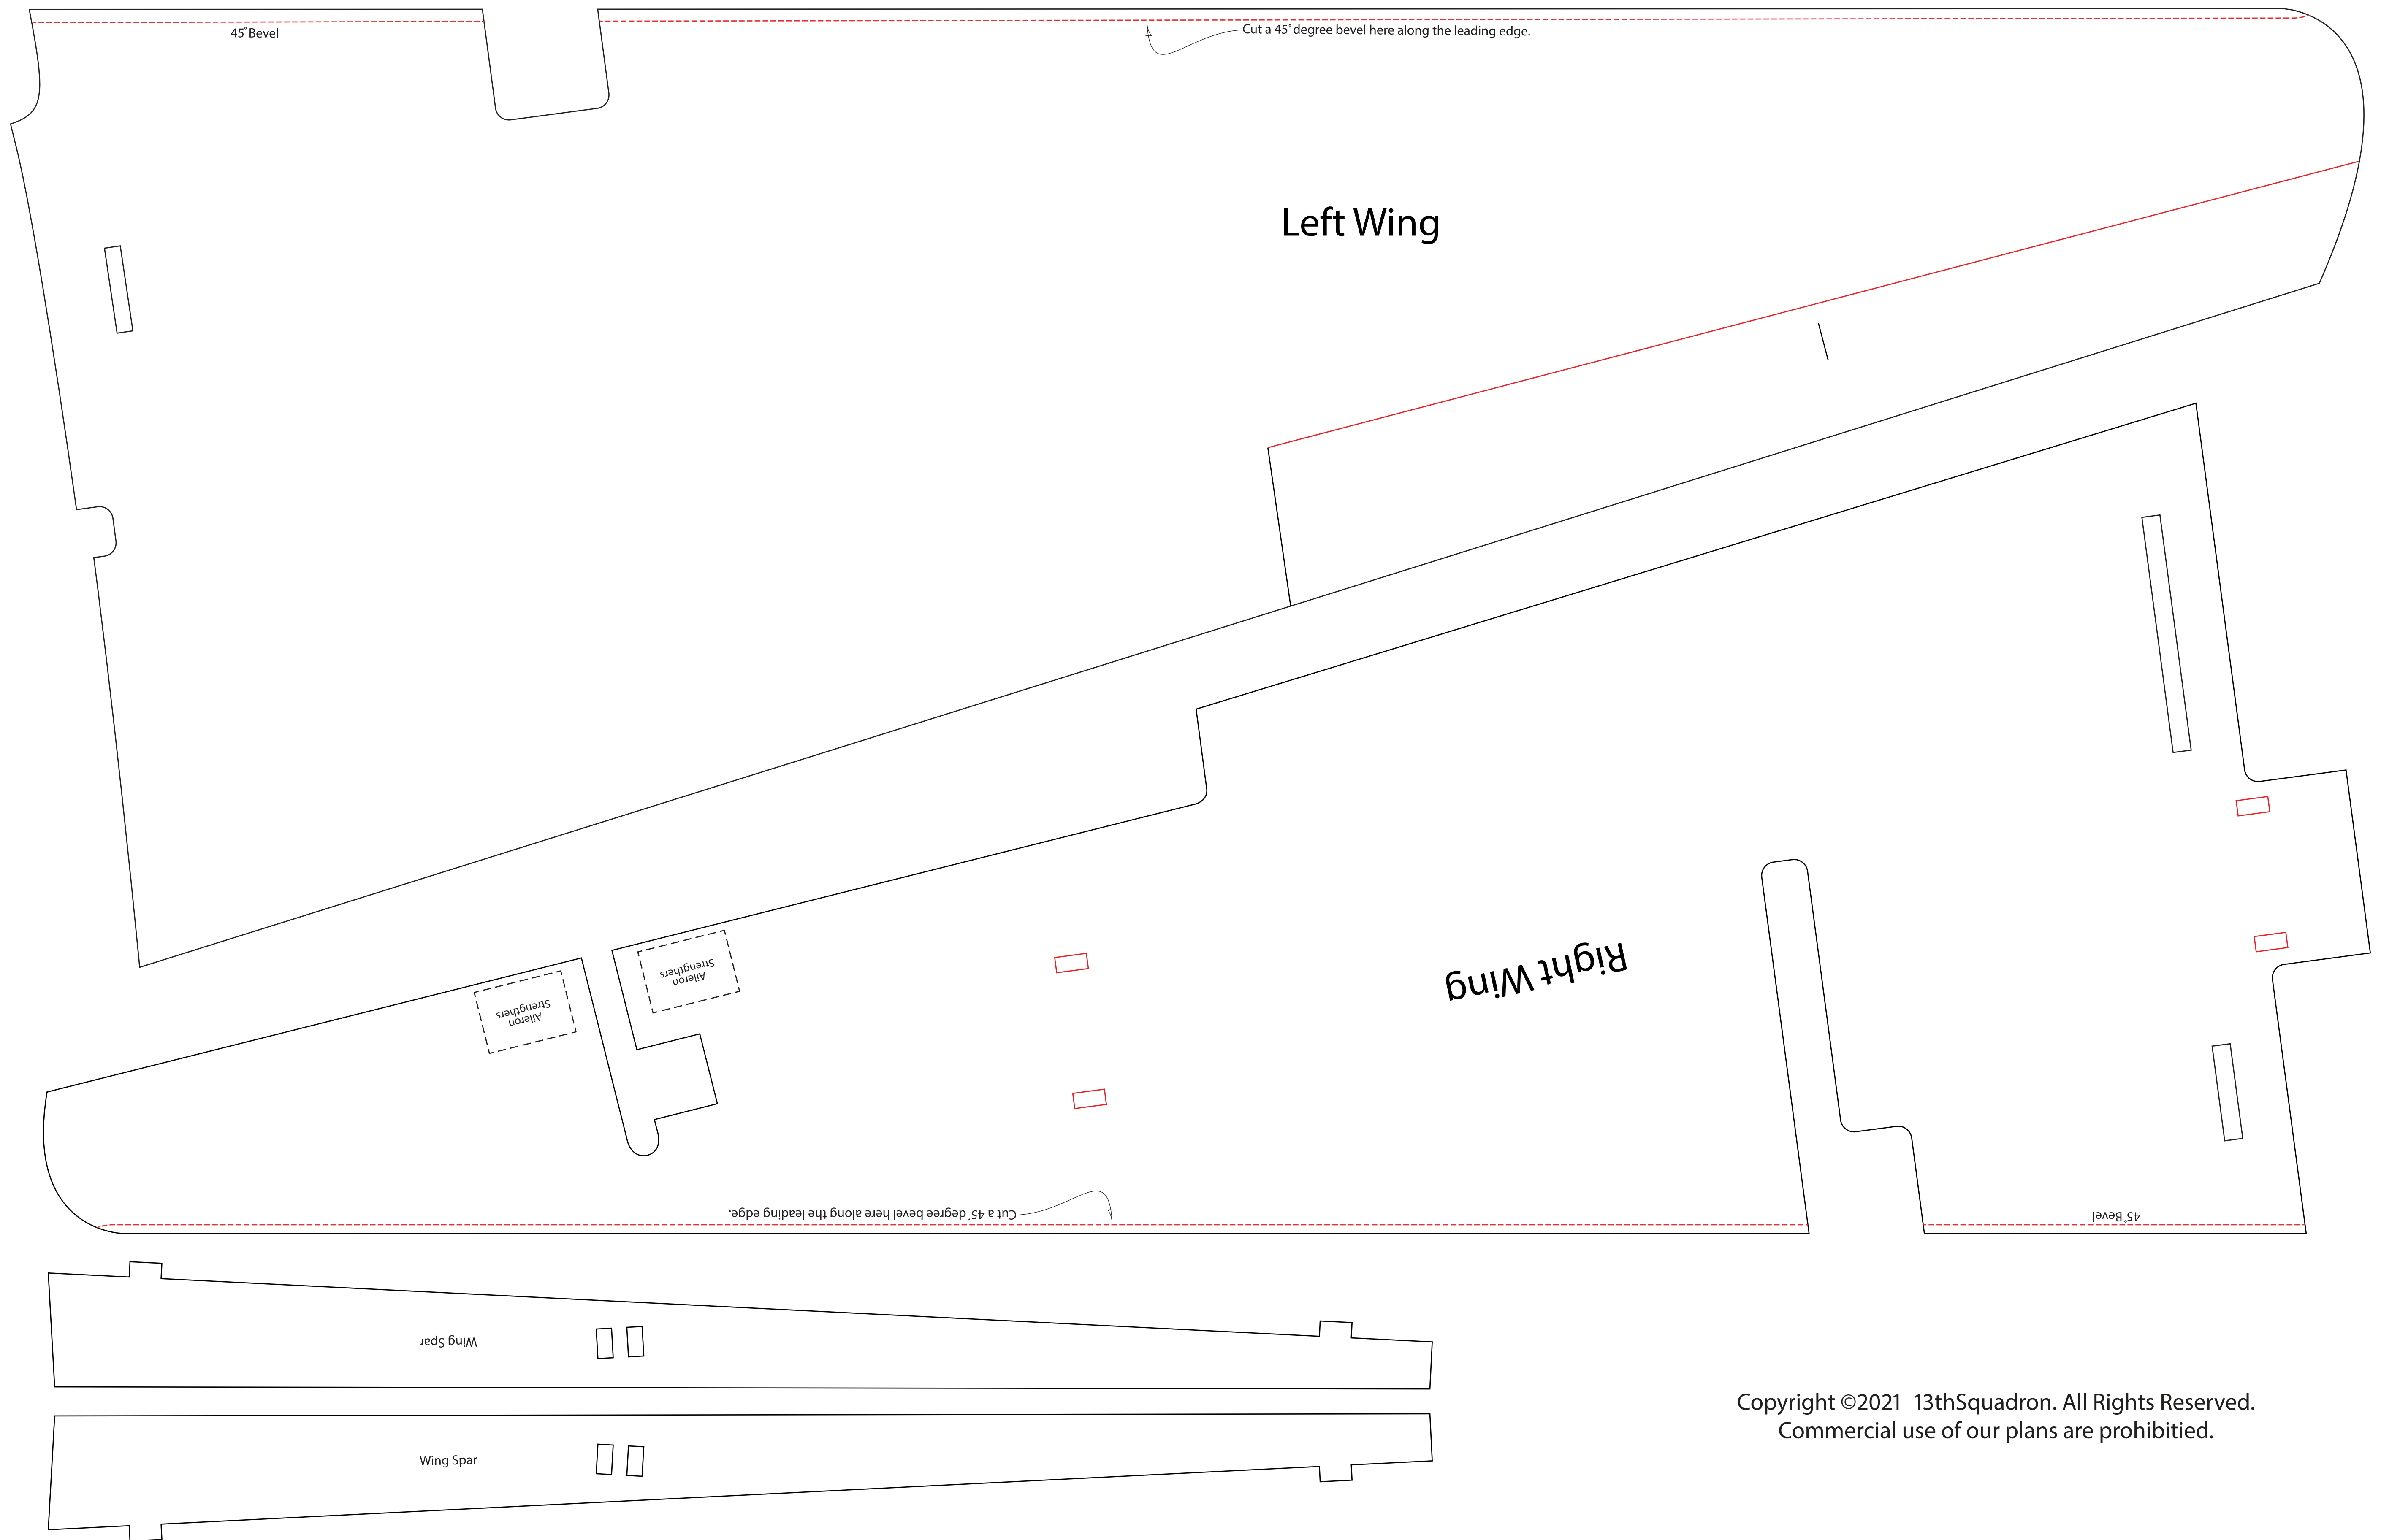

45° Bevel

Cut a 45° degree bevel here along the leading edge.

Left Wing

Right Wing

Aileron
Strengtheners


Aileron
Strengtheners



Wing Spar

Wing Spar



45° Bevel


Copyright ©2021 13thSquadron. All Rights Reserved.
Commercial use of our plans are prohibited.

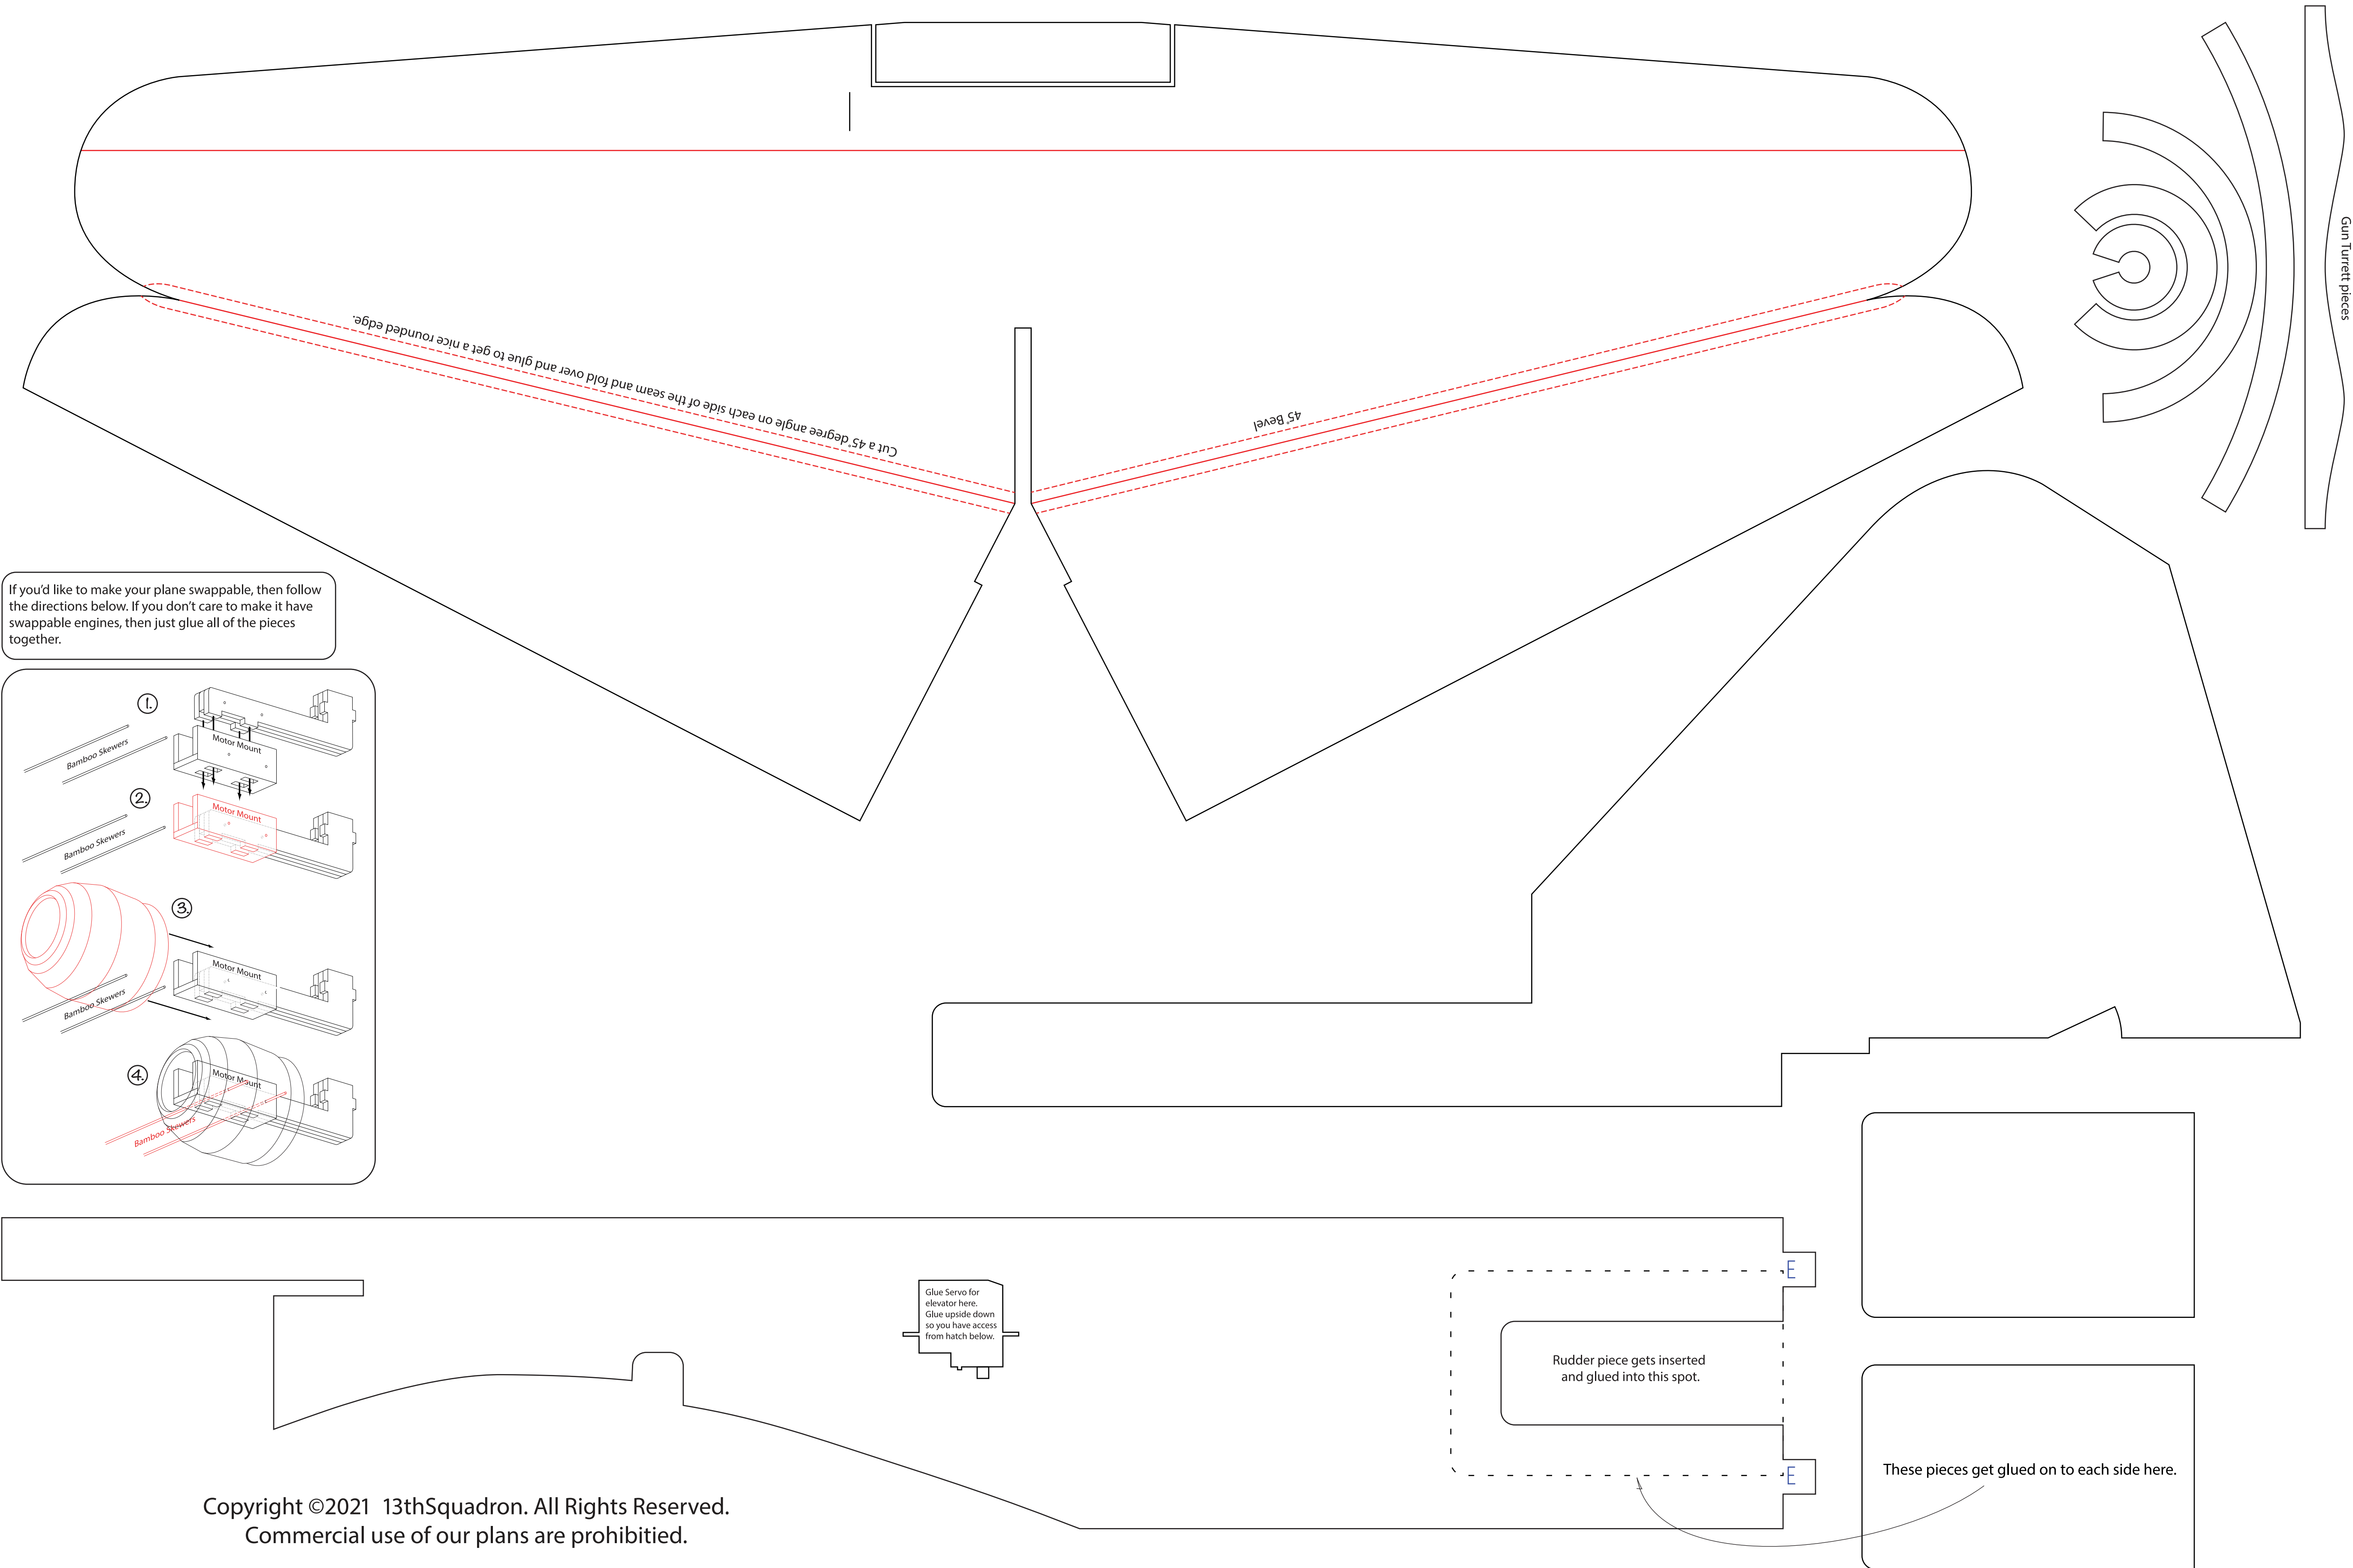


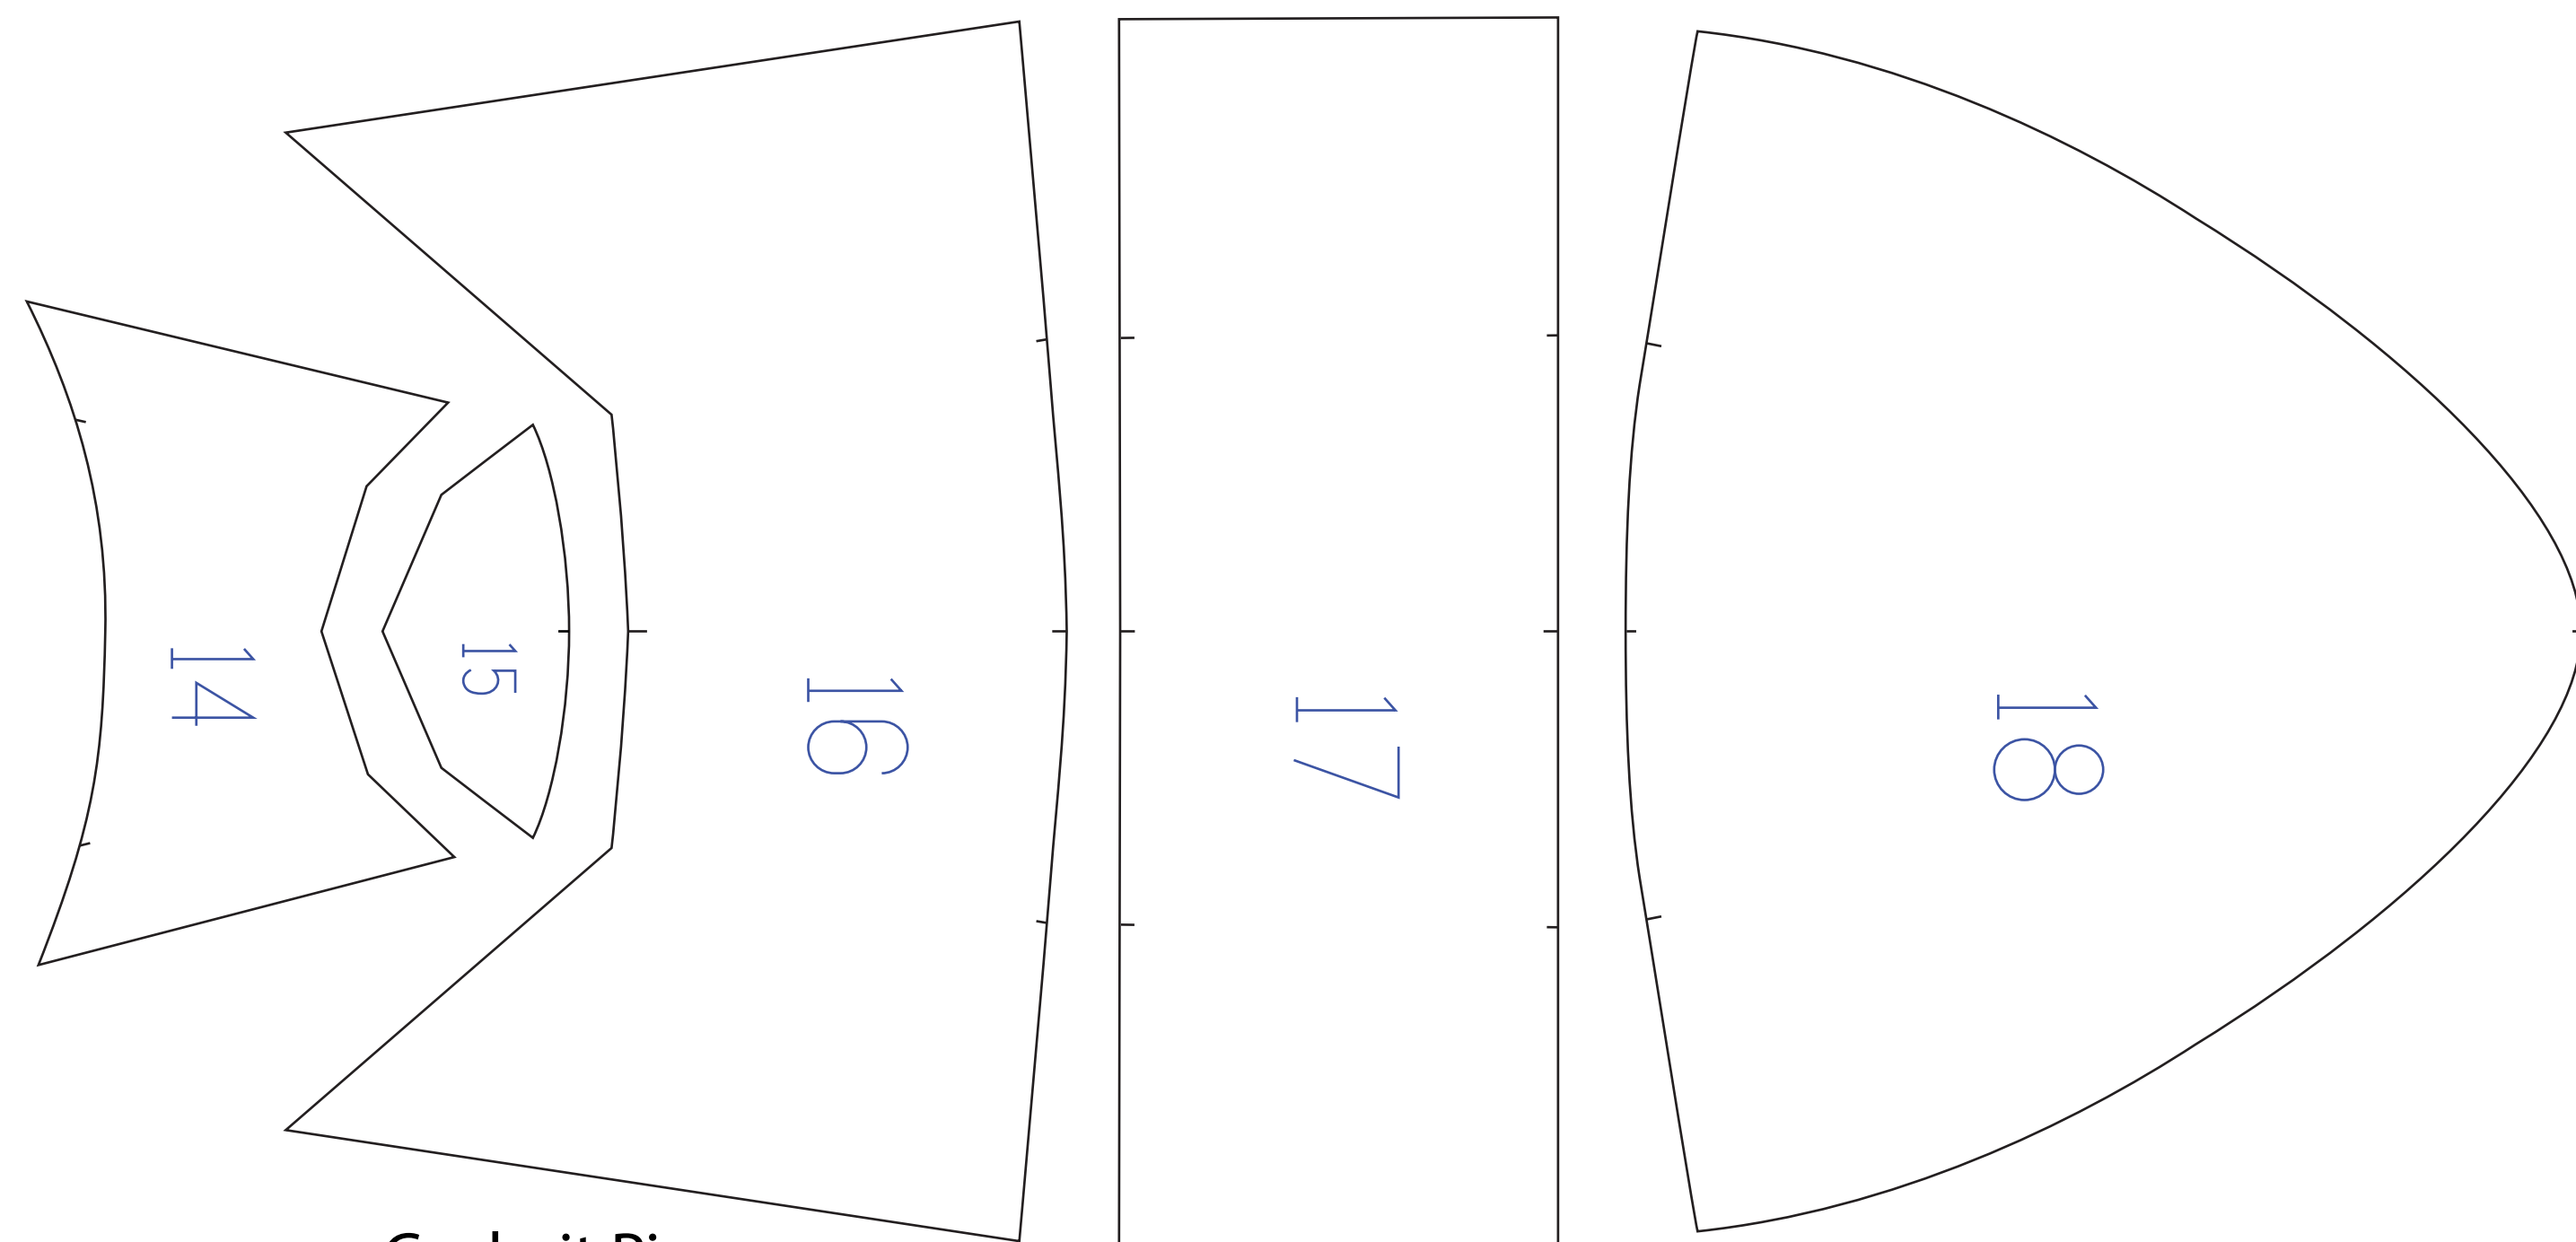
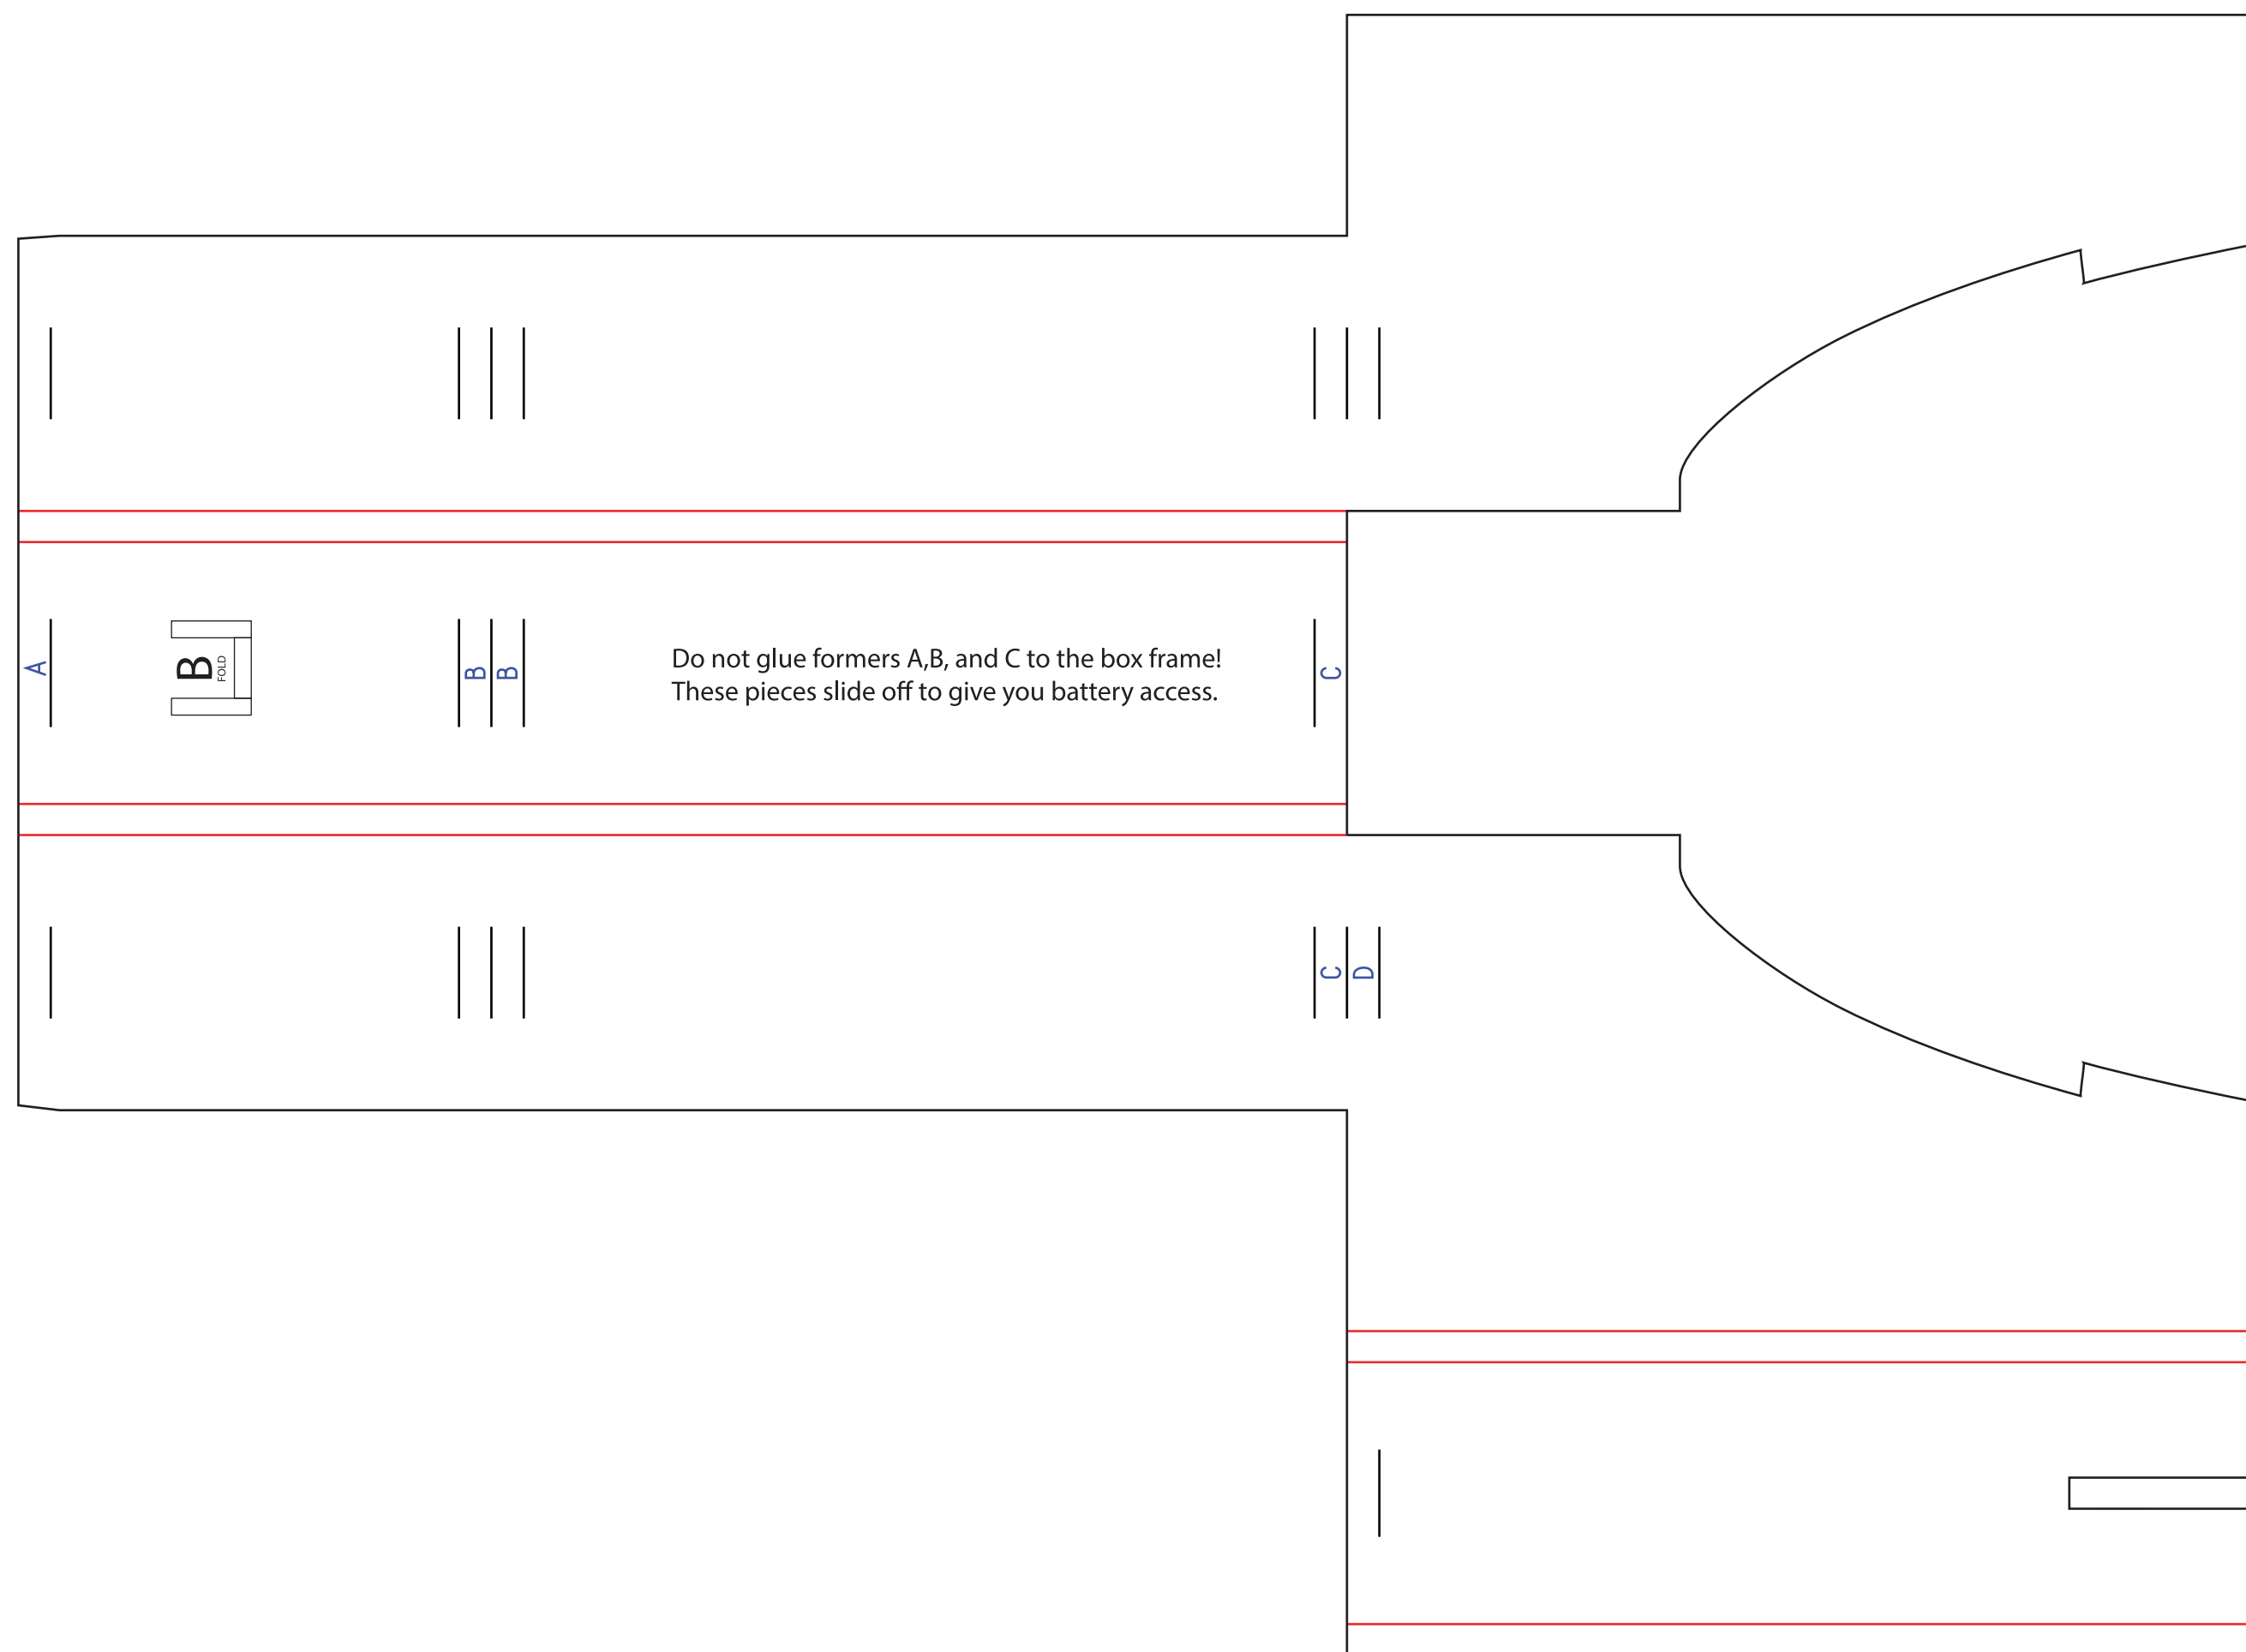



Cockpit Pieces

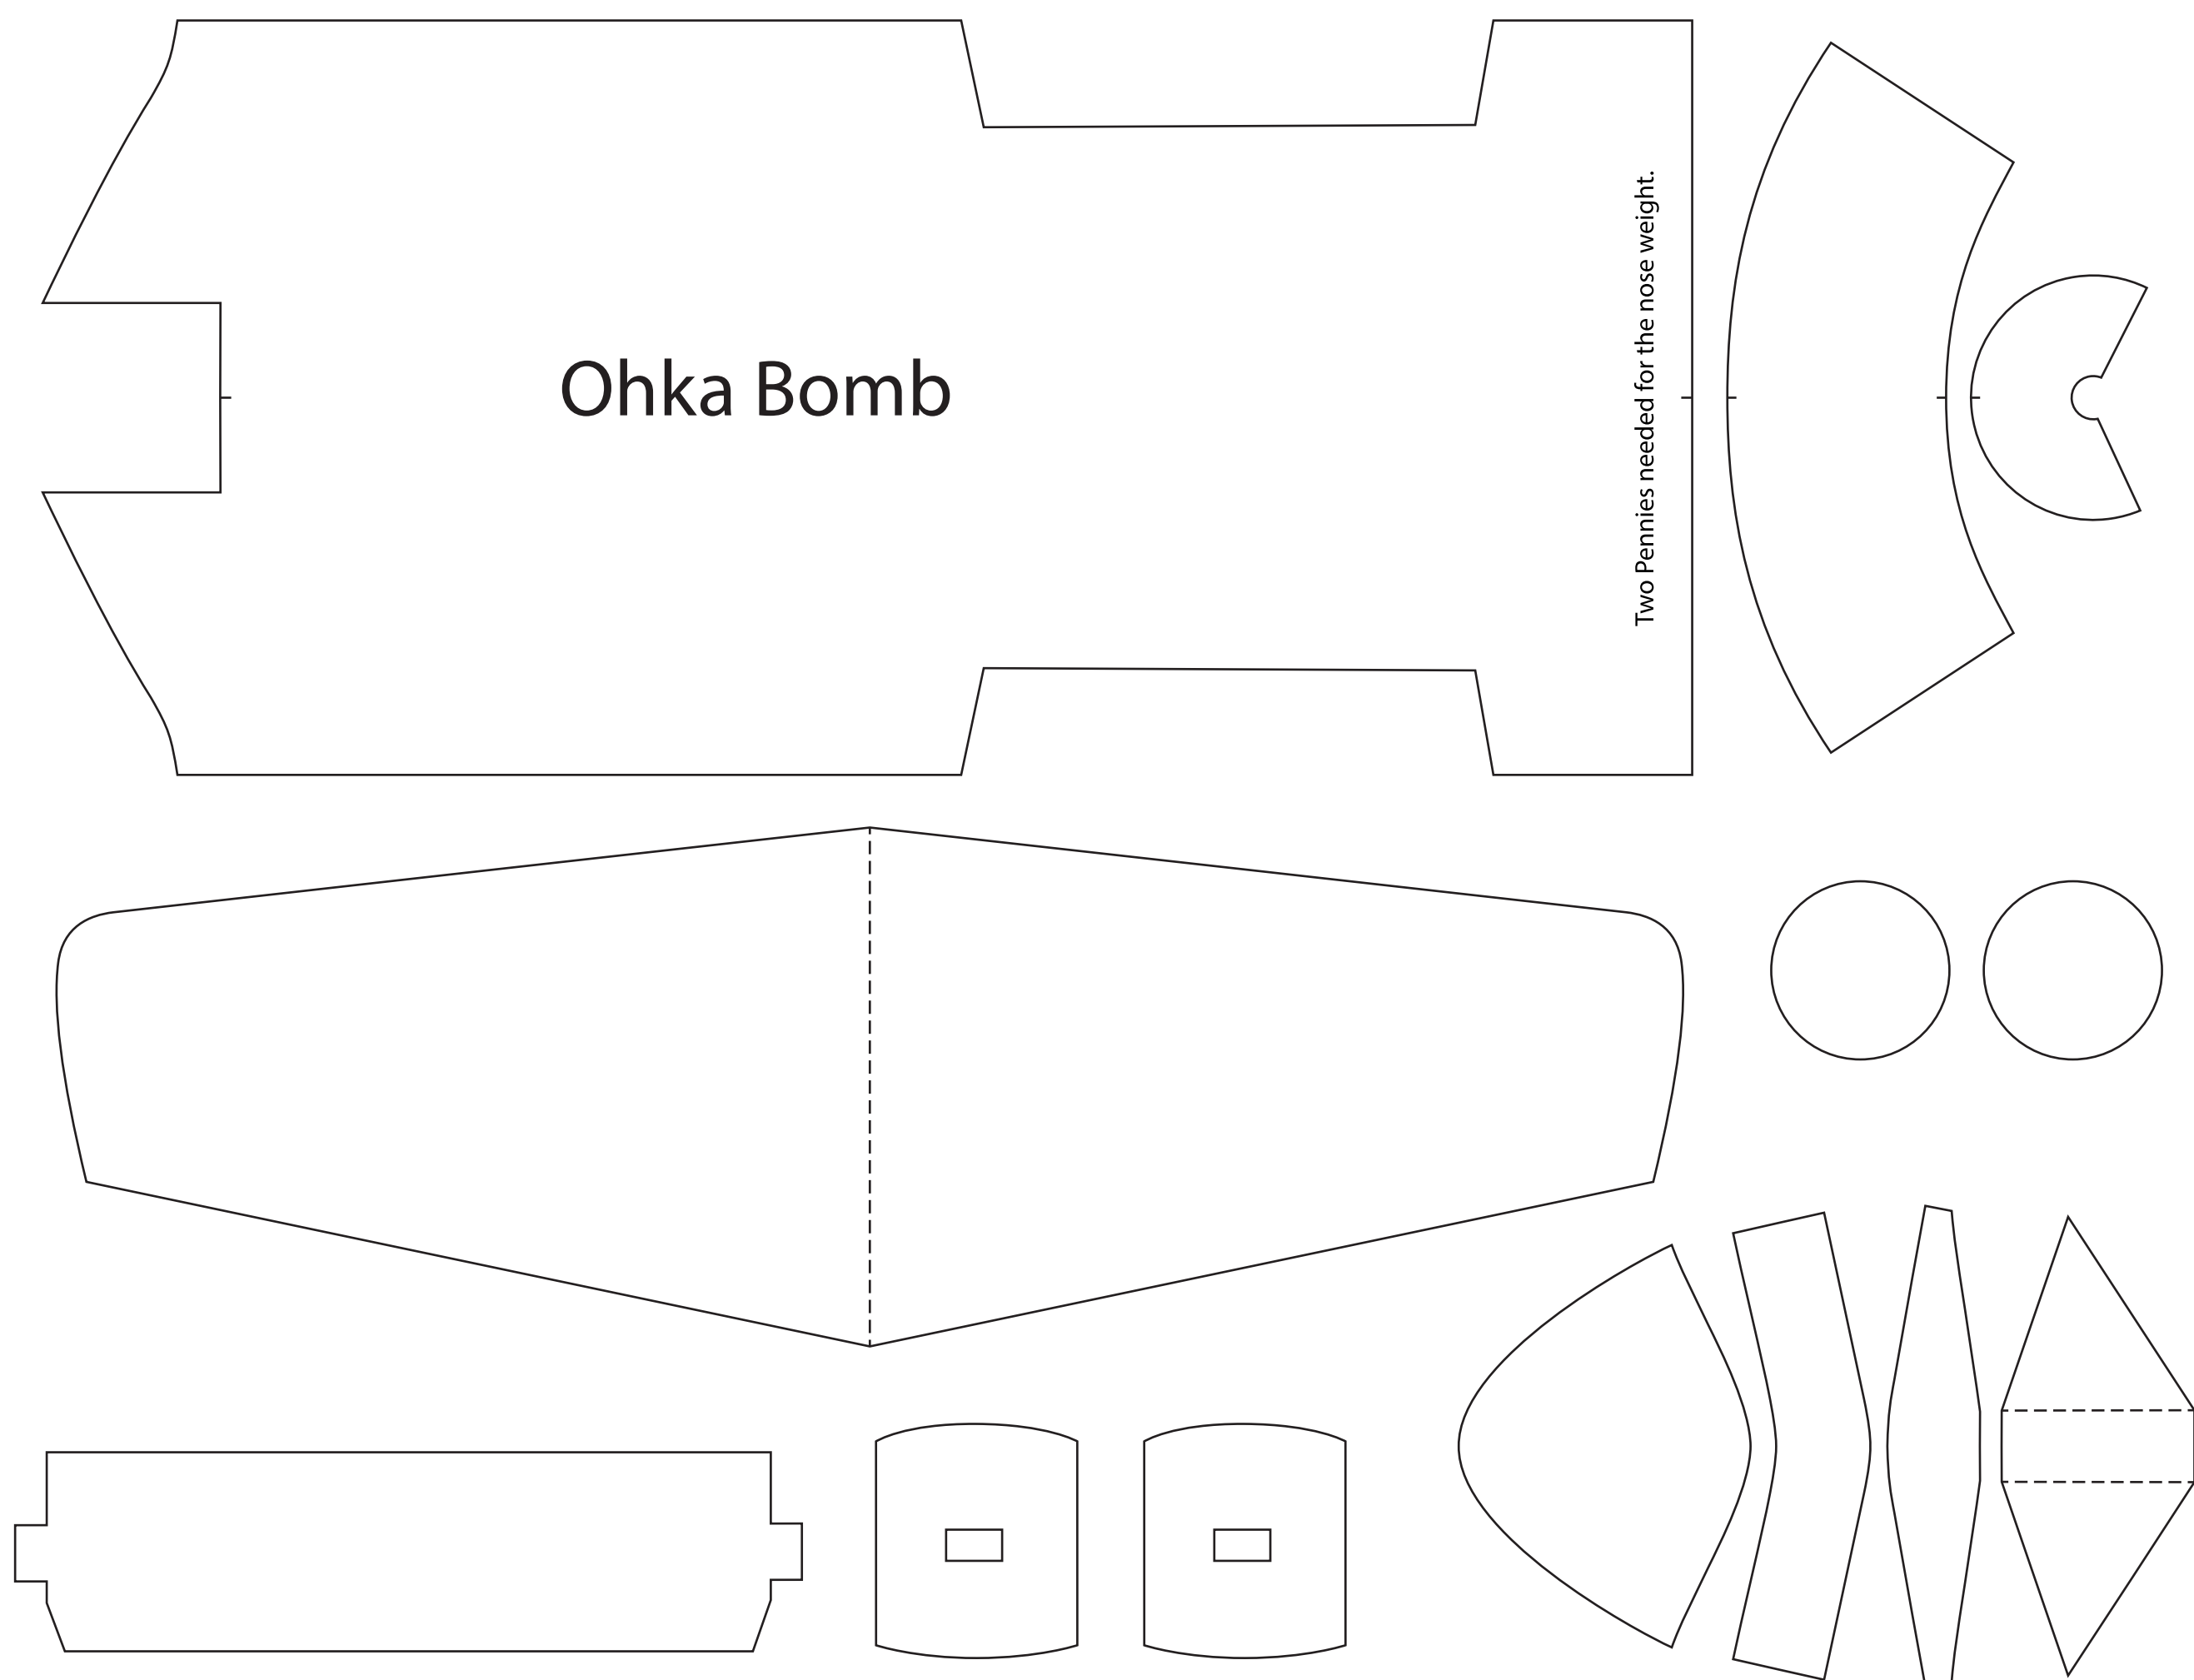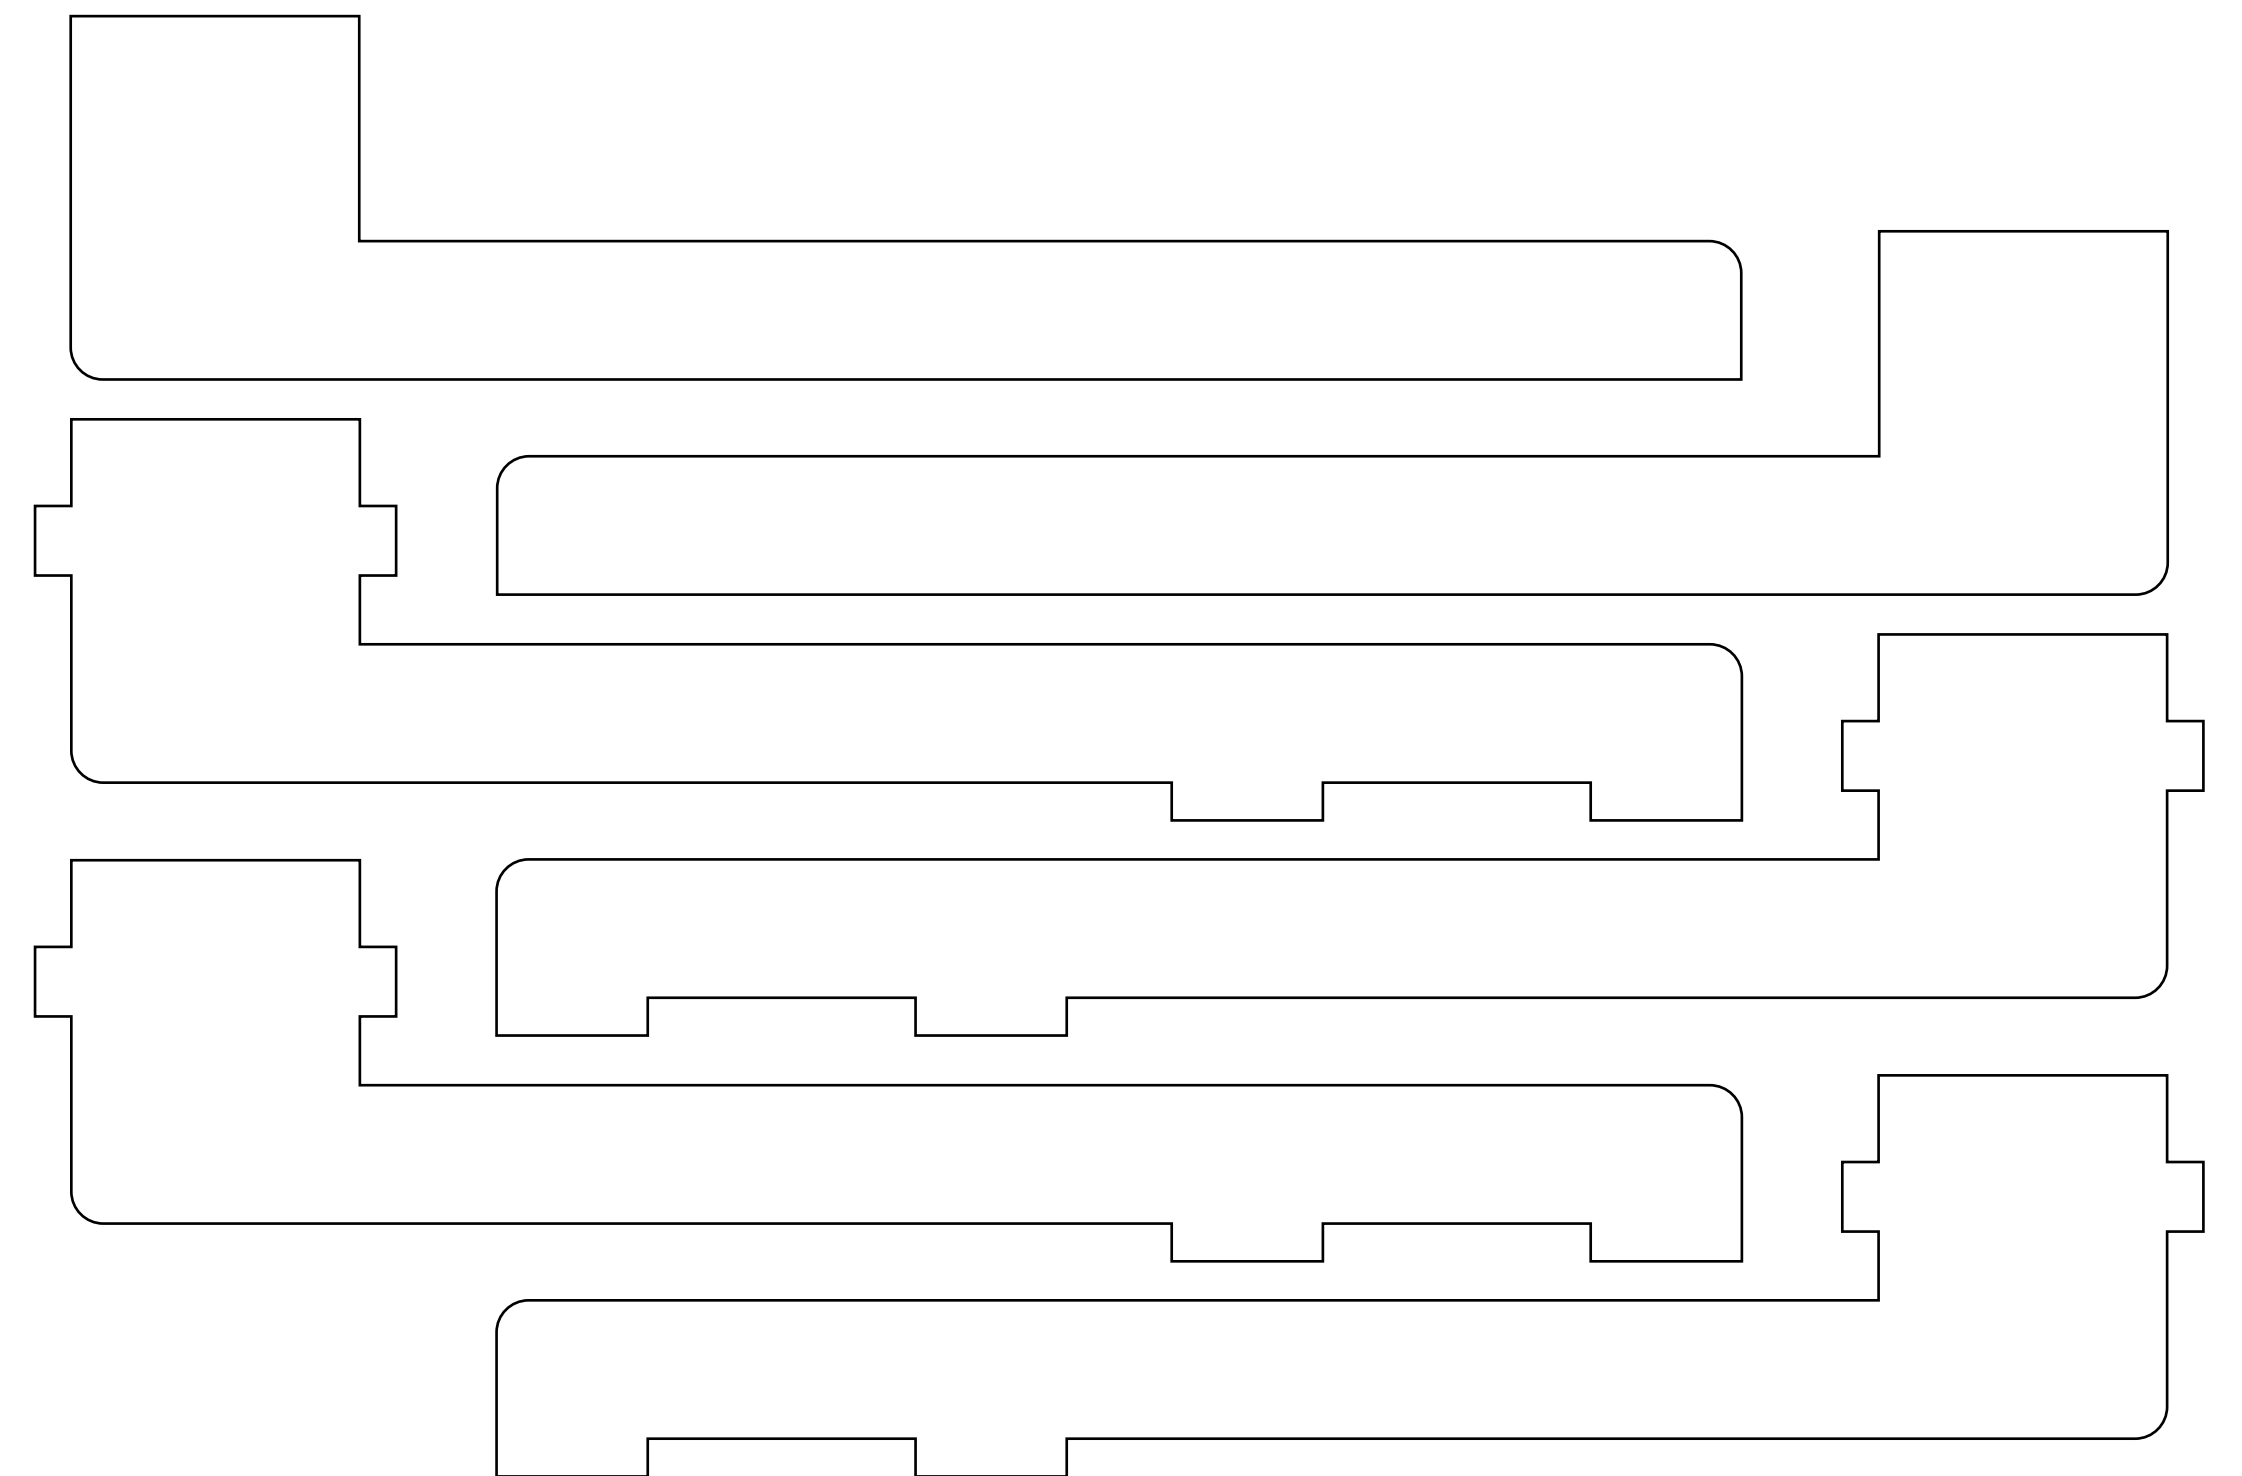

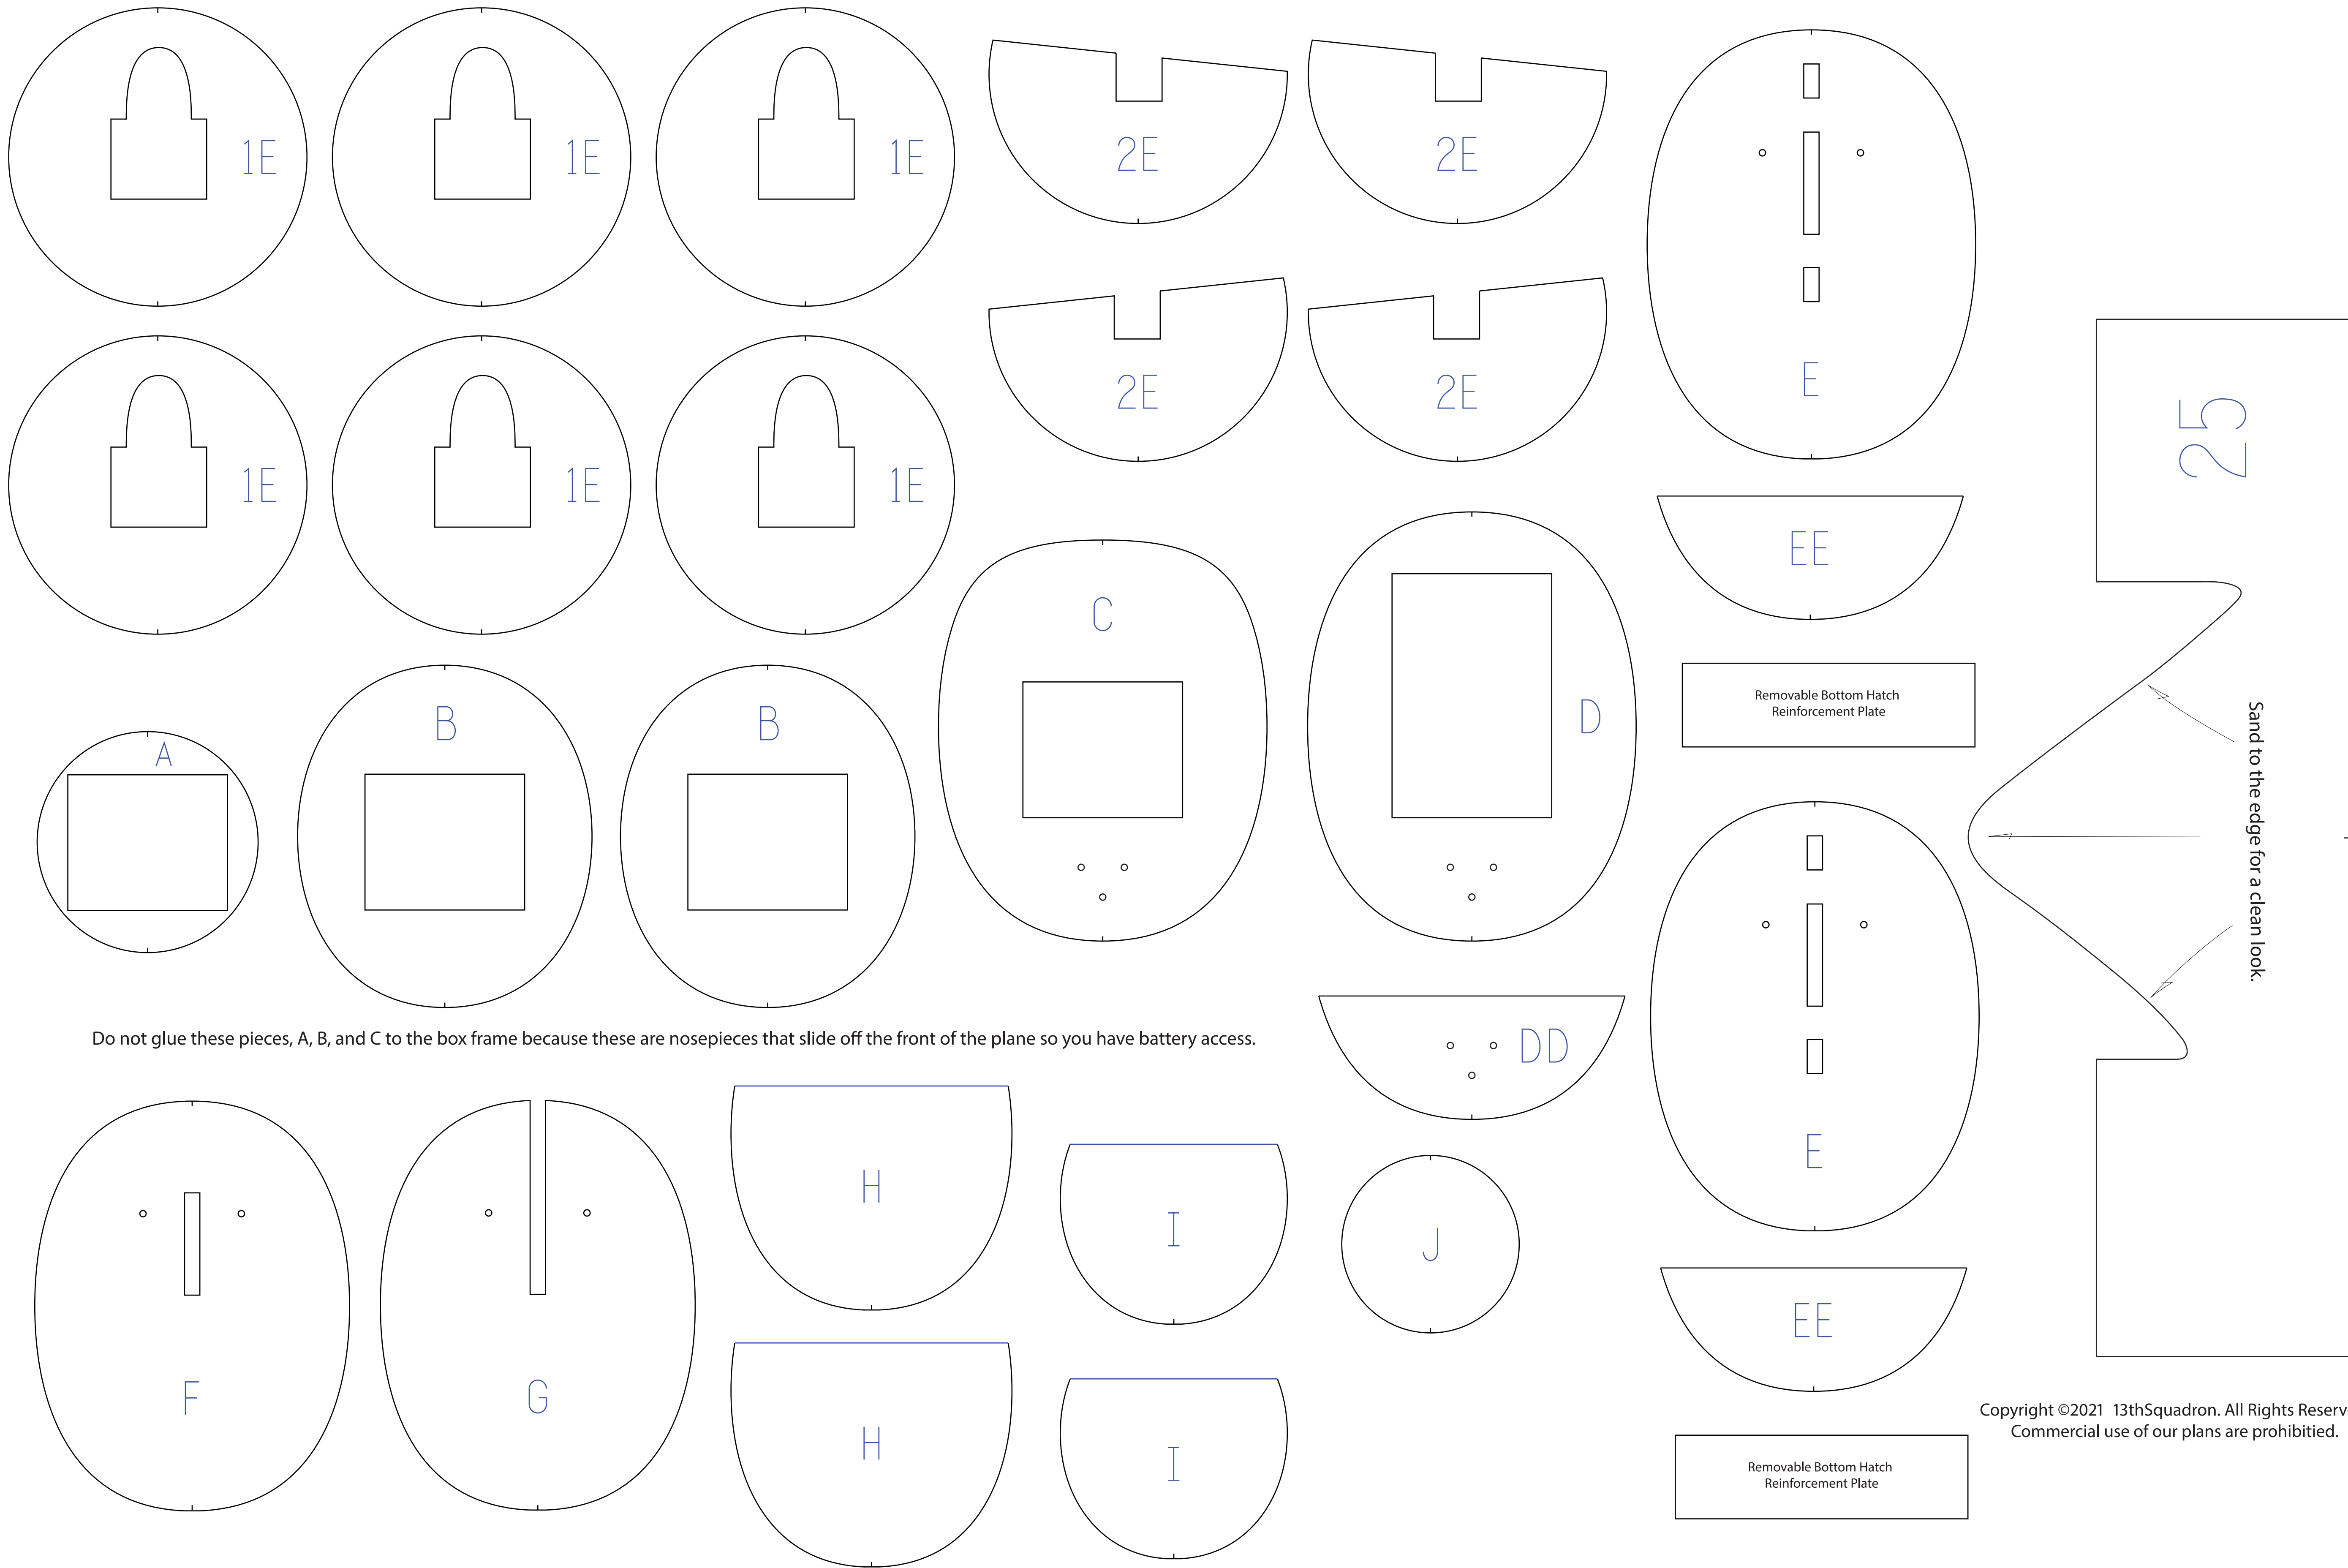

Do not glue these pieces, A, B, and C to the box frame because these are nosepieces that slide off the front of the plane so you have battery access.

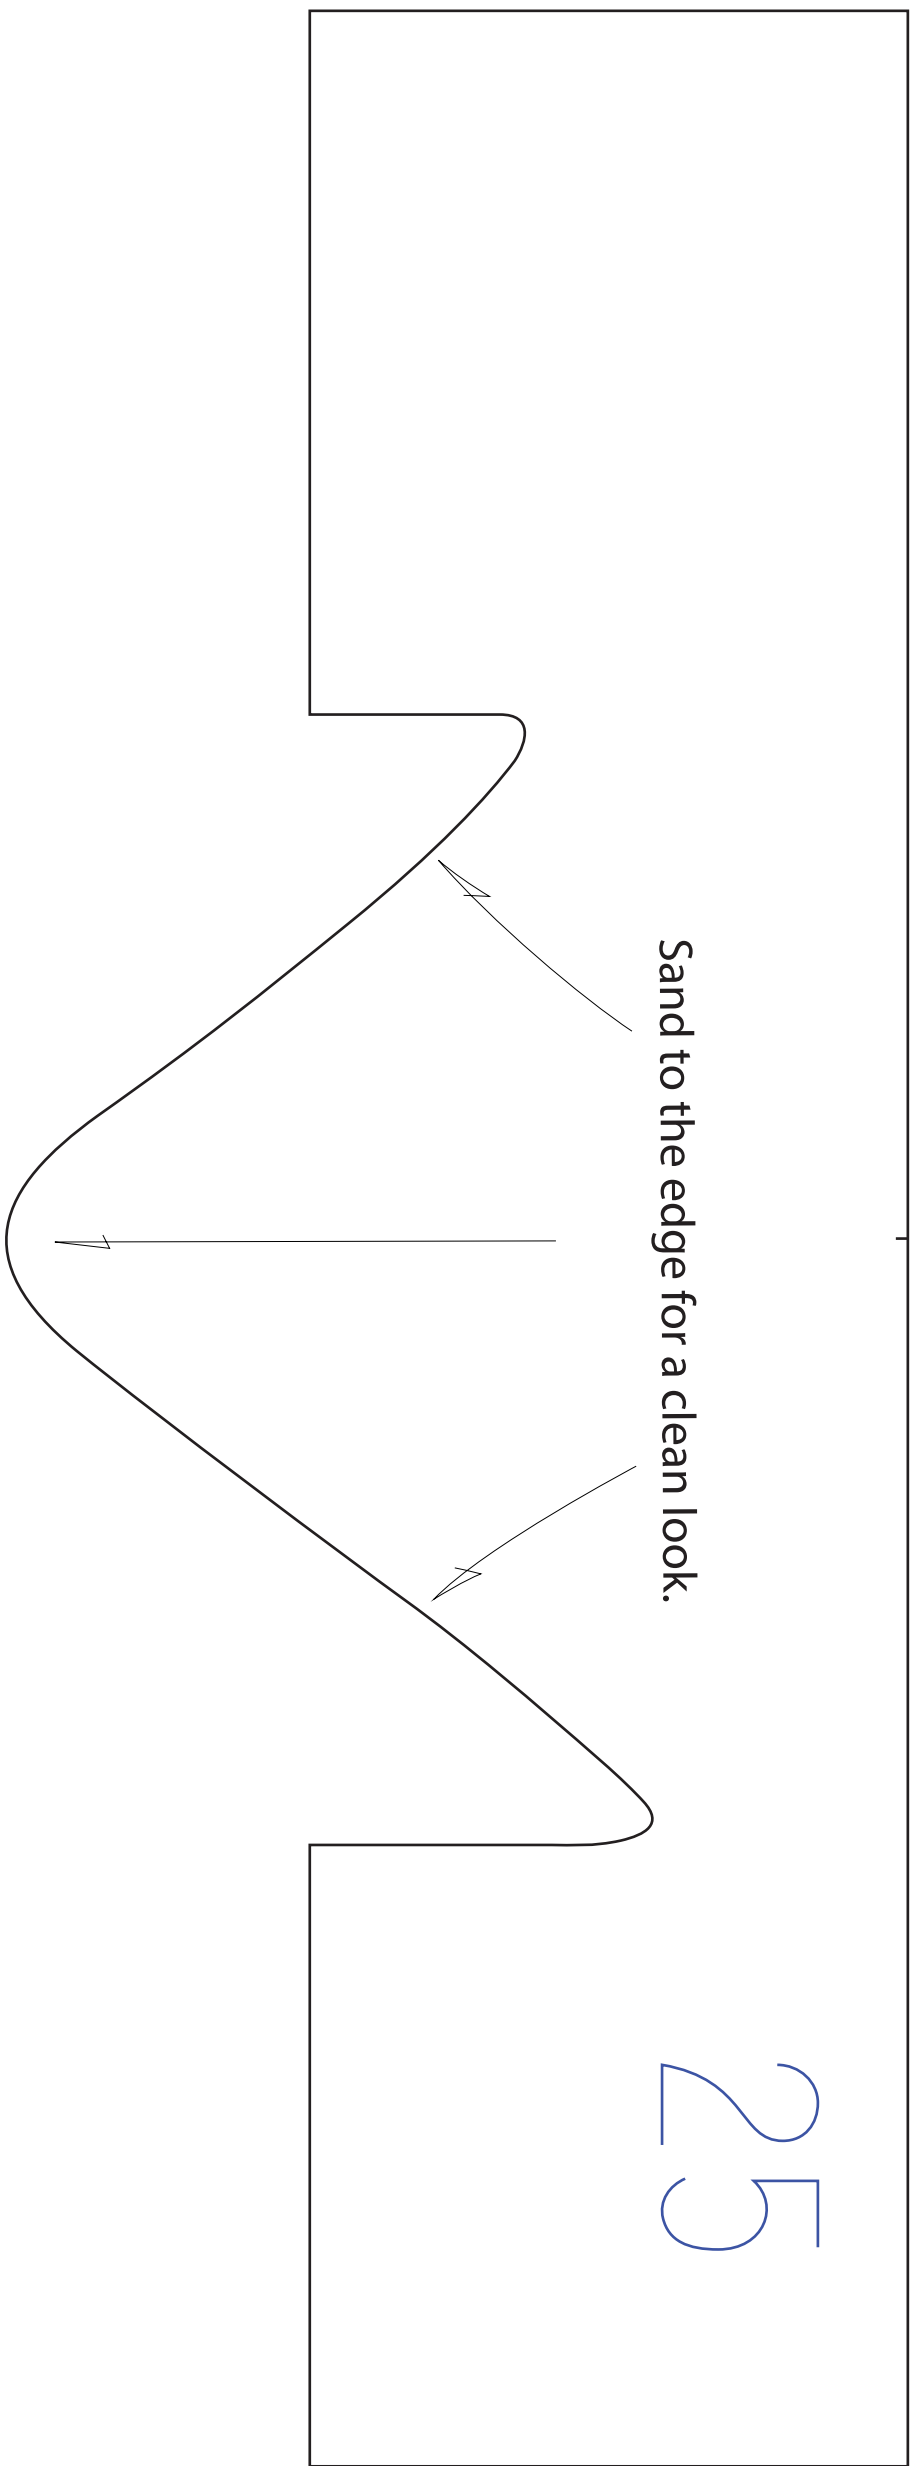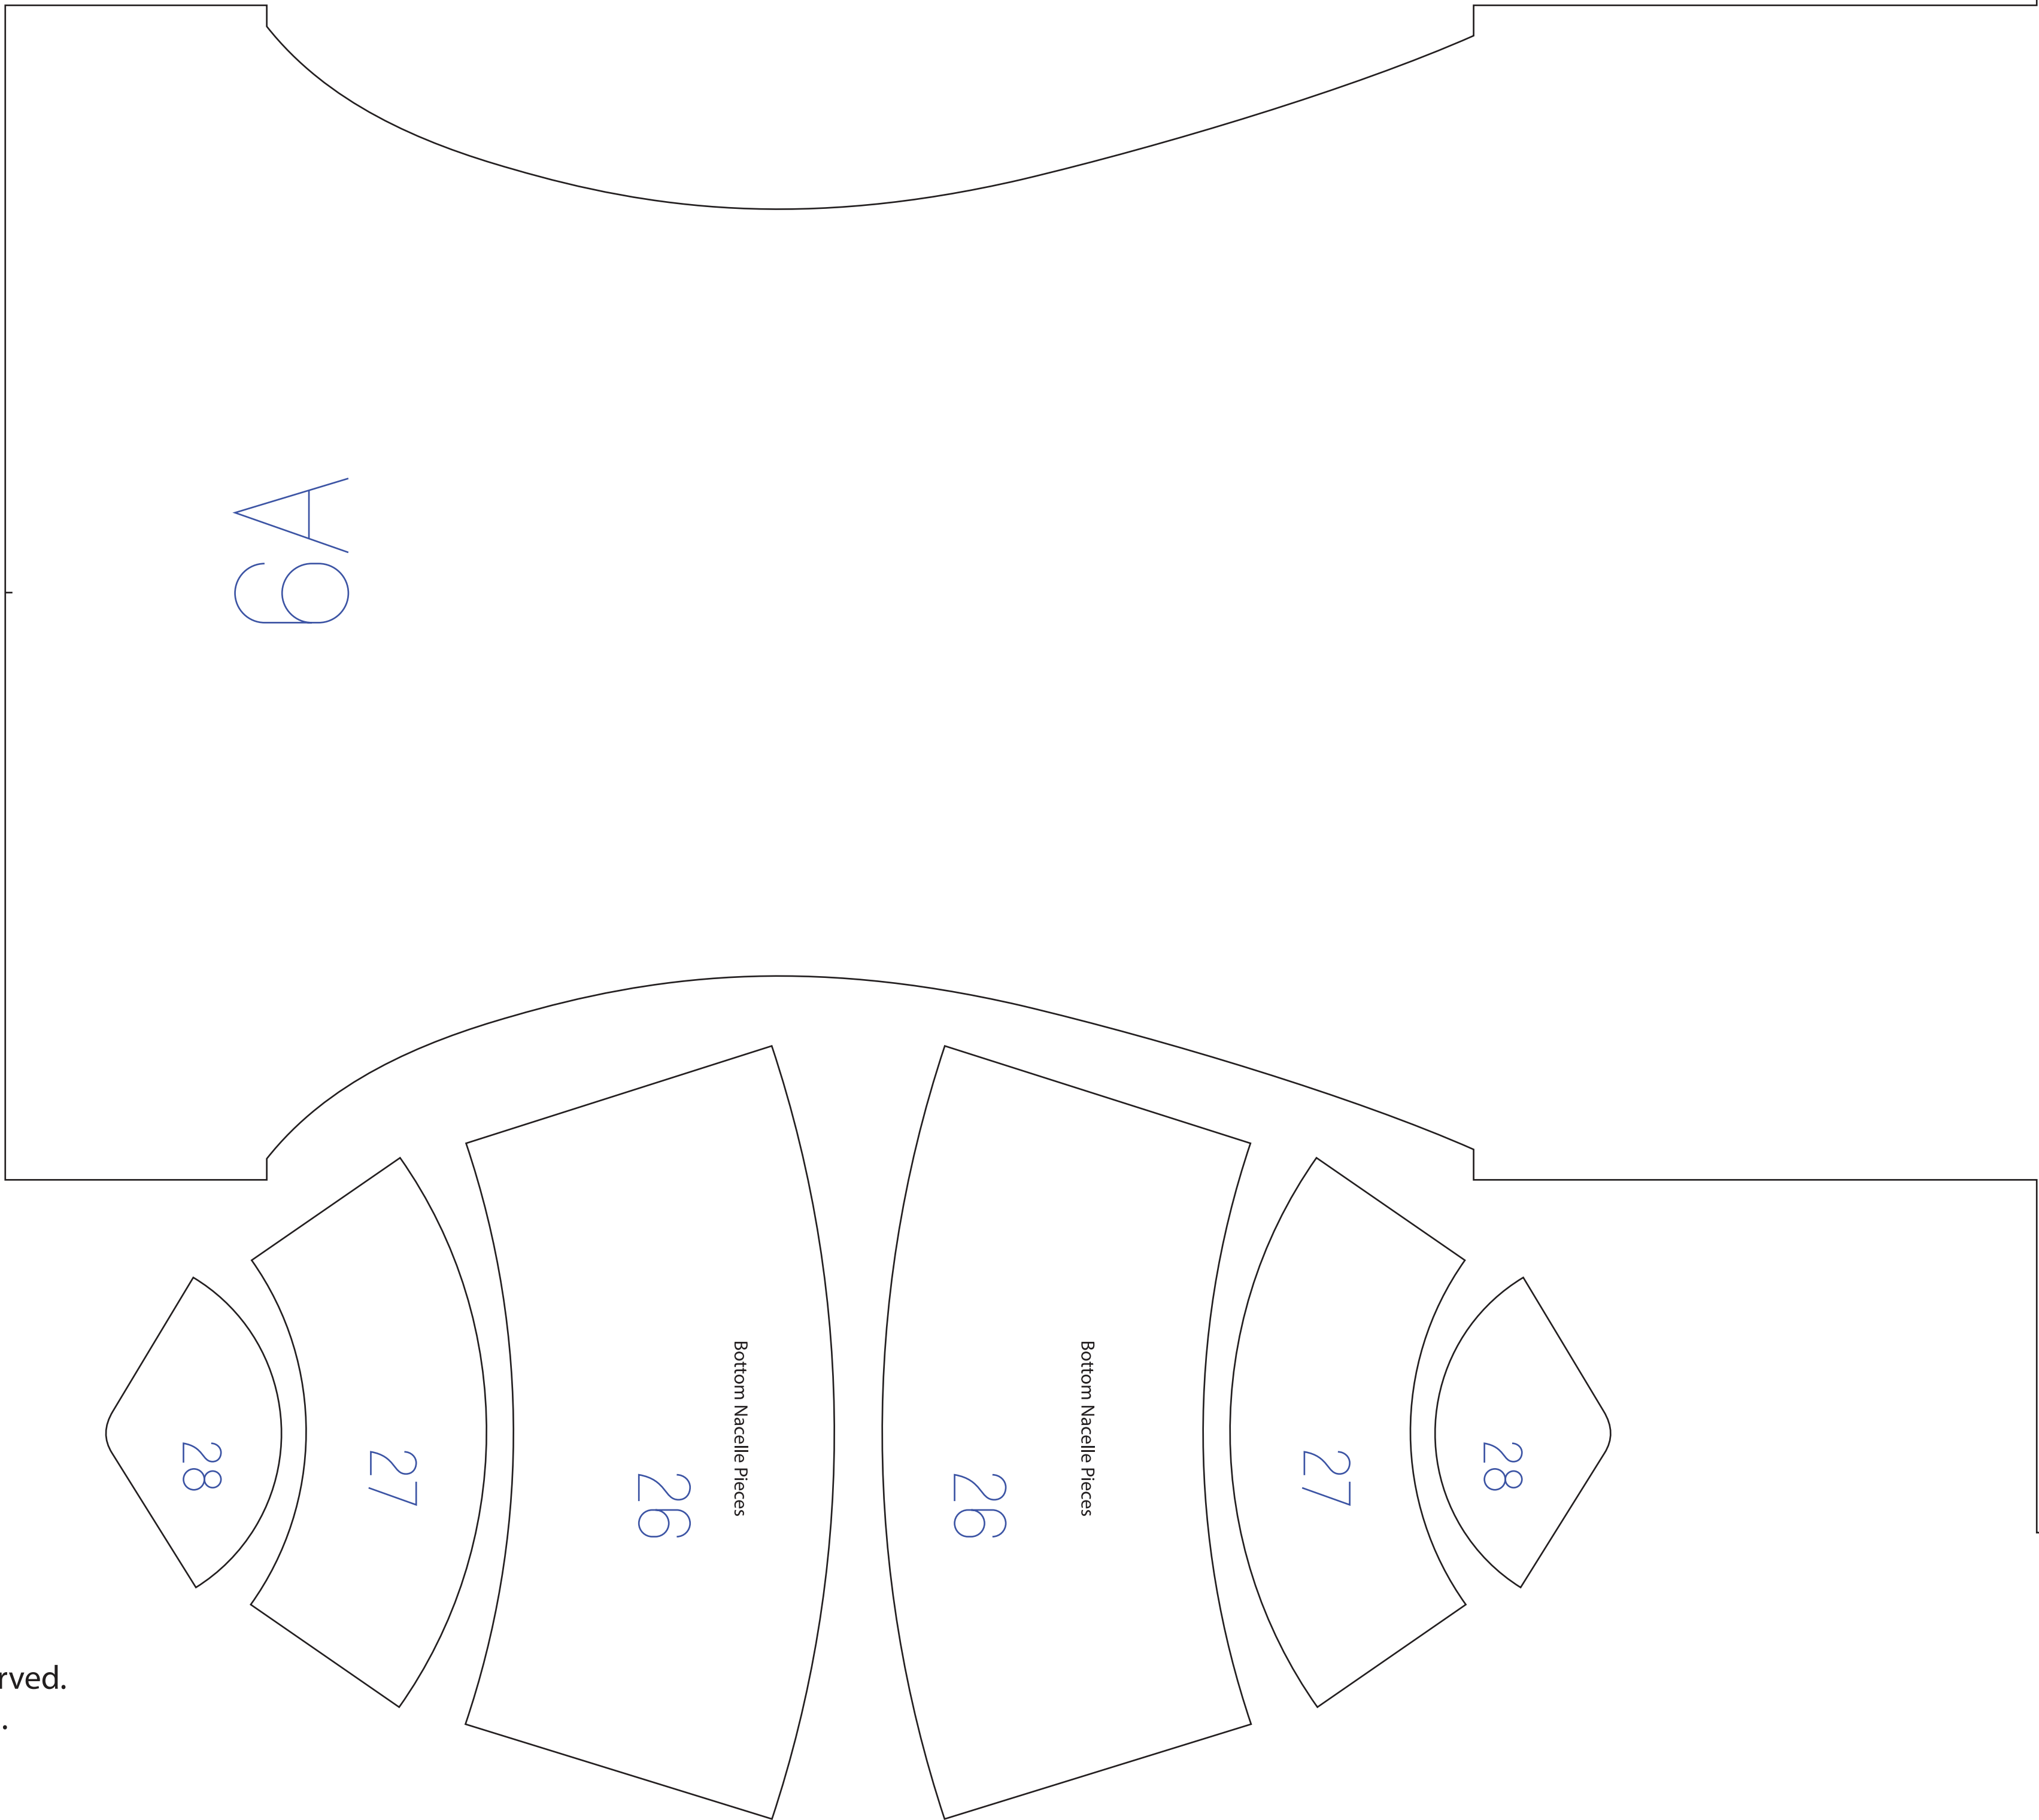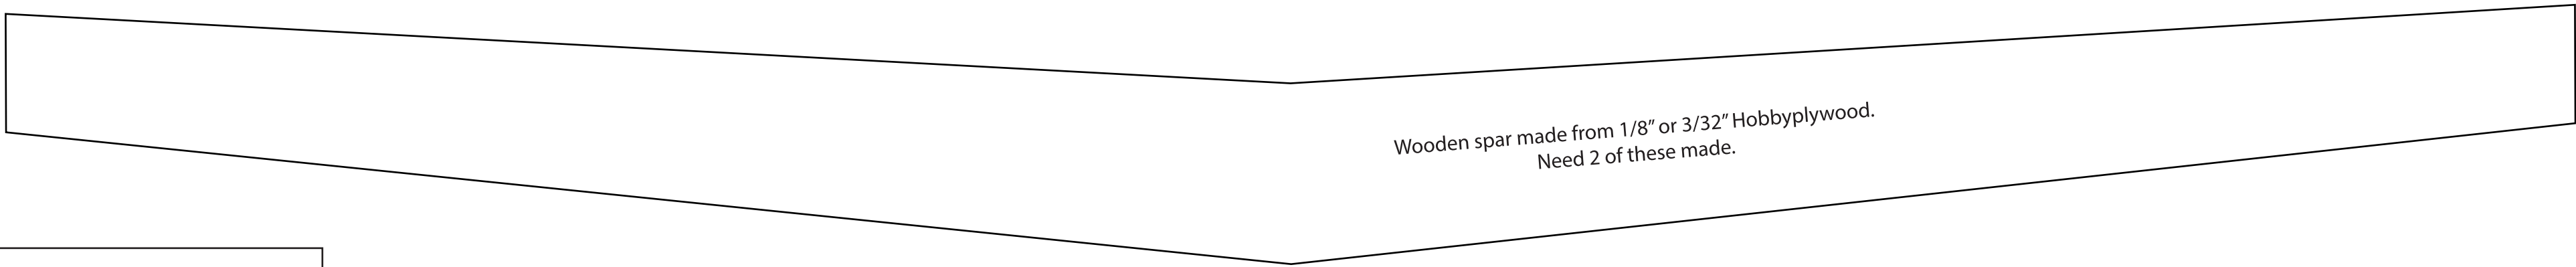

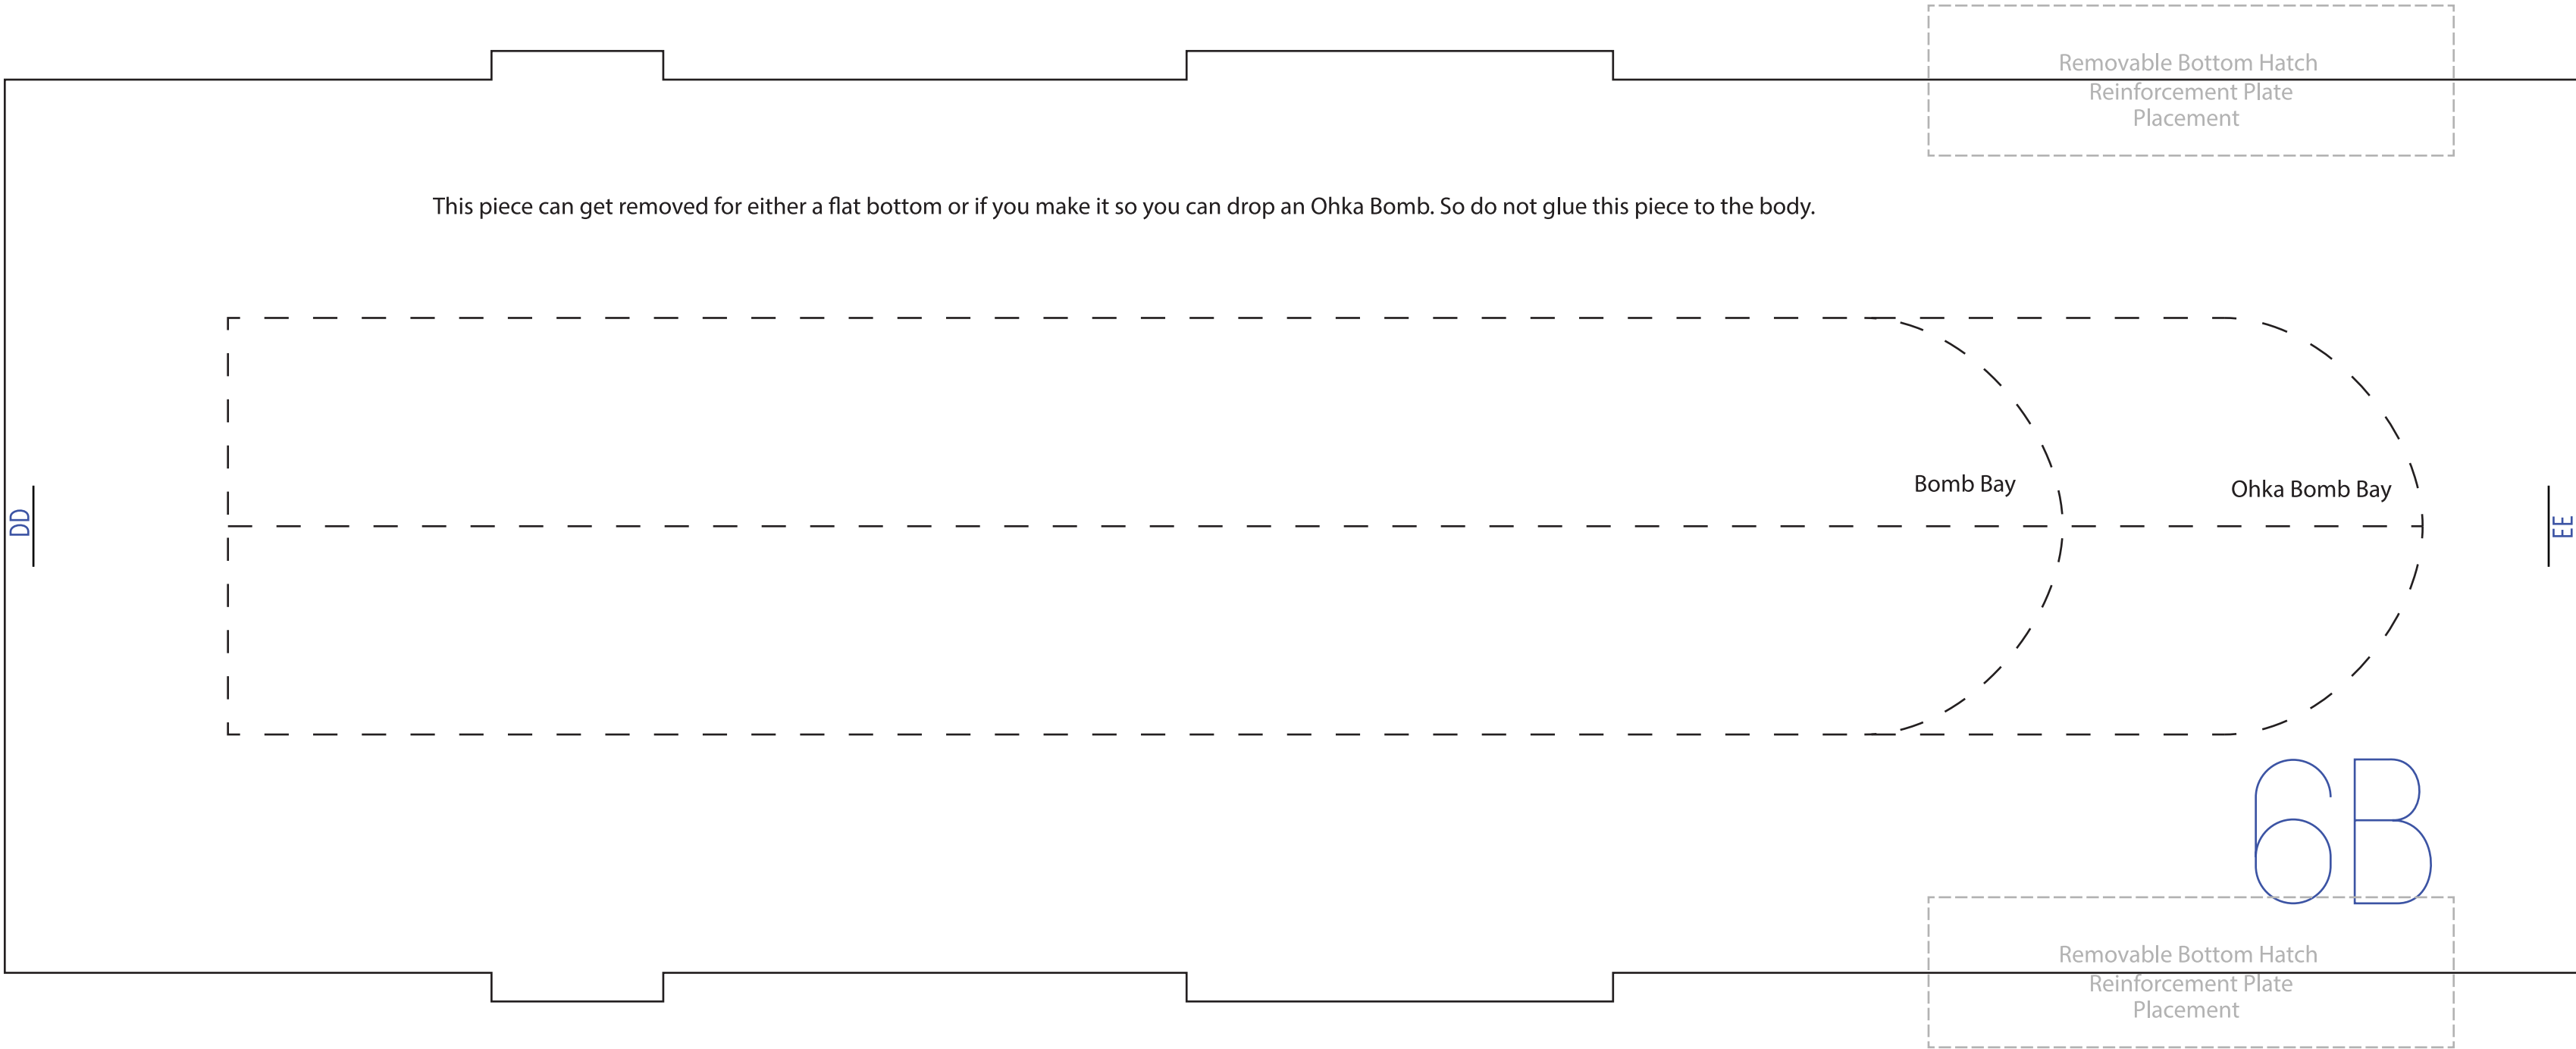

Copyright ©2021 13thSquadron. All Rights Reserved.
Commercial use of our plans are prohibited.

