


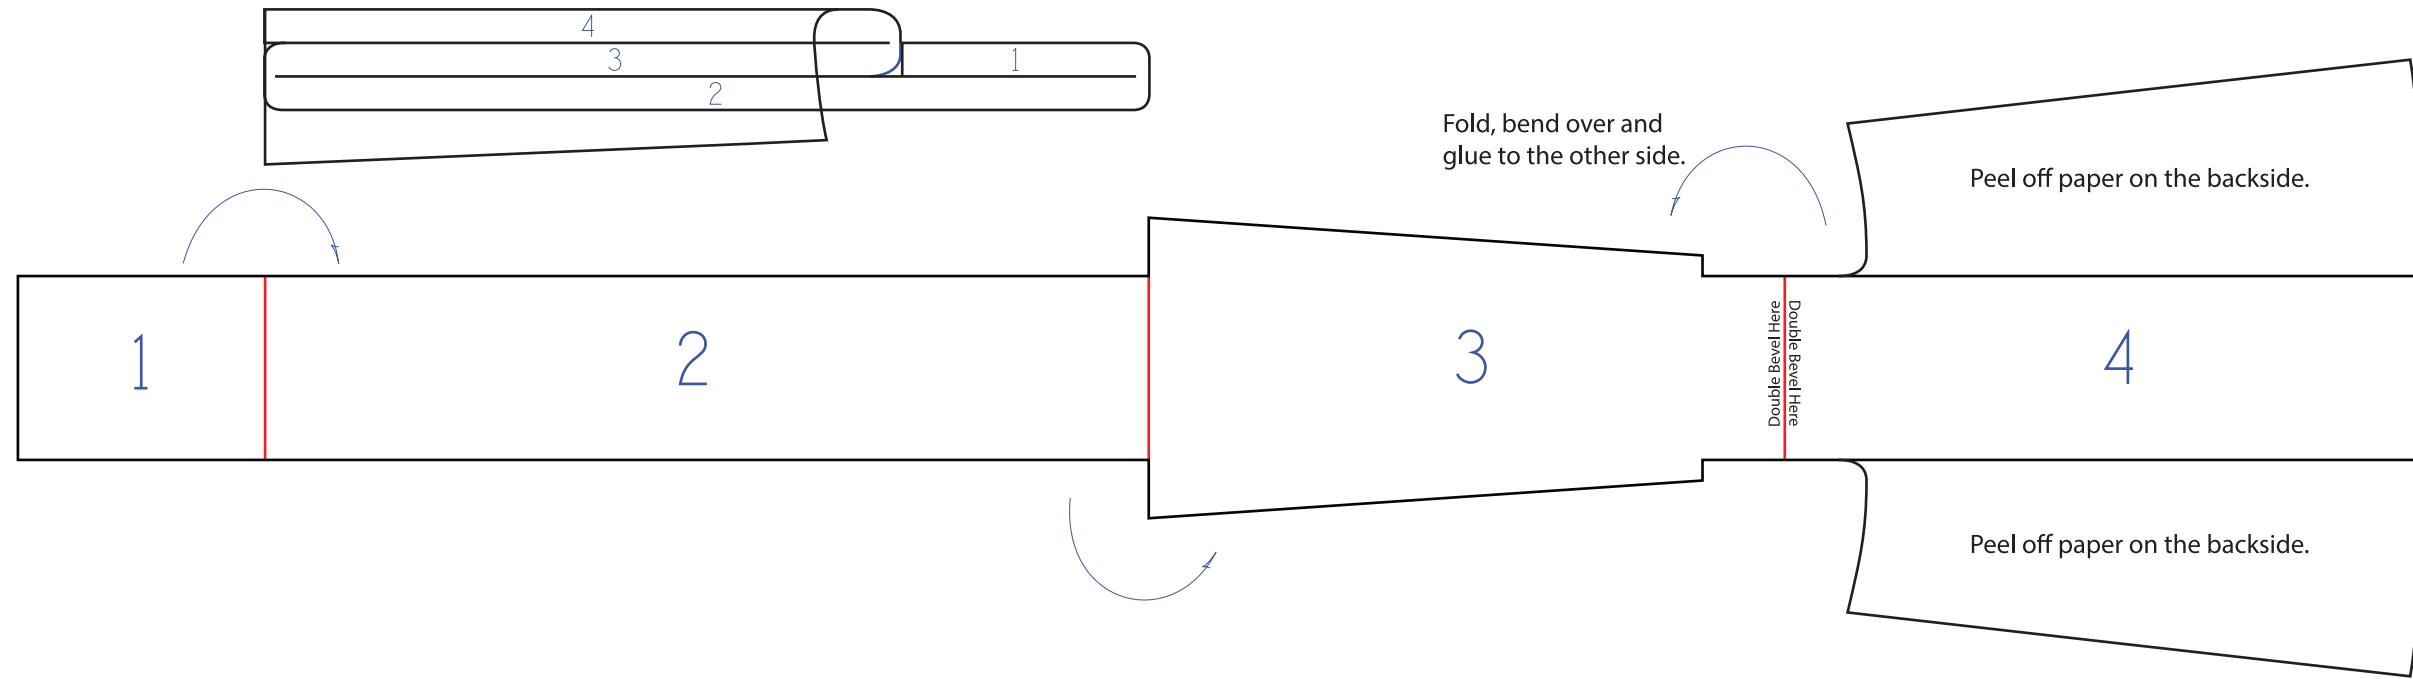
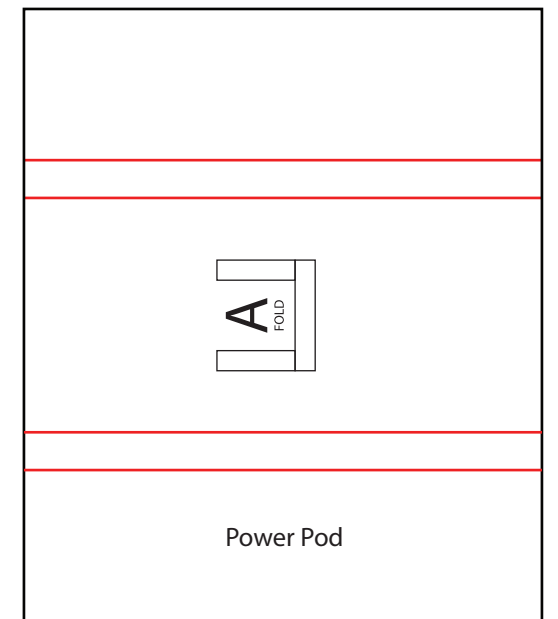
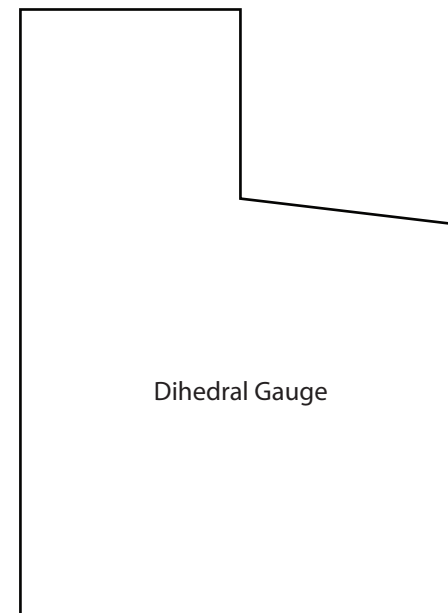


Side view of Hatch / Canopy piece.

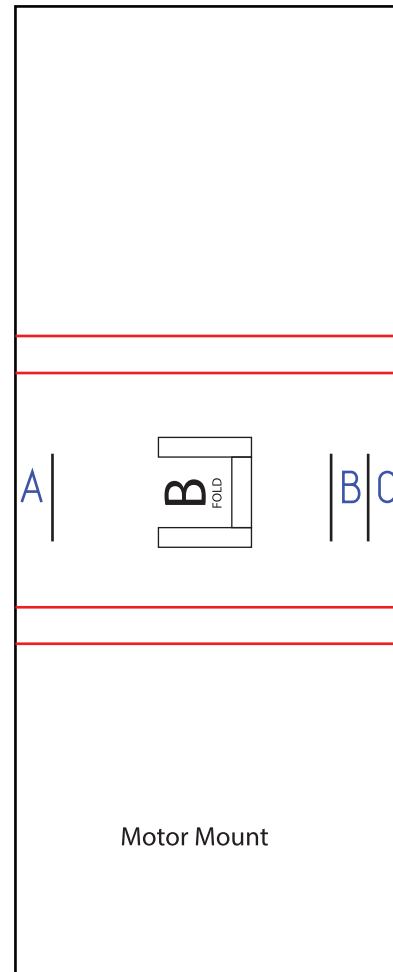


Glue to "D" formers first

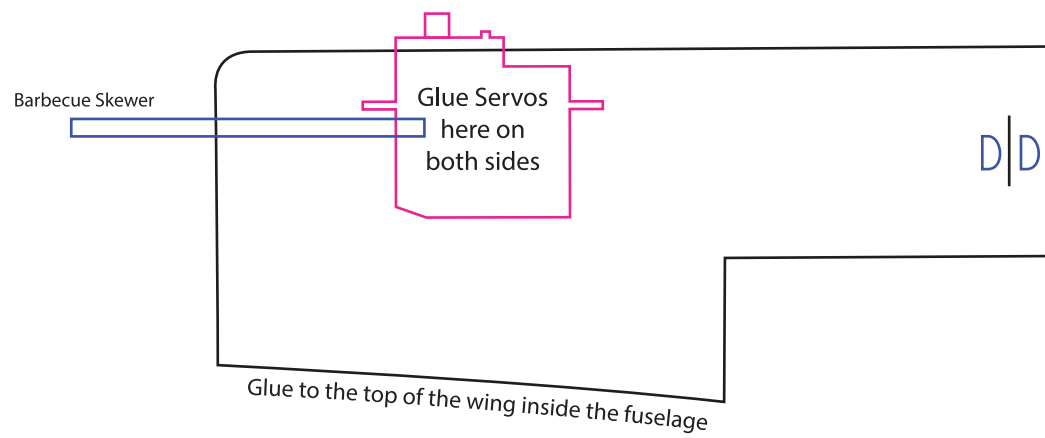

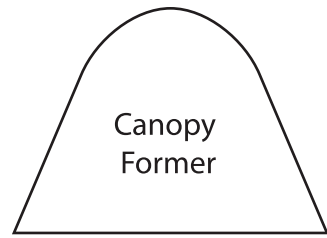



Canopy Former

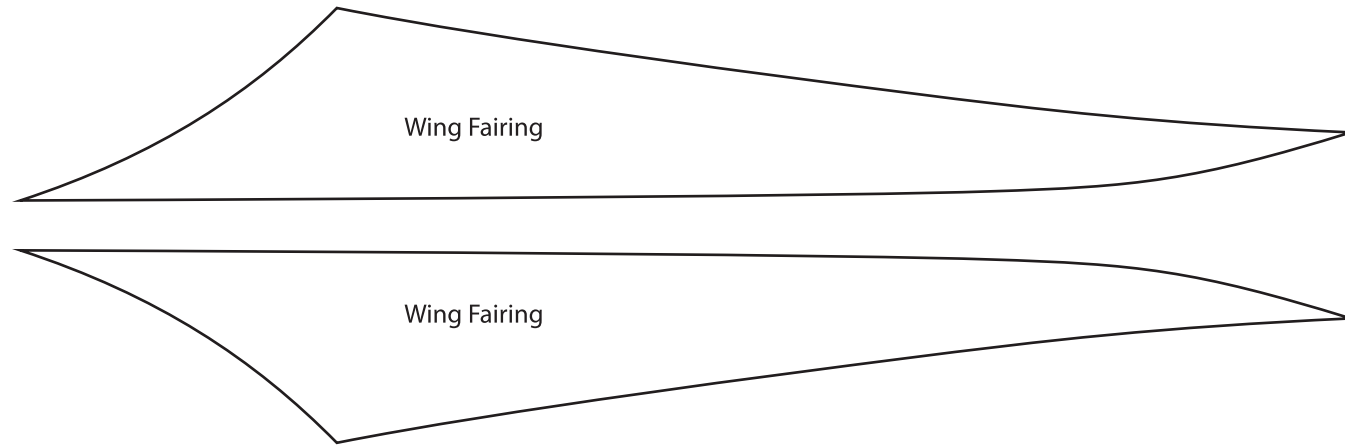


Wing Fairing

Wing Fairing


Exhaust Pieces
(Flatten the foam in a vice to make thinner.)

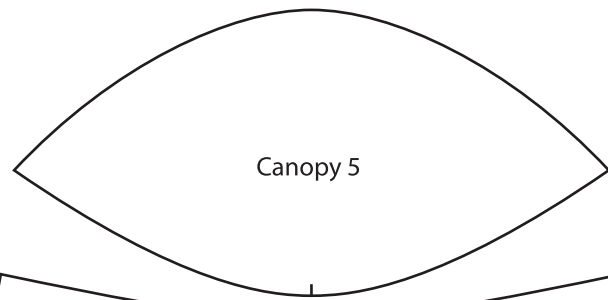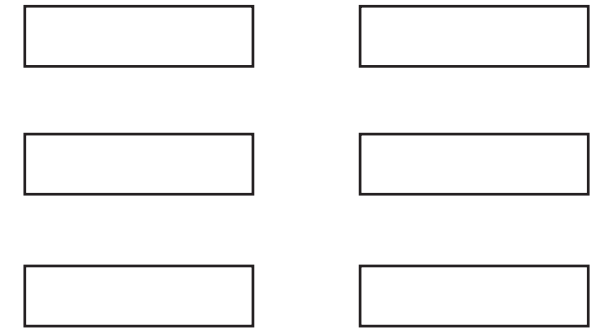


Canopy 5

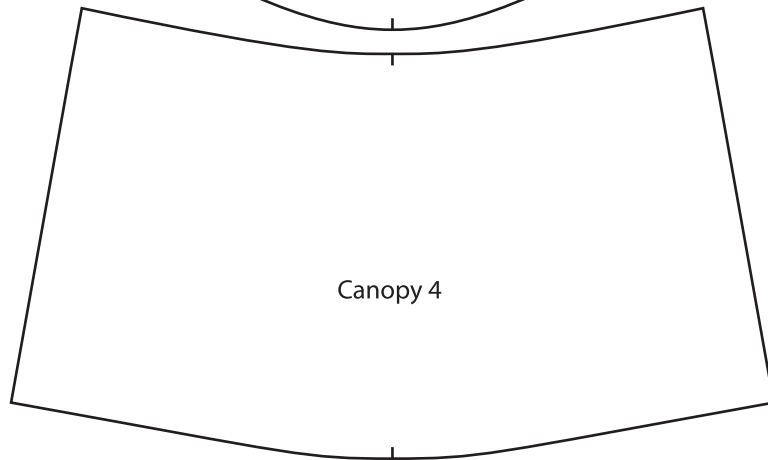

Canopy 4

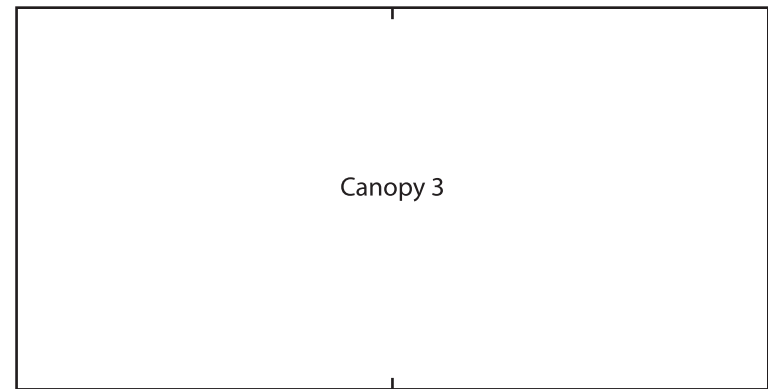


Canopy 3

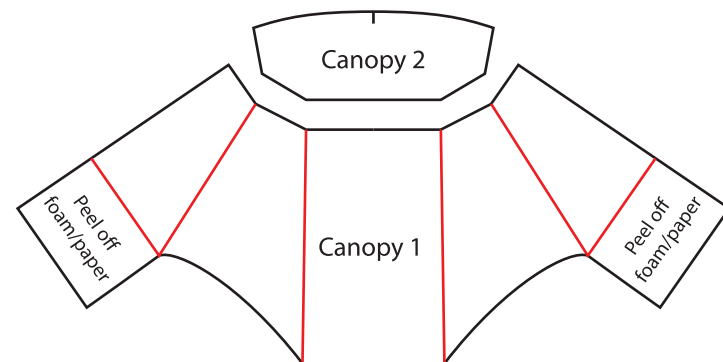


Canopy 2


Canopy 1

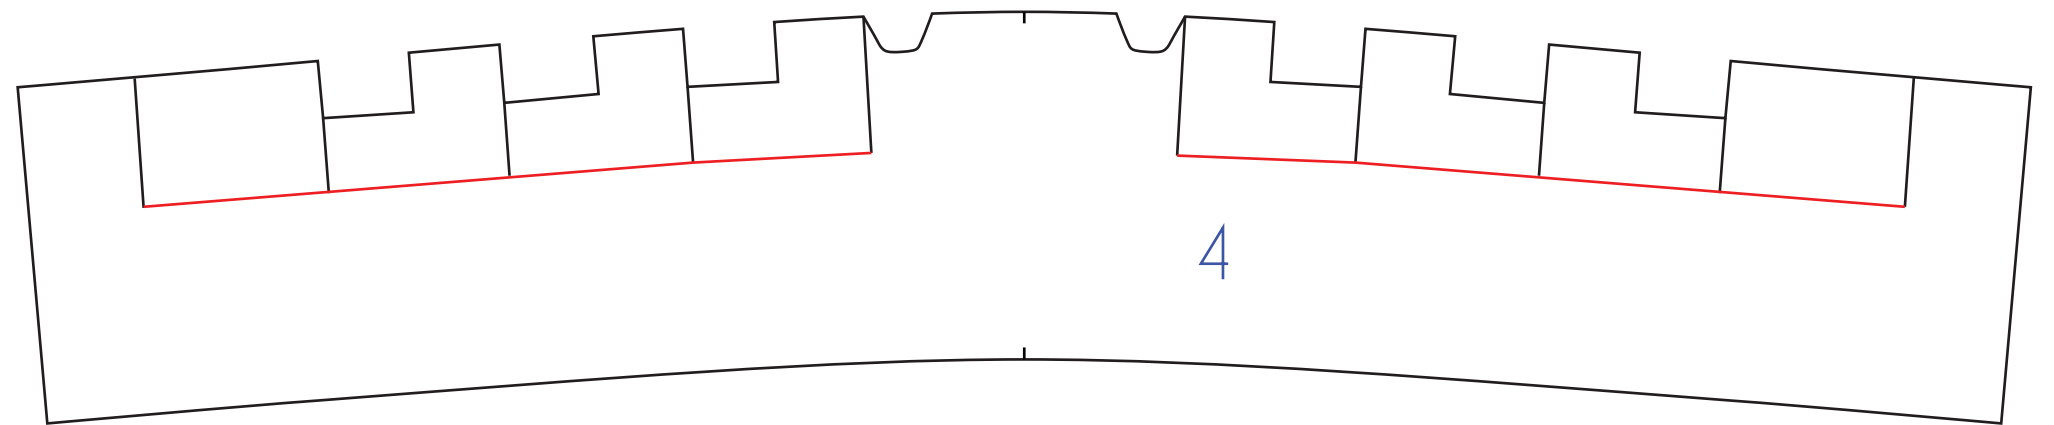

4

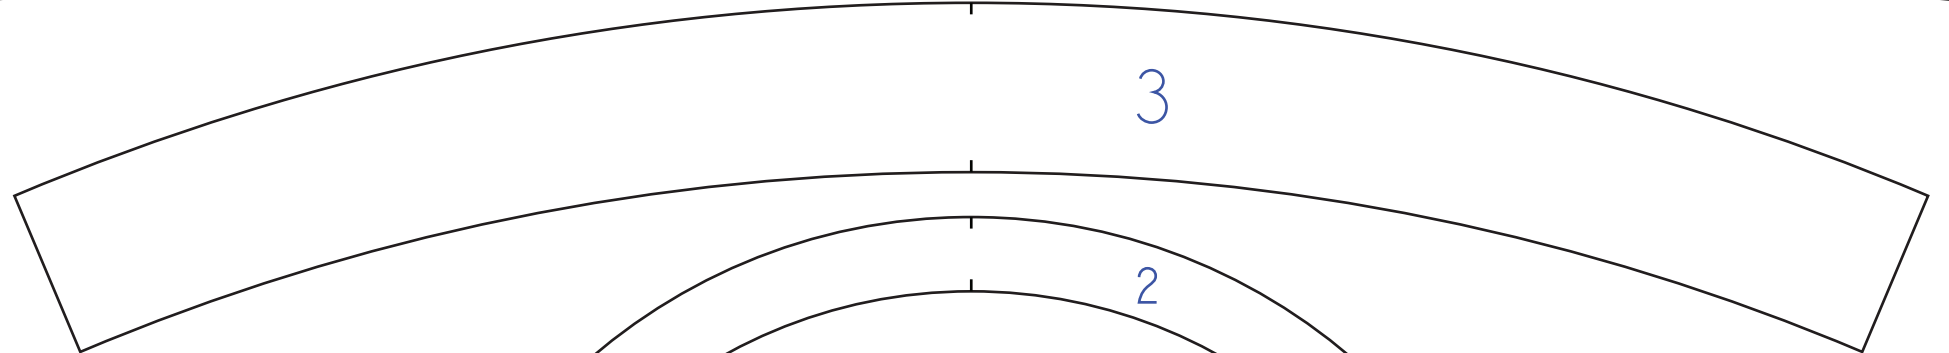








3

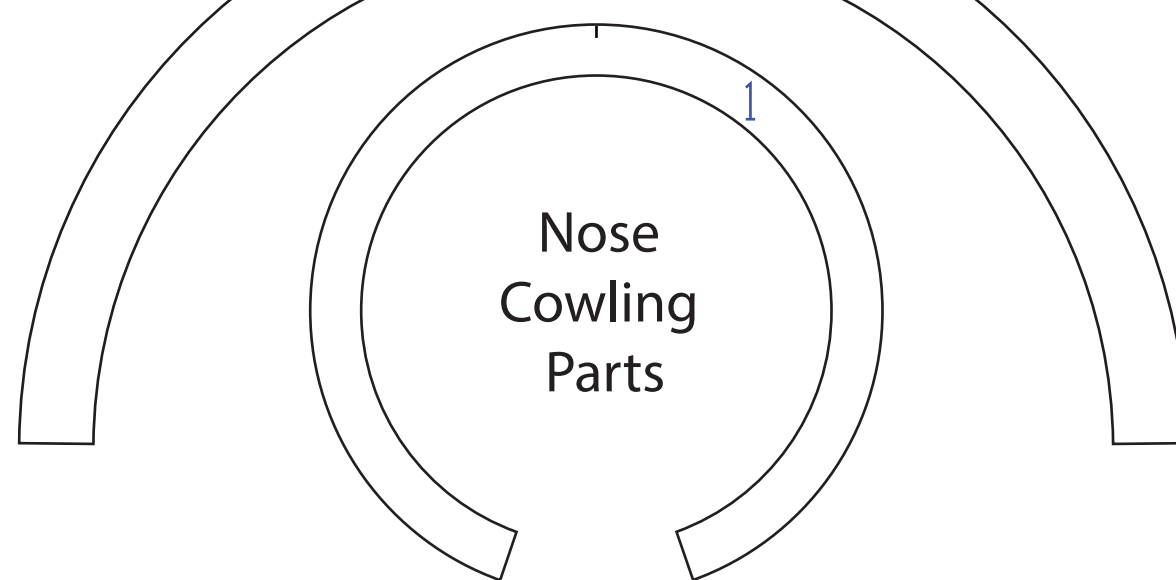



1


2

Nose Cowling Parts

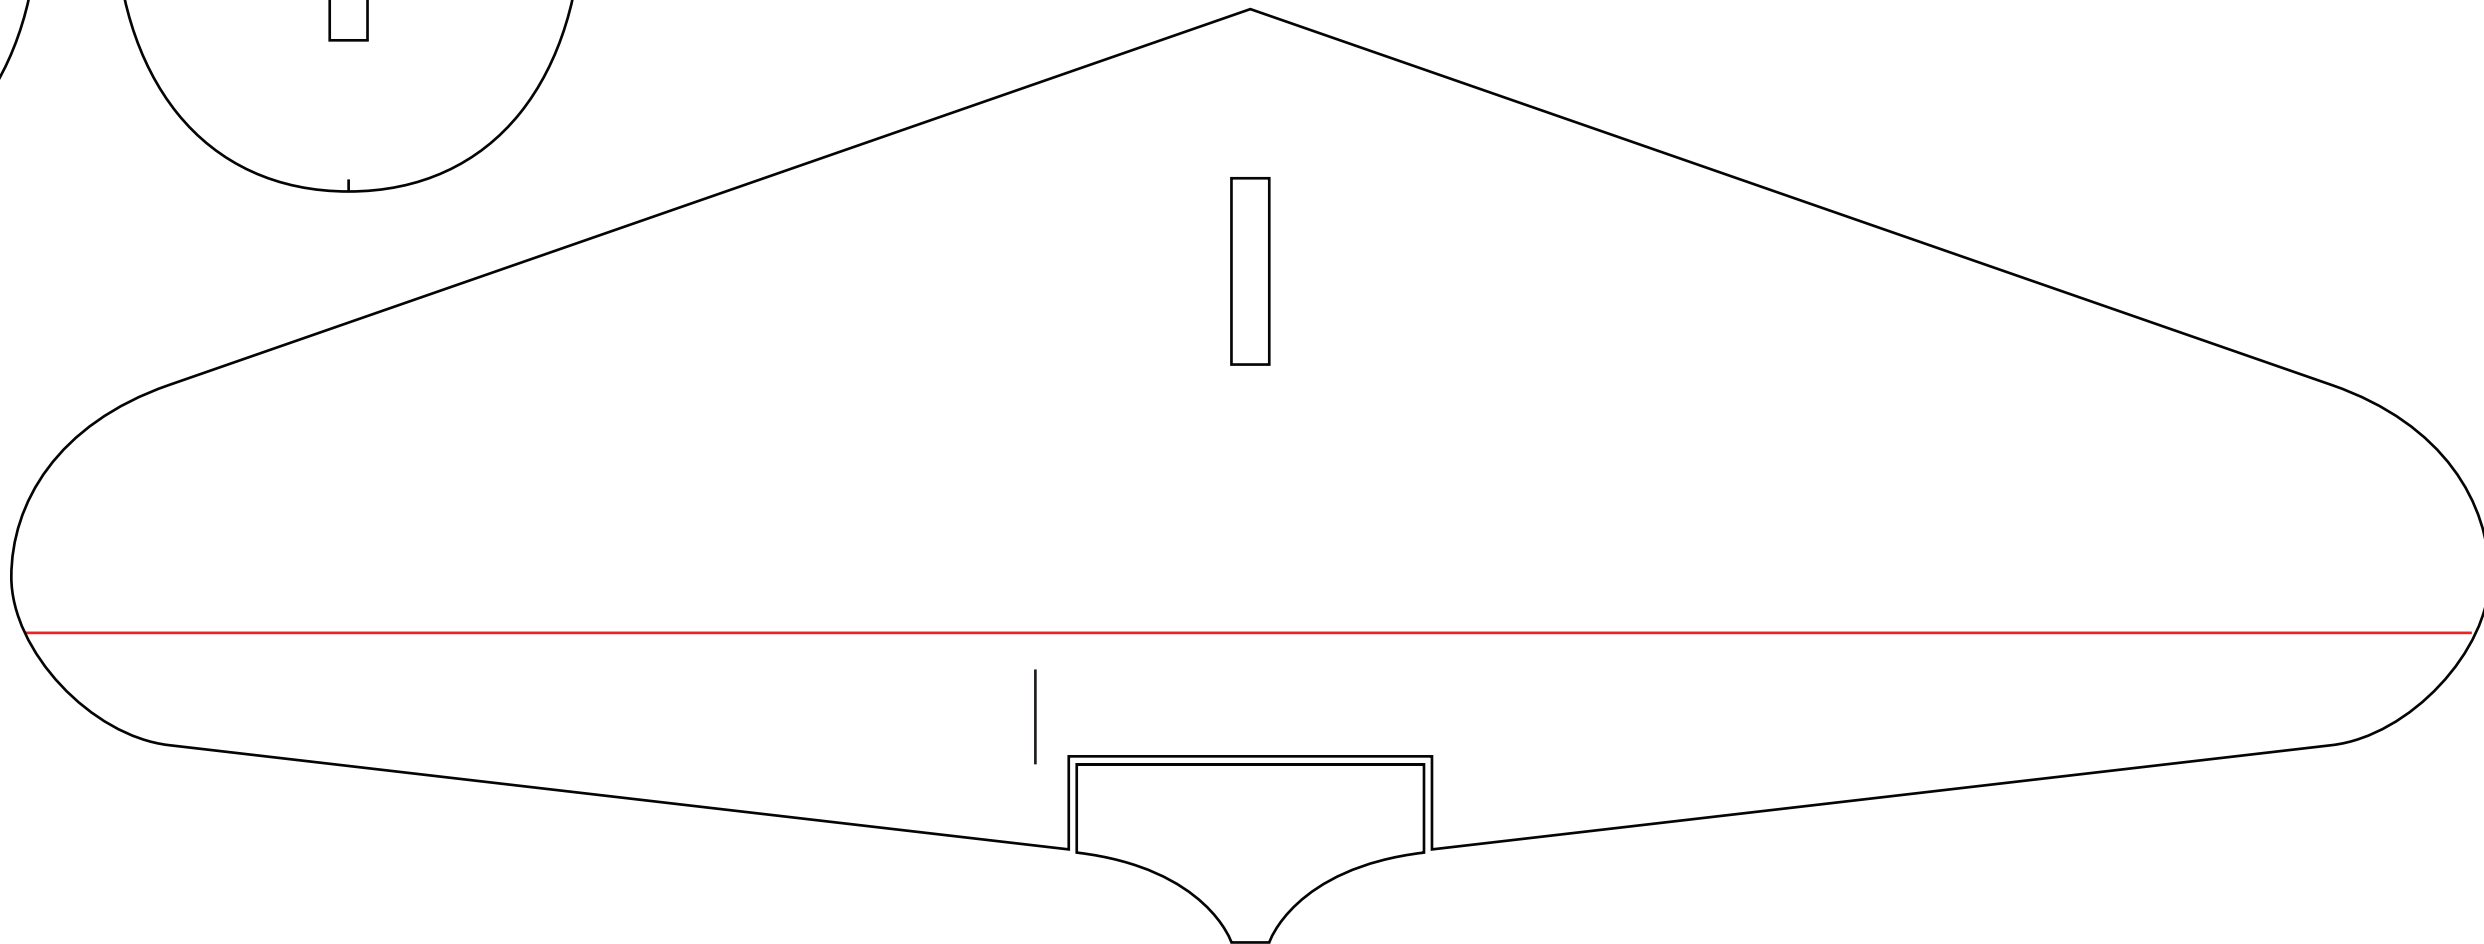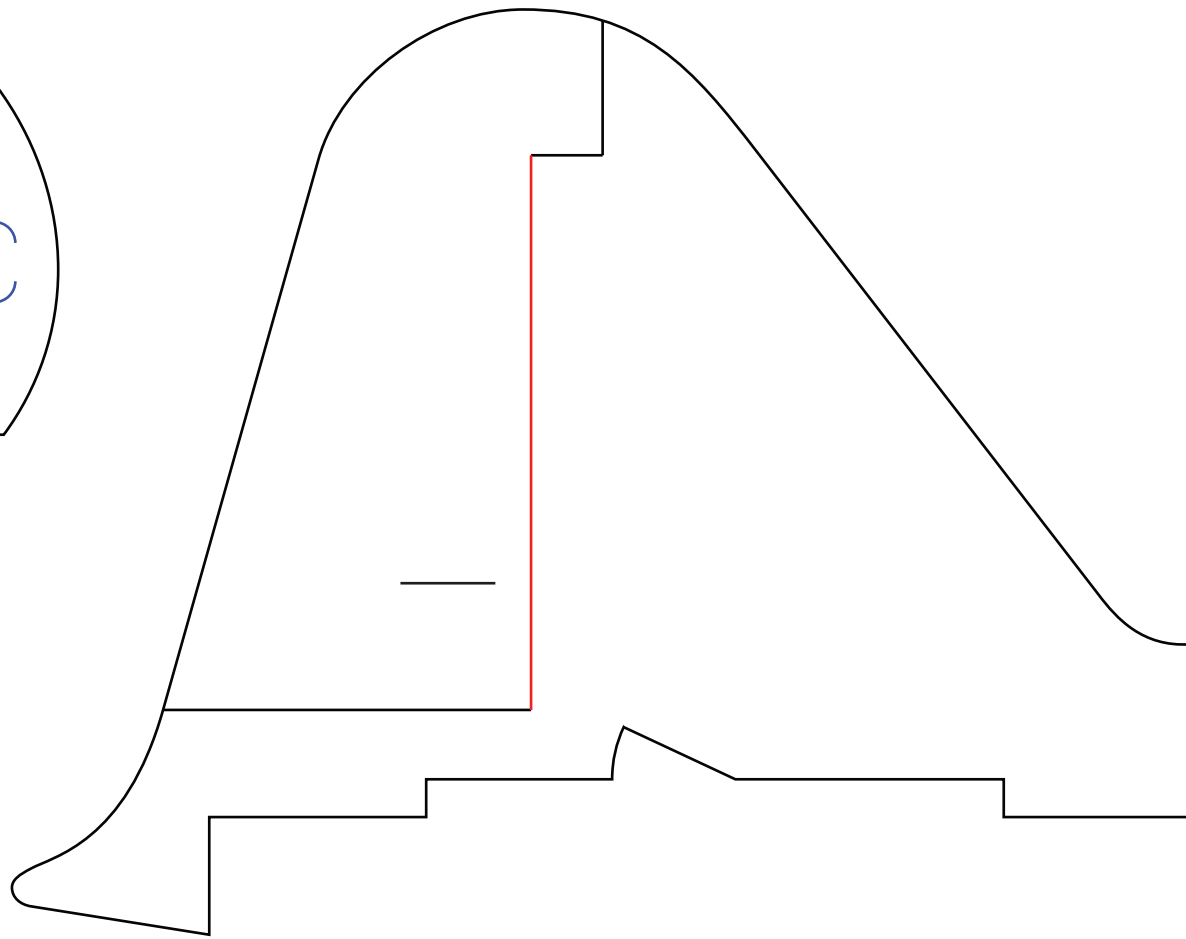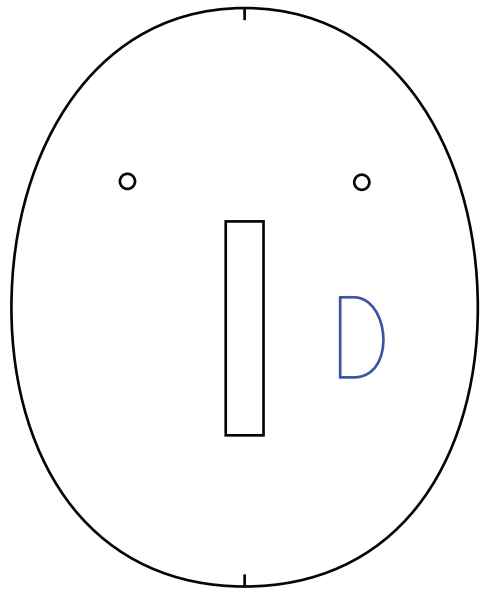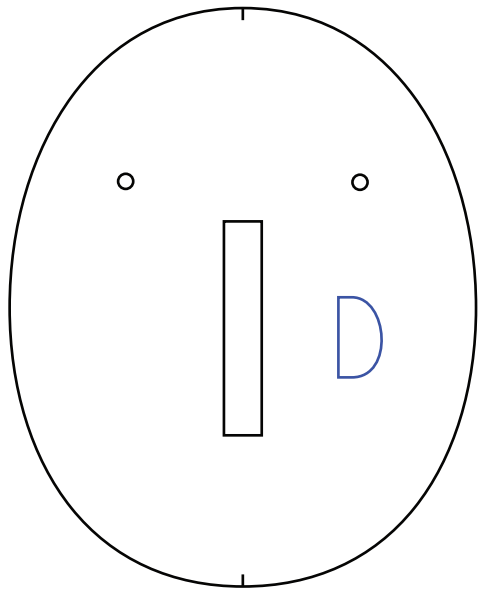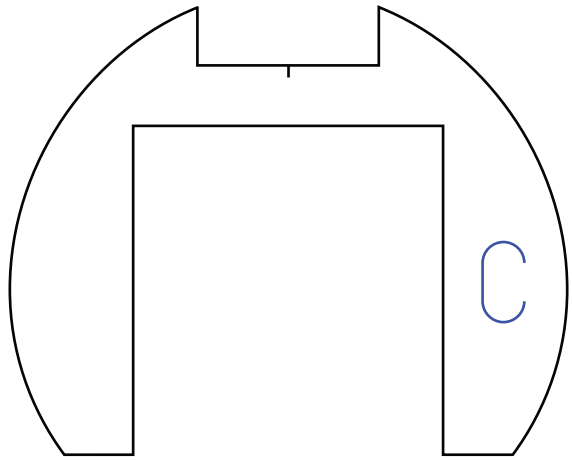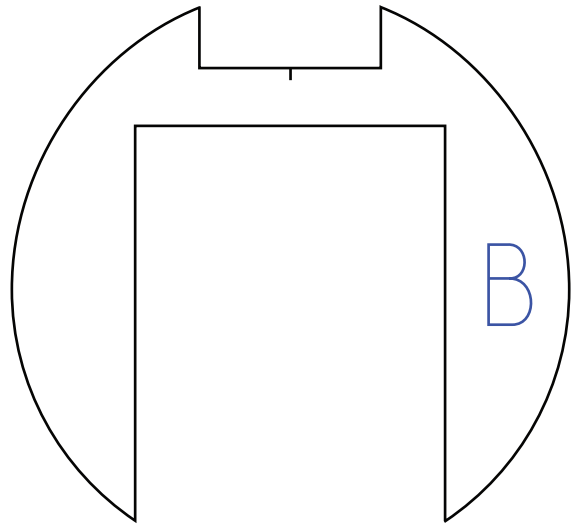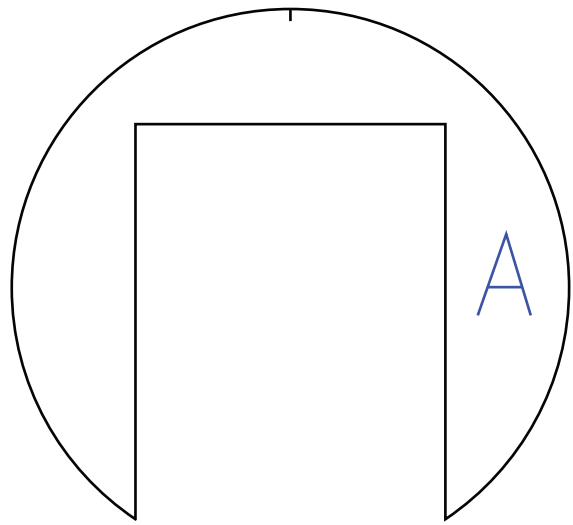


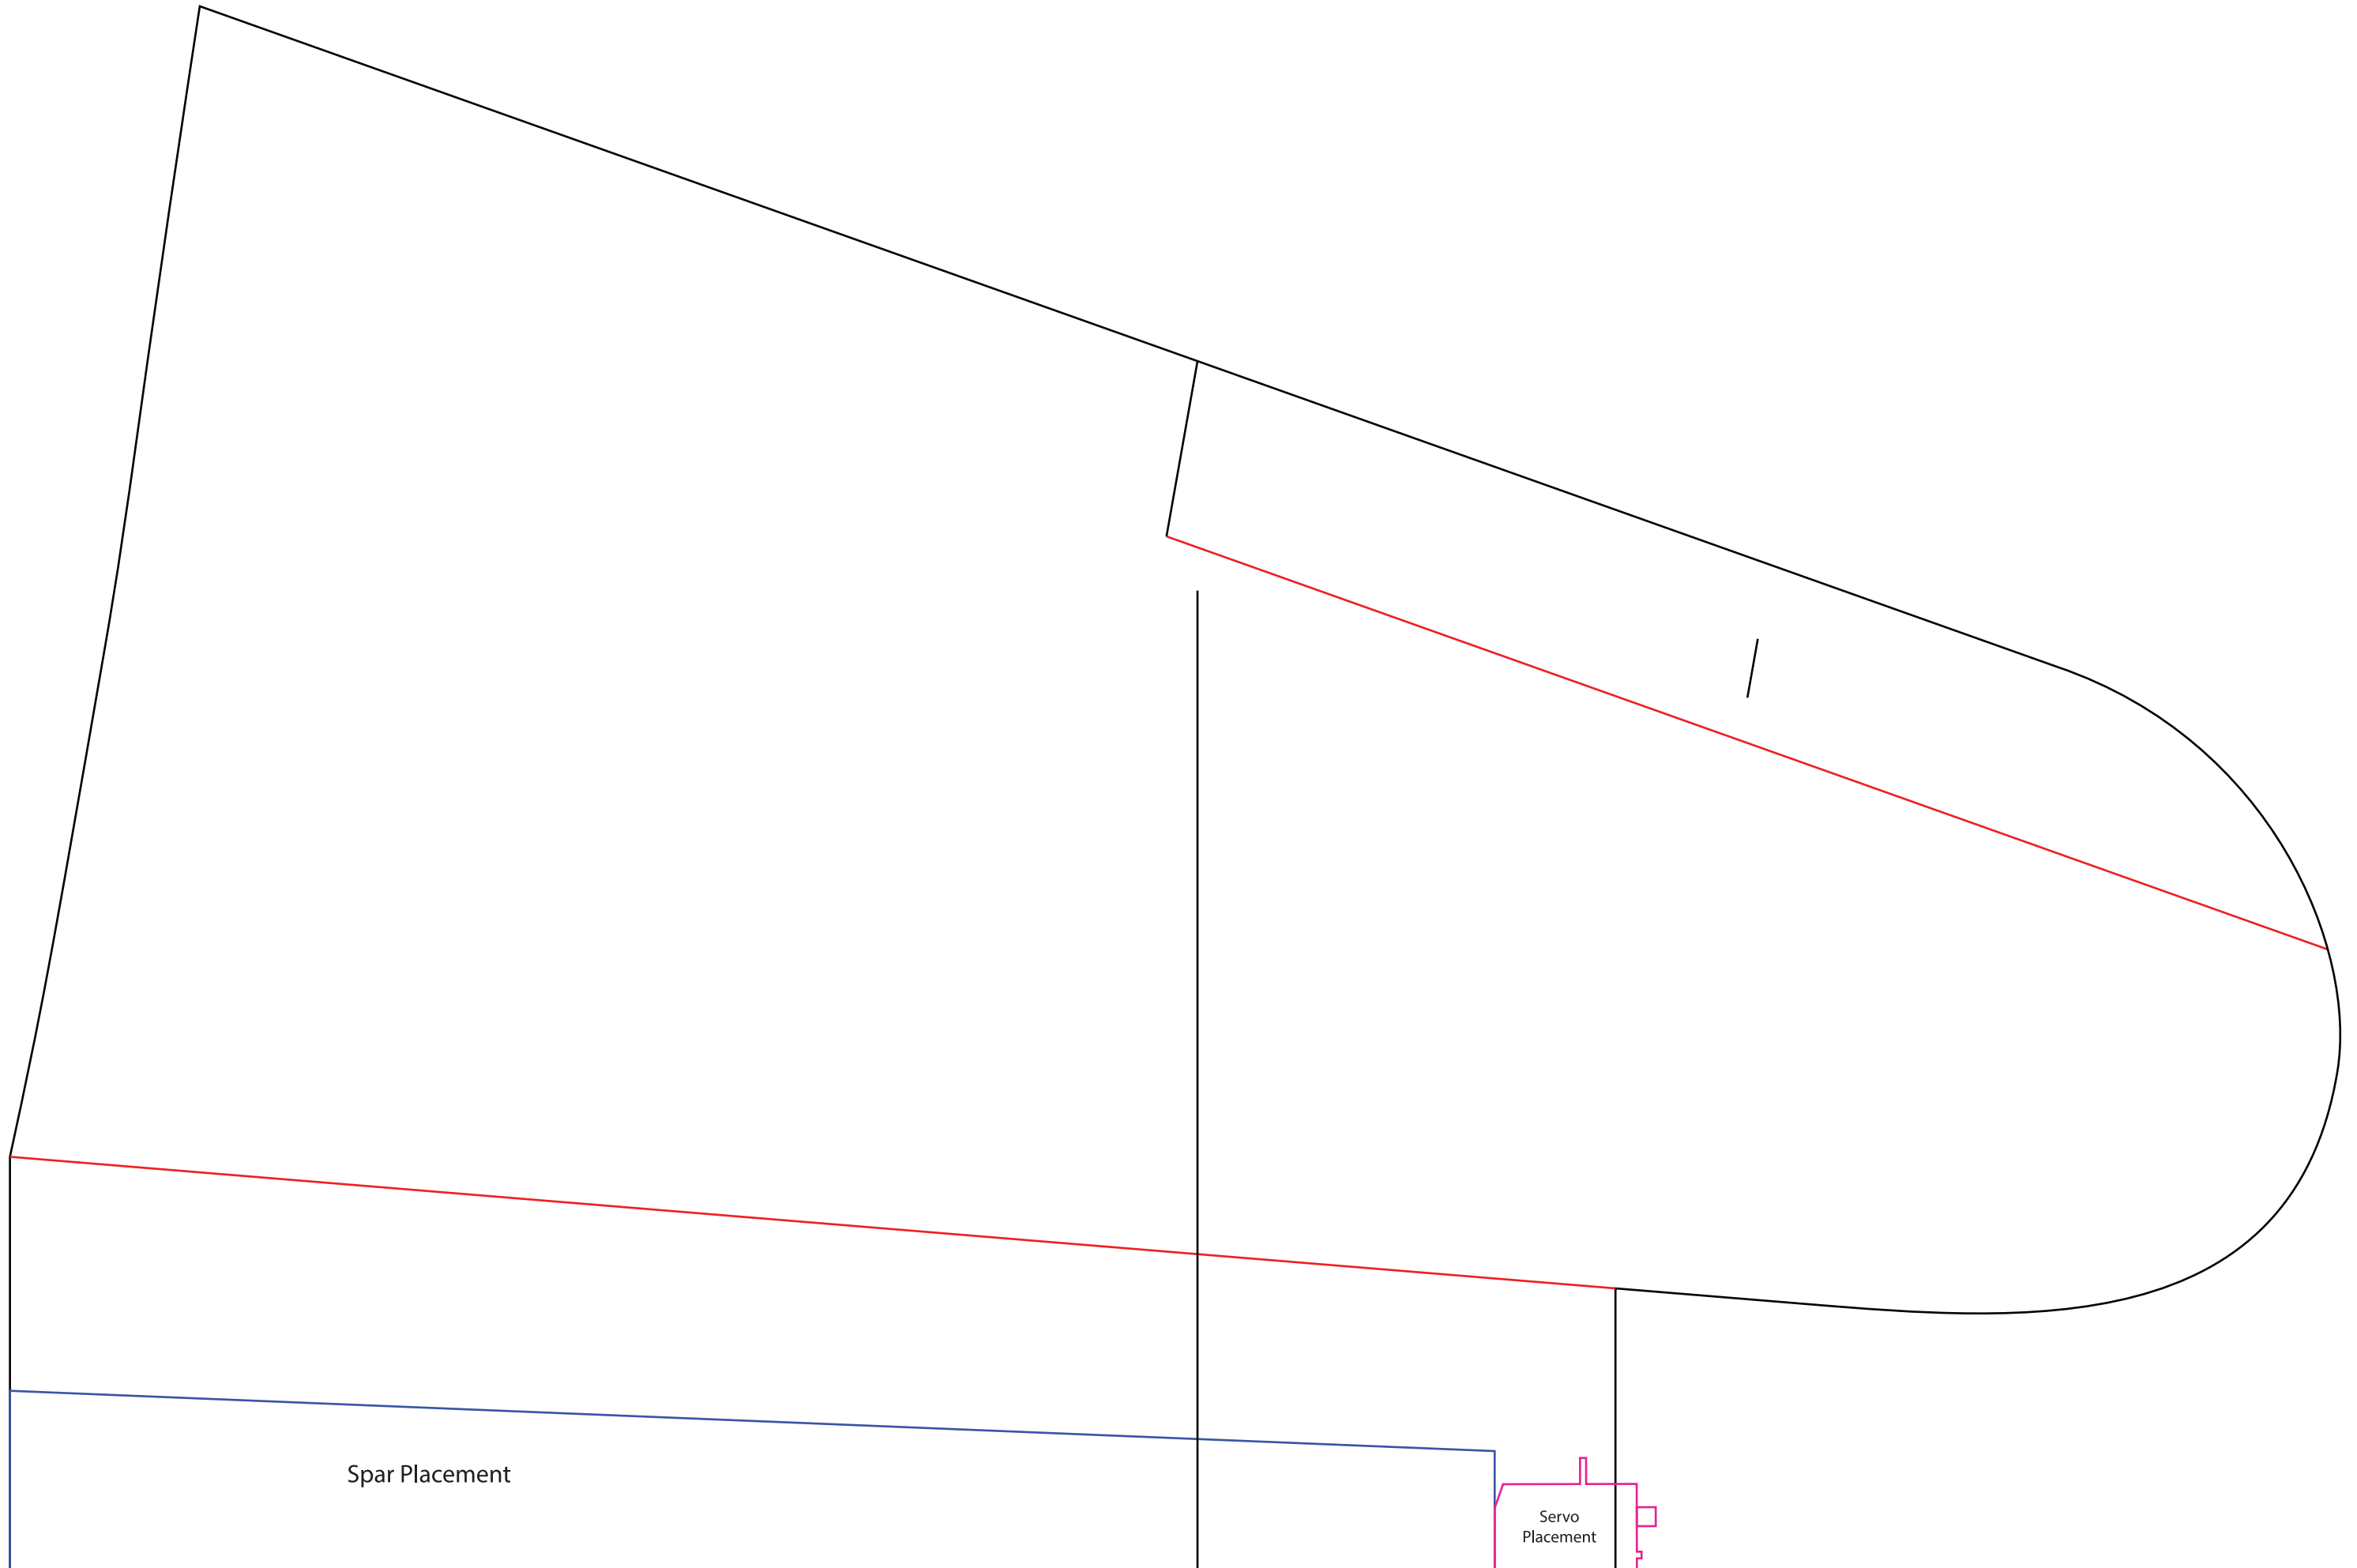

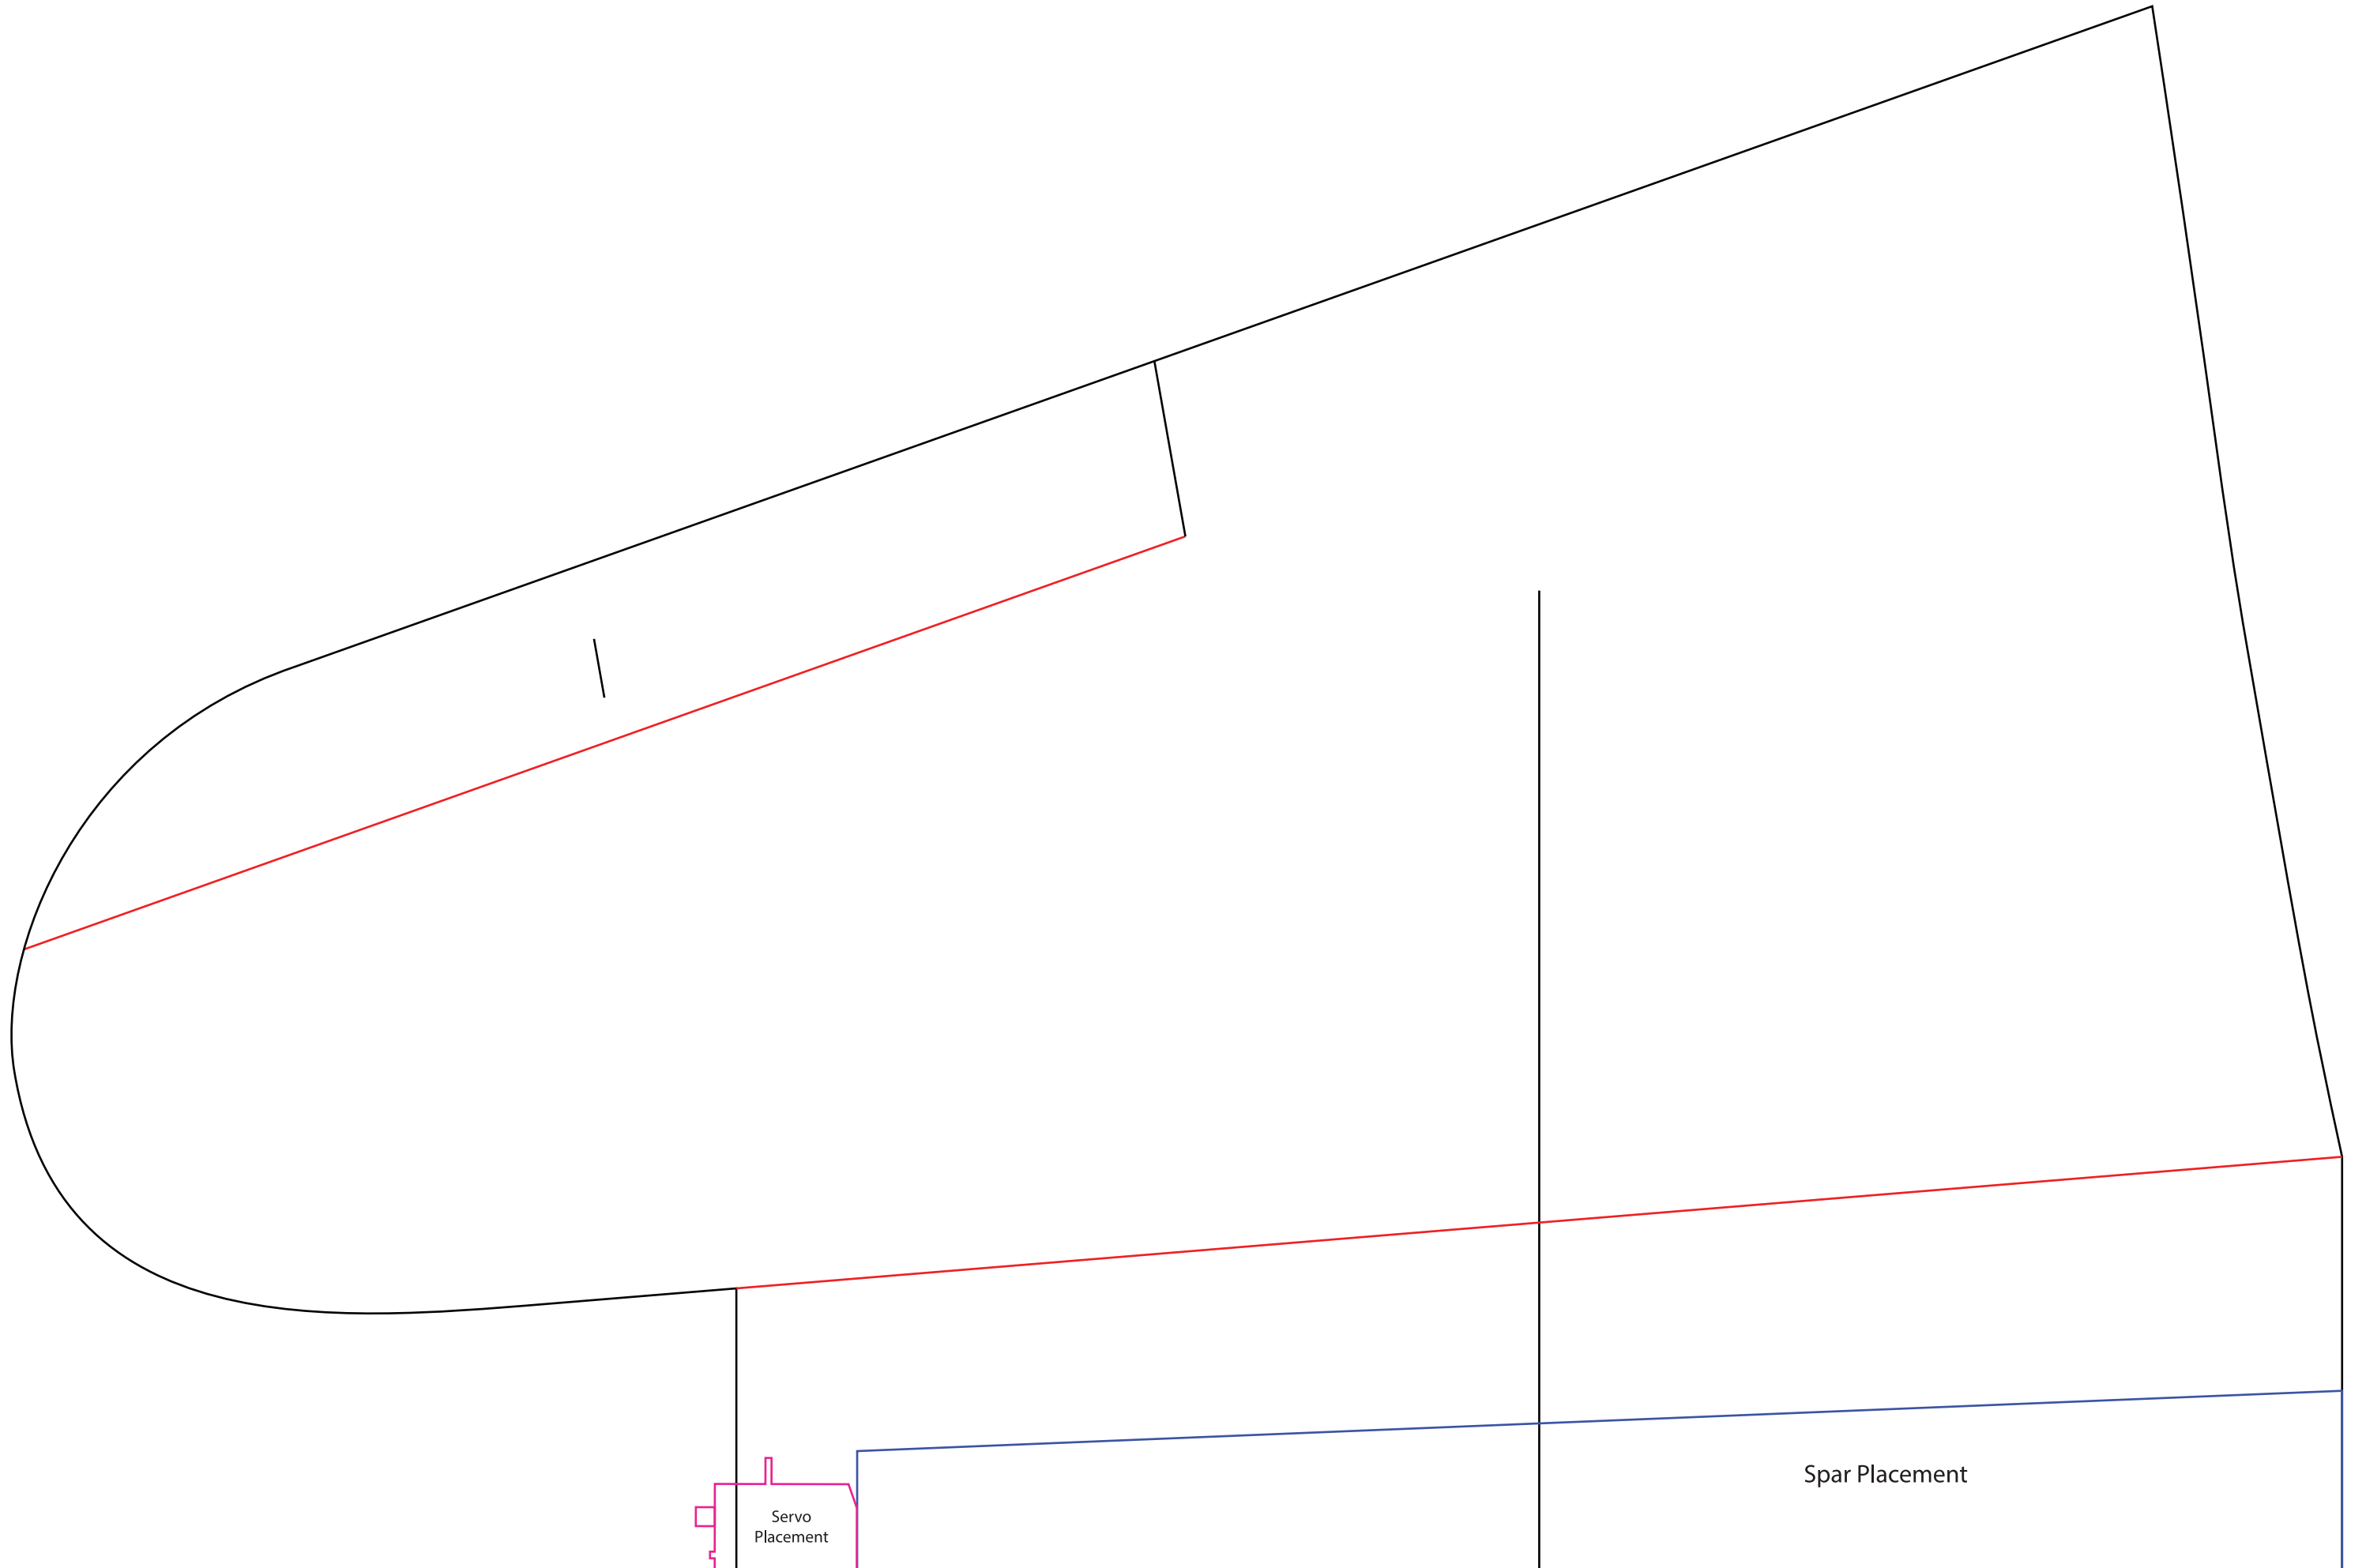


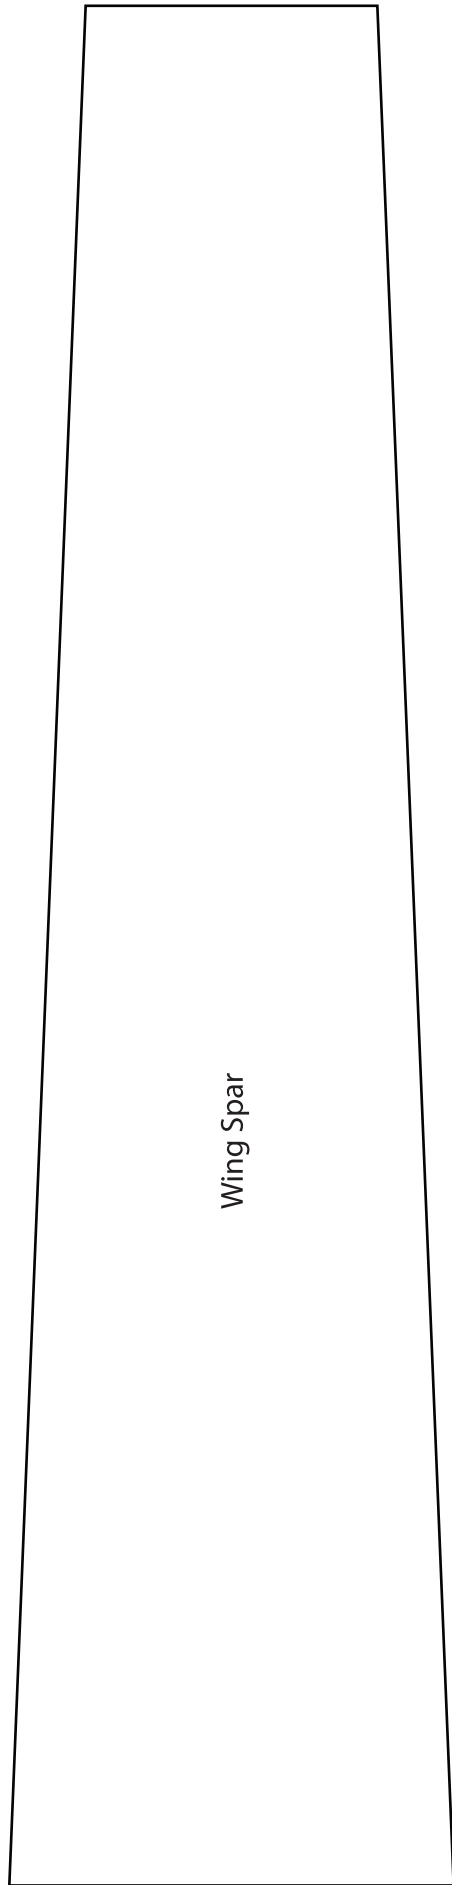

Wing Spar

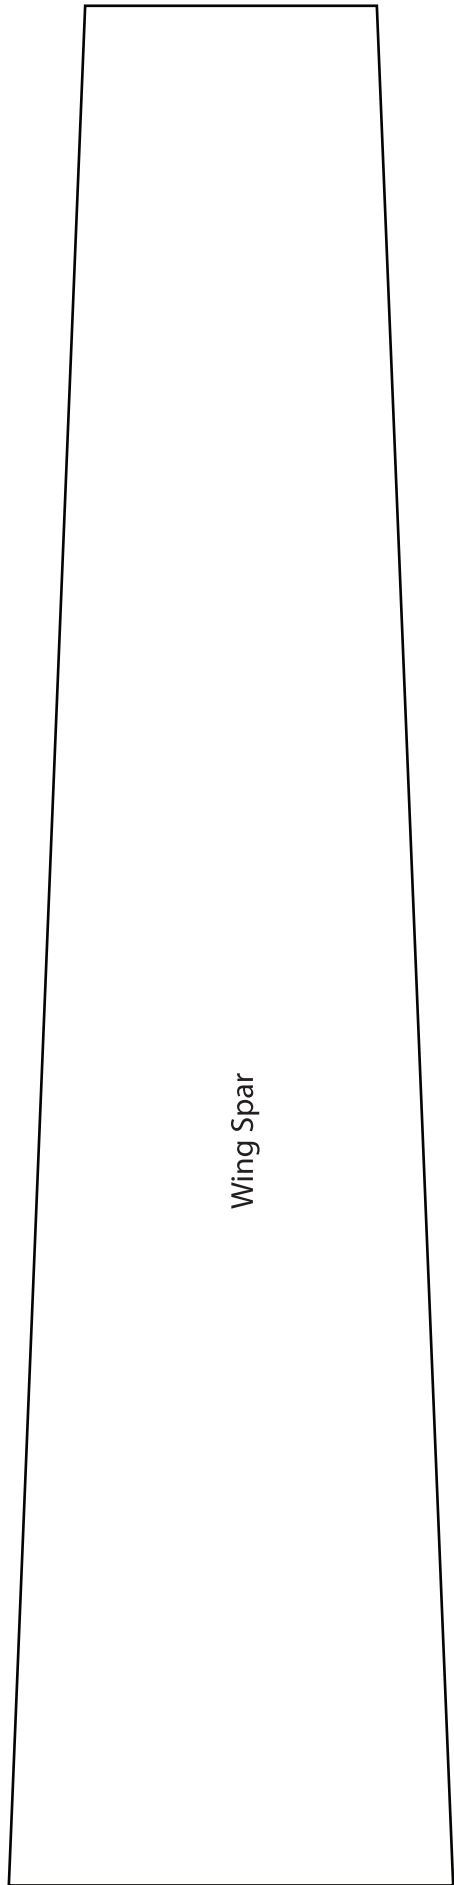


Wing Spar

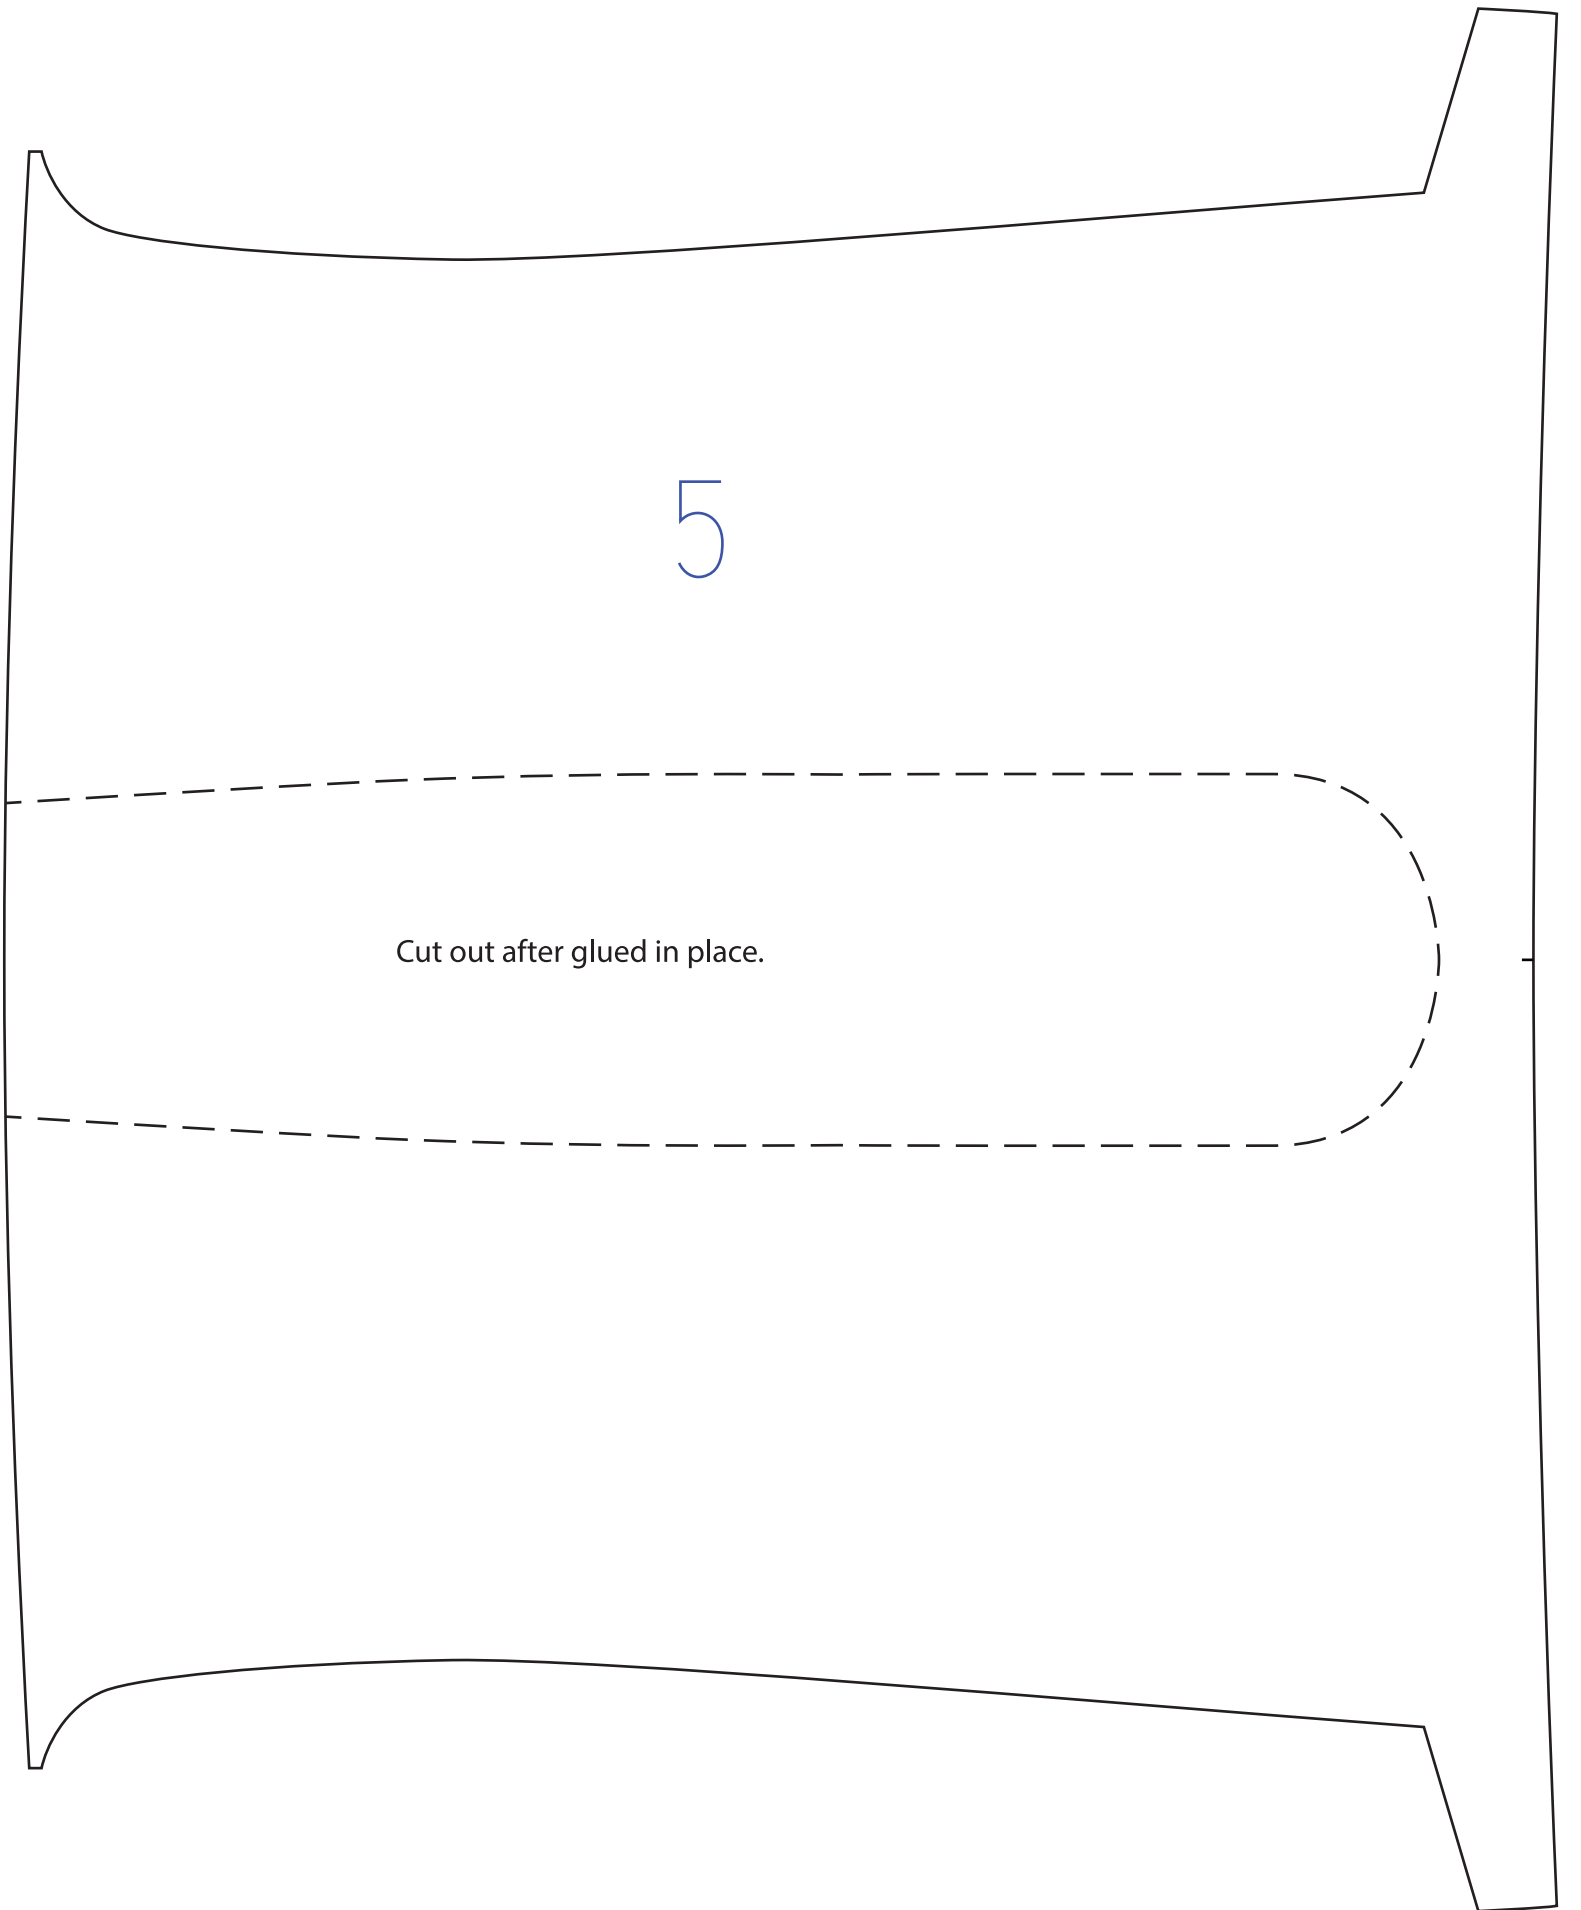


5


Cut out after glued in place.

6

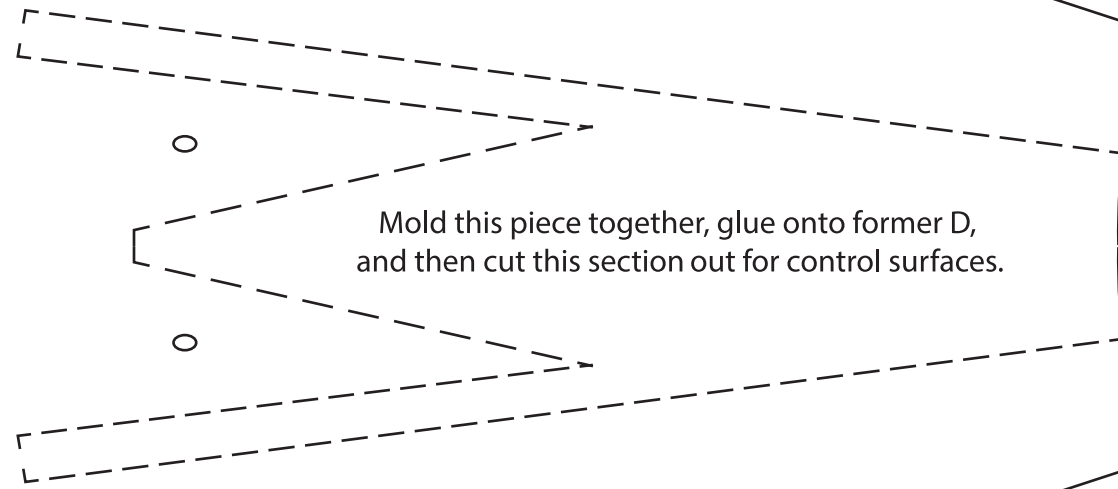

Copyright ©2020 13thSquadron. All Rights Reserved.
Commercial use of our plans are prohibited.

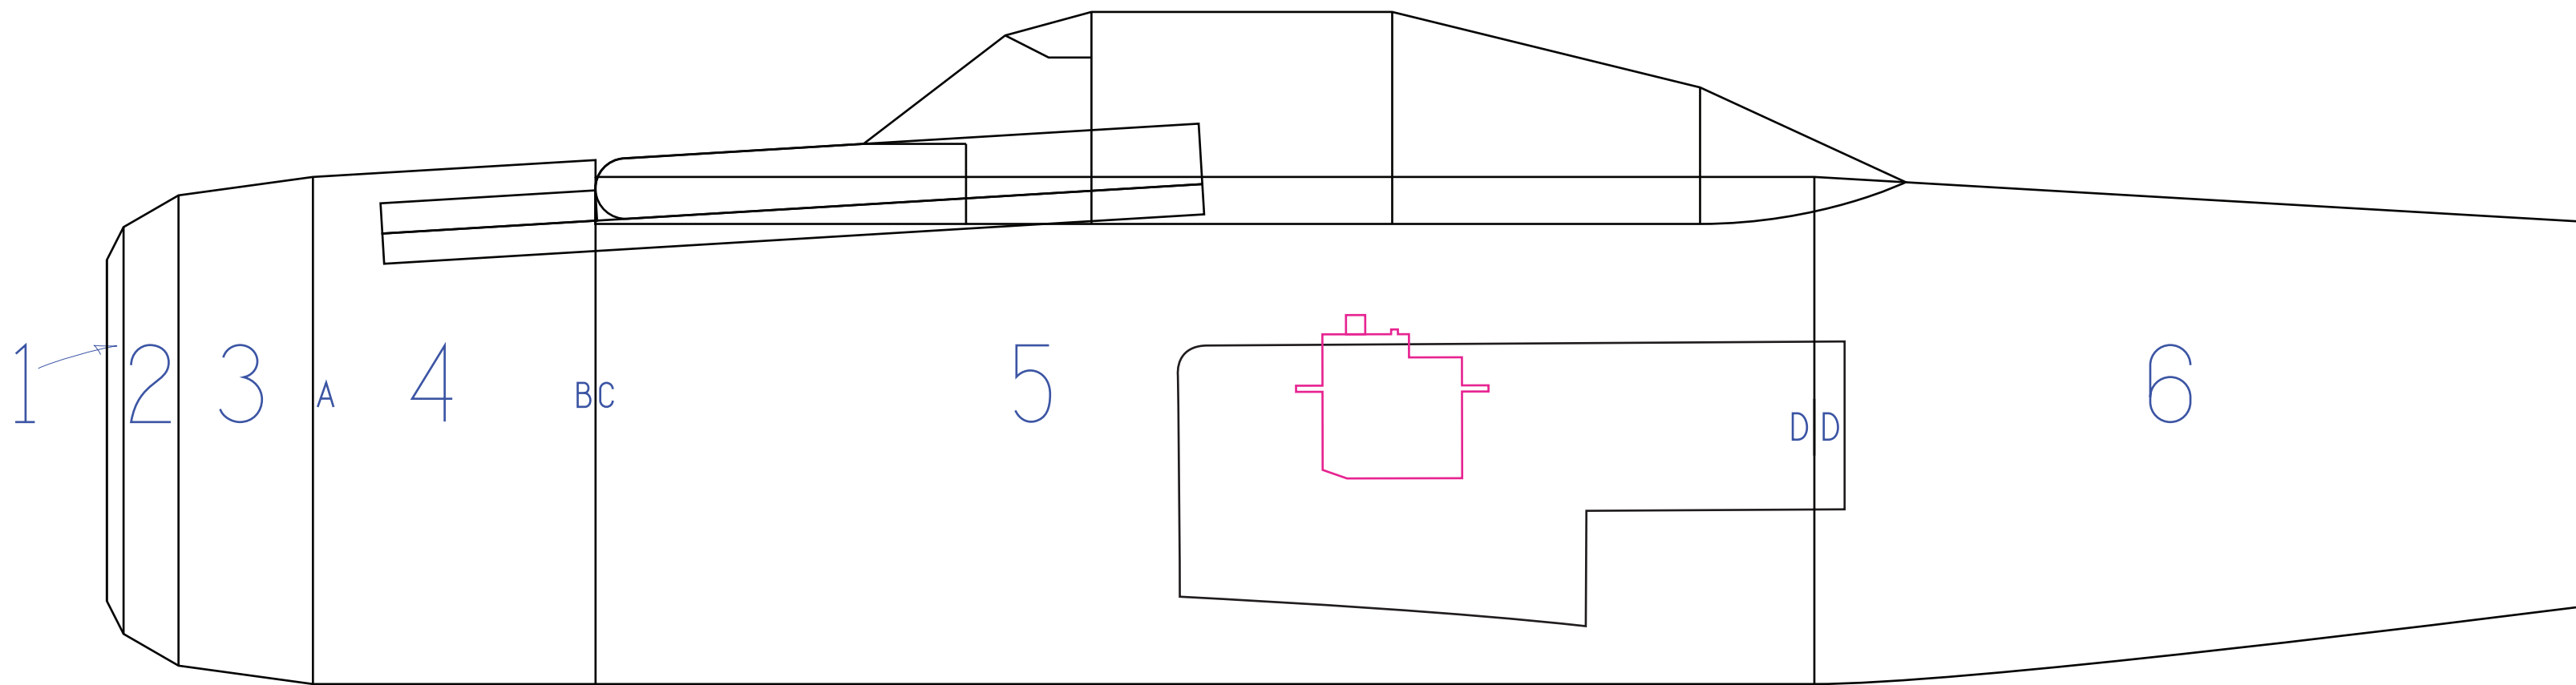

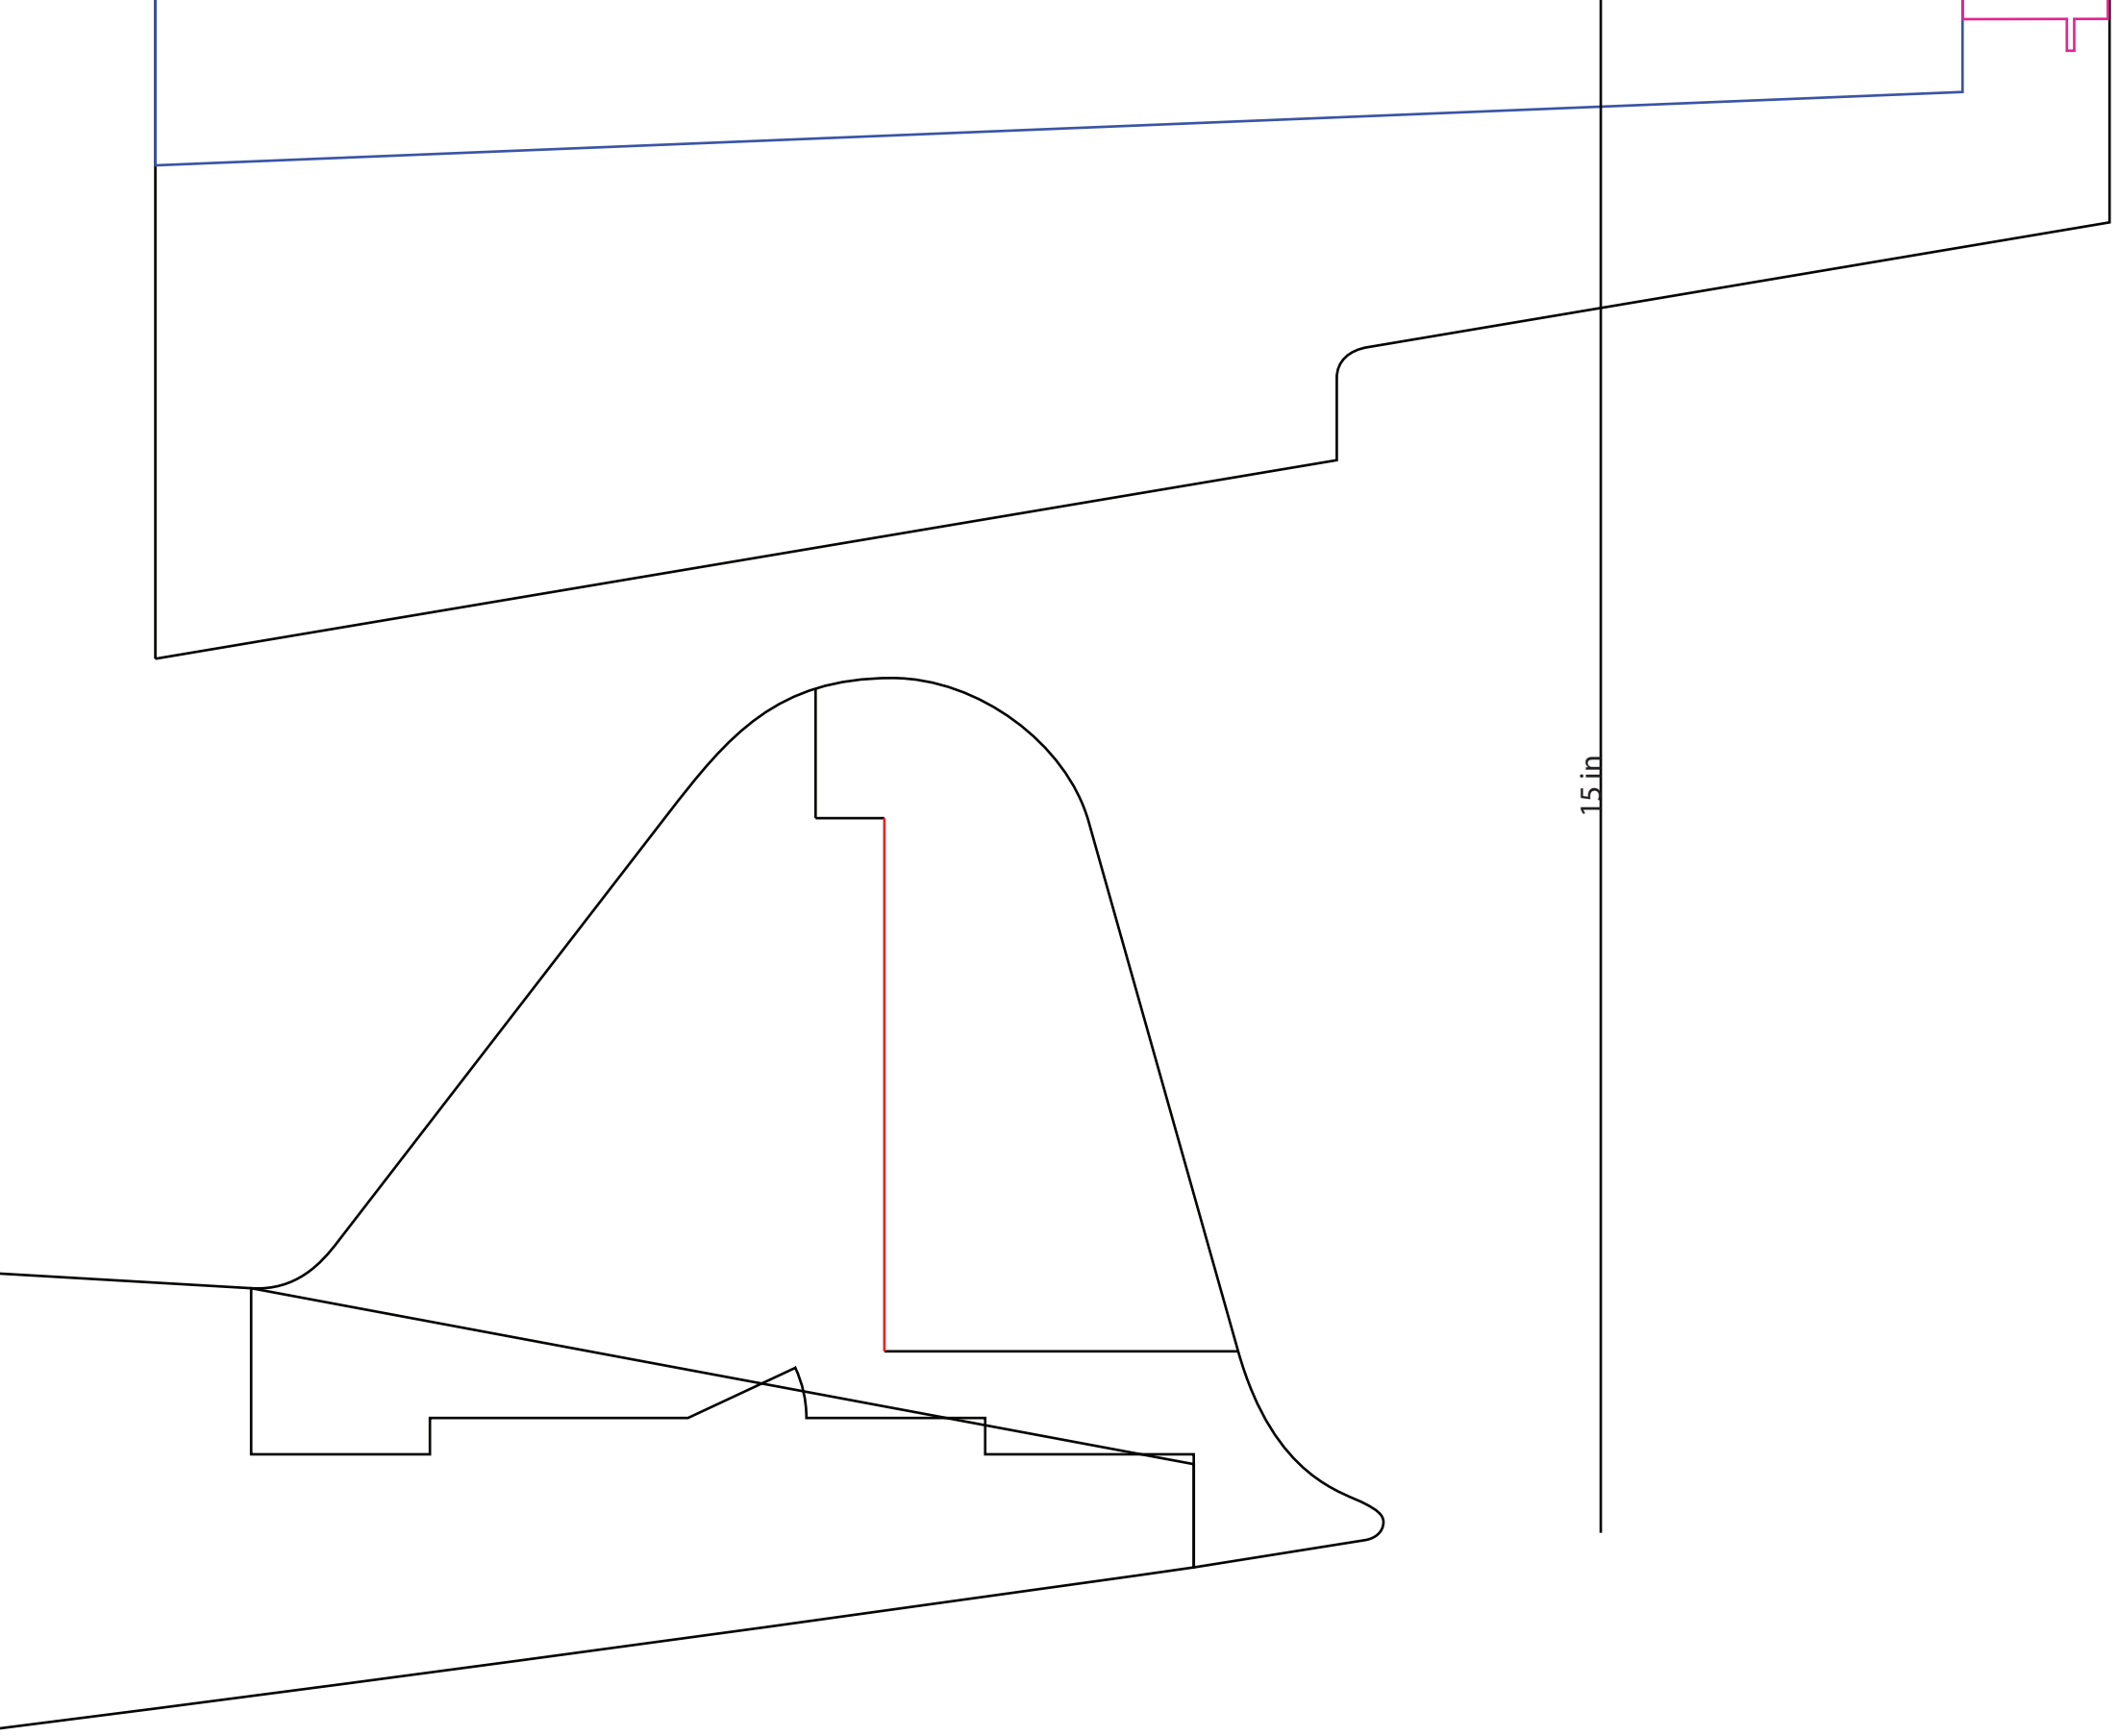

15 in

