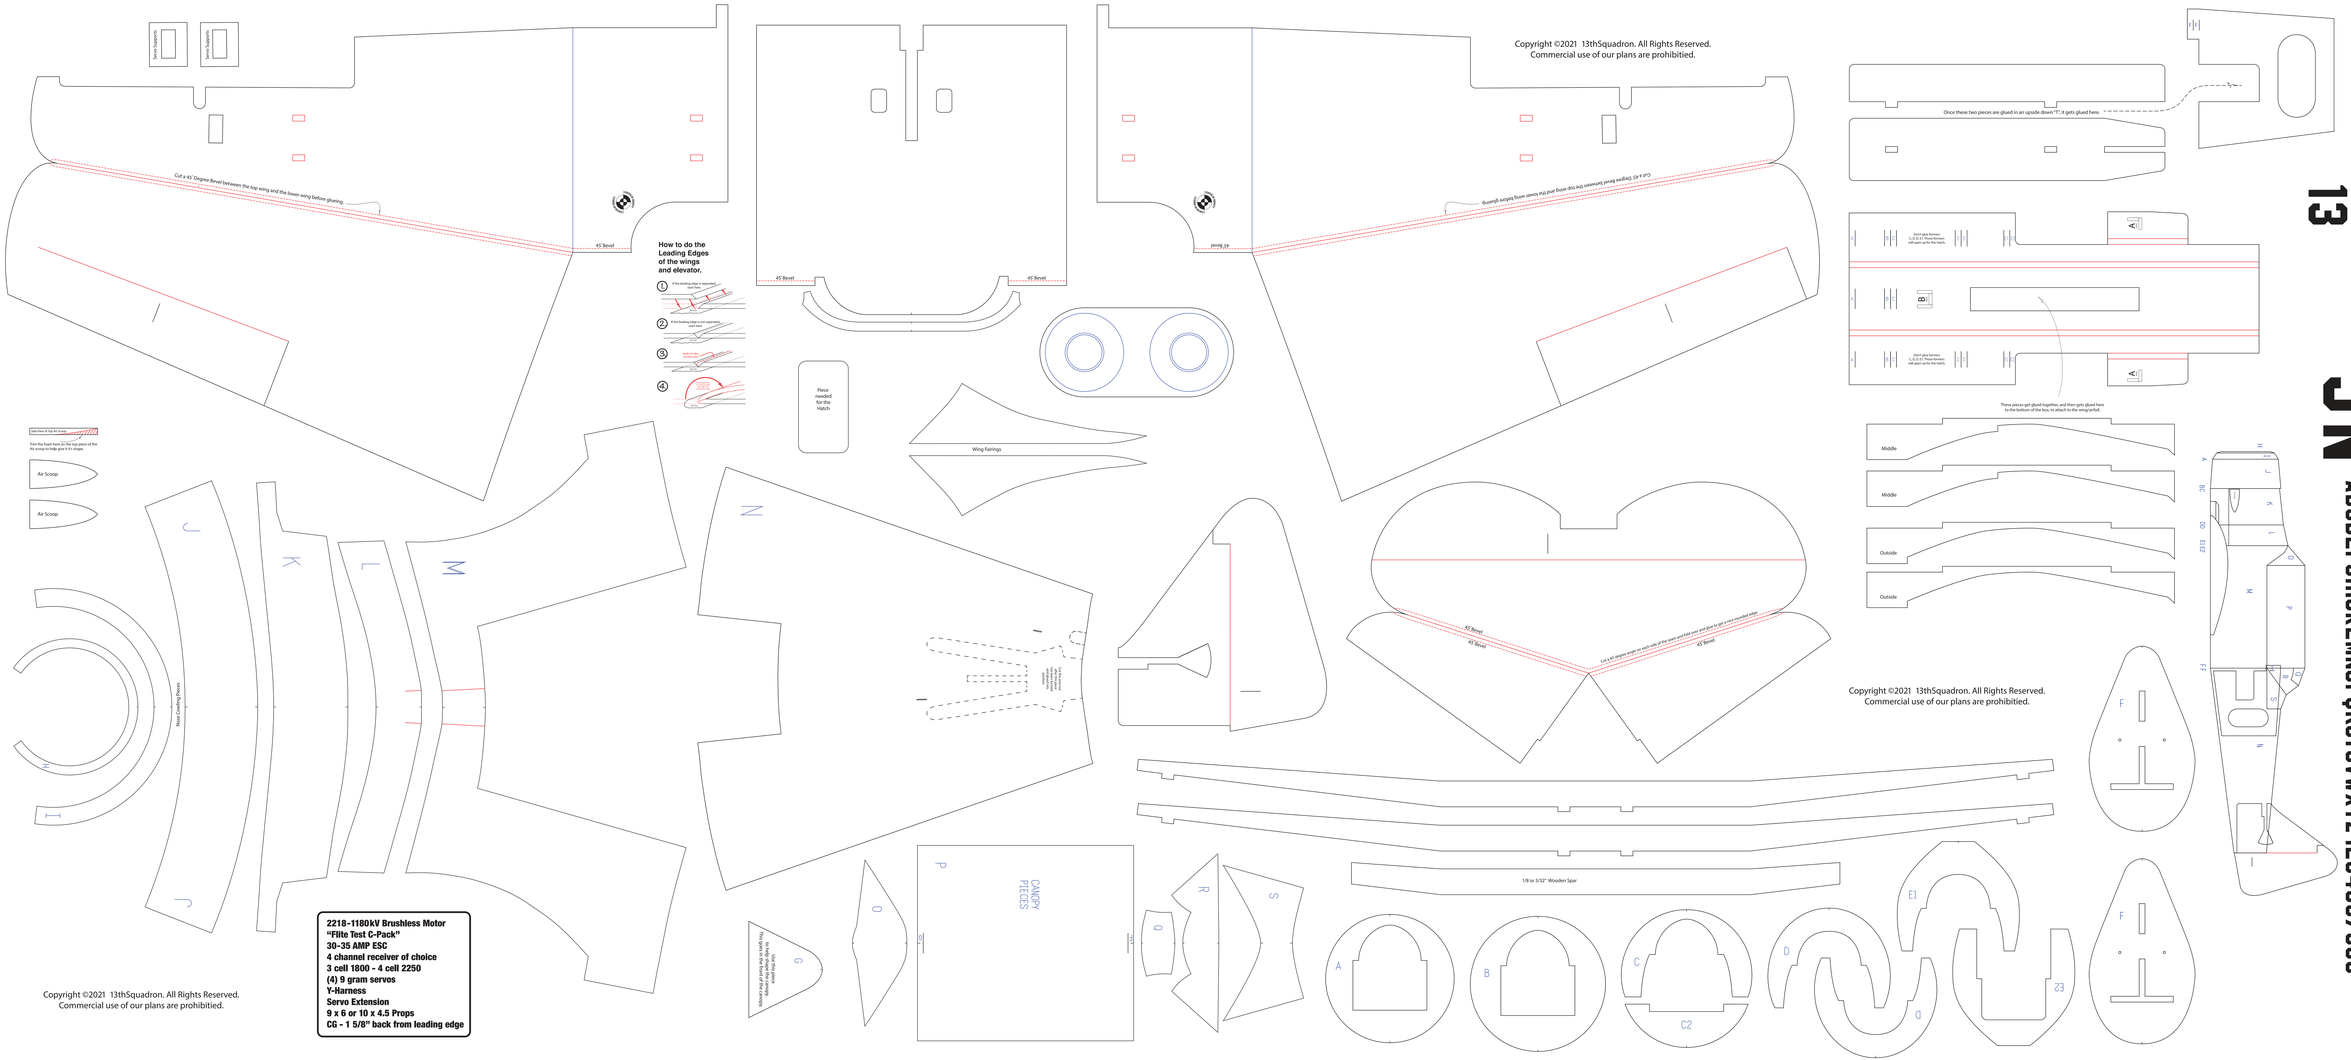
Servo Supports
Servo Supports
Cut a 45° Degree Bevel between the top wing and the lower wing before gluing.
45° Bevel
How to do the Leading Edges of the wings and elevator.
1 If the leading edge is separated, start here.
2 If the leading edge is not separated, start here.
3 Hold the two wing halves together.
4 Sand the edge to the shape shown.
45° Bevel
45° Bevel
Piece needed for the Hatch
Copyright ©2021 13thSquadron. All Rights Reserved.
Commercial use of our plans are prohibitied.
Cut a 45° Degree Bevel between the top wing and the lower wing before gluing.
45° Bevel
Once these two pieces are glued in an upside down "T" it gets glued here.
Start glue formers C,D,E,F These formers will seam up for the hatch.
Middle
Middle
Outside
Outside
These pieces get glued together, and then gets glued here to the bottom of the box, to attach to the wing panel.
Copyright ©2021 13thSquadron. All Rights Reserved.
Commercial use of our plans are prohibitied.
USAF
ARMY
JN
13
0123456789
ABCDEFGHJKLMNOPQRSTUVWXYZ 1234567890
Lettering and Insignias you can use to put on your plane.
Side View of Top Air Scoop
Trim the foam here (or the top piece of the Air scoop to help give it it's shape.
Air Scoop
Air Scoop
Wing Fairings
45° Bevel
45° Bevel
Cut a 45° degree angle on each side of the center tail boom and glue in get a more rounded edge.
45° Bevel
Note: Counting Frames
CANOPY PIECES
1/8 or 3/32" Wooden Spar
2218-1180kV Brushless Motor
"Flite Test C-Pack"
30-35 AMP ESC
4 channel receiver of choice
3 cell 1800 - 4 cell 2250
(4) 9 gram servos
Y-Harness
Servo Extension
9 x 6 or 10 x 4.5 Props
CG - 1 5/8" back from leading edge
Copyright ©2021 13thSquadron. All Rights Reserved.
Commercial use of our plans are prohibitied.